

DOC FILE COPY

AFFDL-TR-77-99 PART 3



AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL, PART 3 PROGRAMMING MANUAL

R.C. Morris \
Douglas Aircraft Company
McDonnell Douglas Corporation
3855 Lakewood Boulevard

Long Beach, California 90846

DECEMBER 1977

TECHNICAL REPORT AFFDL-TR-77-99

Final Report For Period July 1975-December 1977

D D C

DEC 21 1978

DECENTED

B

Approved for public release; distribution unlimited

AIR FORCE FLIGHT DYNAMICS LABORATORY
AIR FORCE WRIGHT AERONAUTICAL LABORATORIES
AIR FORCE SYSTEMS COMMAND
WRIGHT-PATTERSON AIR FORCE BASE, OHIO 45433

78 12 11 049

NOTICE

When Government drawings, specifications, or other data are used for any purpose other than in connection with a definitely related Government procurement operation, the United States Government thereby incurs no responsibility, nor any obligation whatsoever; and the fact that the Government may have formulated, furnished, or in any way supplied the said drawings, specifications, or other data, is not to be regarded by implication or otherwise as in any manner licensing the holder or any other person or corporation, or conveying any rights or permission to manufacture, use, or sell any patented invention that may in any way be related thereto.

This report has been reviewed by the Information Office (OI) and is releasable to the National Technical Information Service (NTIS). At NTIS, it will be available to the general public, including foreign nations.

This technical report has been reviewed and is approved for publication.

LT. LABRY G. MOOSMAN

Project Manager

Improved Windshield Protection ADPO

Vehicle Equipment Division

ROBERT E. WITTMAN

Program Manager

Improved Windshield Protection ADPO

Vehicle Equipment Division

FOR THE COMMANDER:

SOLOMON R. METRES

Acting Director

Vehicle Equipment Division

Copies of this report should not be returned unless return is required by security considerations, contractual obligations, or notice on a specific document.

SECURITY CLASSIFICATION OF THIS PAGE (When Dare Entered) READ INSTRUCTIONS
BEFORE COMPLETING FORM REPORT DOCUMENTATION PAGE RECIPIENT'S CATALOG NUMBER PART 3 FFDLFTR-77-99 AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL Jule 1975 - December PART 3% PROGRAMMING MANUAL MDC-17174 -. AUTHOR(e) C. Morris F33615-75-C-31Ø5 10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS. PERFORMING ORGANIZATION NAME AND ADDRESS 416 400 Douglas Aircraft Company Project: McDonnell Douglas Corporation Task: Long Beach, California 90846 Work Unit: nı Air Force Flight Dynamics Laboratories (AFFDL/FEW Air Force Wright Aeronautical laboratories Air Force Systems Command 12. REPORT DATE 506 Wright-Patterson Air Force Base, Ohio 45433 15. SECURITY CLASS. (of this report) 14. MONITORING AGENCY NAME & ADDRESS(II different trees Controlling Office) Unclassified 154 DECLASSIFICATION/ DOWNGRADING SCHEDULE DISTRIBUTION STATEMENT (of this Report) Approved for public release; distribution unlimited 17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, If different tree Report) 21 1978 IS. SUPPLEMENTARY NOTES 19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Linear Finite Element Aircraft Canopy Math Model Impact Computer Program Analysis Matrix Methods Laminate Applications Damping Modal Large Displacements Dynamic Bird 26. ABSTRACT (Continue on reverse side if necessary and identity by block number, This report describes the Bird Impact Math Model (IMPACT), a computer program designed especially for the purpose of calculating transient dynamic responses of aircraft windshield and canopy systems, composed of laminated transparencies and supporting structures, to bird impact. Part 3 describes the design, operation, and implementation of the computer program code. Each of the seven programs comprising IMPACT are described.

DD 1 JAN 73 1473

S/N 0102-014-6601

L±6 400

SECURITY CLASSIFICATION OF THIS PAGE (Pron Dete Entered)

LLUHITY CLASSIFICATION OF THIS PAGE(When Dete Entered)

19. KEY WORDS (Continued)

Multi-layer Nonlinear Plasticity Structural model Thermal Transient Transparency Windshield

20. ABSTRACT (Continued)

individually in terms of coding strategy, internal and external storage utilization, limitations, error detection, and interfaces between programs. Detailed descriptions of each subroutine are also included.

FOREWORD

This report is one of a series of reports that describe work performed by Douglas Aircraft Company, McDonnell Douglas Corporation, 3855 Lakewood Boulevard, Long Beach, California 90846, under the Windshield Technology Demonstrator Program. This work was sponsored by the U.S. Air Force Flight Dynamics Laboratory, Wright-Patterson Air Force Base, under Contract F33615-75-C-3105, Project 2202/0201.

This report is divided into three parts. Part 1 is entitled "Theory and Application", Part 2 is entitled "User's Manual", and Part 3 is entitled "Programming Manual." The principal investigators and authors were P. H. Denke for Part 1, G. R. Eide for Part 2 and R. C. Morris for Part 3. The significant contributions of the following individuals in the development of the computer code and preparation of Part 3 are gratefully acknowledged: J. E. Anderson, L. Chahinian, T. W. Gladhill, and P. R. Lindsey.

Mr. D. C. Chapin, Capt., USAF Ret., was the Air Force Project Manager during the conceptual phase of the work reported herein. Lieutenant L. G. Moosman (AFFDL/FEW) succeeded Mr. Chapin during the conduct of the program.

Mr. J. H. Lawrence, Jr., was the Program Director for the Douglas Aircraft Company.

This report was submitted to the Air Force on 7 December 1977, and covers the work performed during the period July 1975 through December 1977.

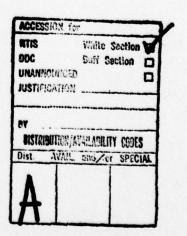


TABLE OF CONTENTS

I	INTRODUCTION															1
	GENERAL															1
	SYSTEM COMPONENTS															1
	CODING CHARACTERISTICS															2
II	SYSTEM OVERVIEW															5
	PROGRAM FUNCTIONS															-5
	DATA FILES															6
	File Formats															8
	File Contents															10
	USE OF UPDATE															10
III	OPERATIONAL CONSIDERATIONS.															17
	GENERAL															17
	EXTENDING BLANK COMMON															18
	OVERRIDING FILE NAMES															19
	SYSTEM CONTROL CARDS .															19
	MB2															
IV	LAMINATE GENERATOR															29
	OVERVIEW															29
	FILE UTILIZATION															30
	LIMITATIONS	•	•	•	•		•		•	•	•	٠	•	•		31
٧	INITIAL GENERATOR															33
	OVERVIEW															33
	Special Input for	Che	eck		Out	L										33
	Organization															34
	Operation															36
	Reordering of Degr	ees	5 (of	F	re	ede	om								38

PAGE

		PAGE
•	OVERLAY	42
	FILE UTILIZATION	43
	CORE UTILIZATION	49
	LIMITATIONS	52
	1 MOTOGORY 1	
VI	LOADS GENERATOR	55
	OVERVIEW	55
	FILE UTILIZATION	56
	LIMITATIONS	57
VII	LINEAR INCREMENTAL SOLUTION	59
	OVERVIEW	59
	Current Approach	59
	Organization	60
	Operation	62
	FILE UTILIZATION	68
	CORE UTILIZATION	71
	LIMITATIONS	72
	COSAC BORNAG MOTEVO	
VIII	NONLINEAR INCREMENTAL SOLUTION	75
	OVERVIEW	75
	Development History	75
	Organization	77
	Operation	79
	FILE UTILIZATION	86
	CORE UTILIZATION	90
	LIMITATIONS	93
	FUTURE DEVELOPMENT	94
	Applicability of Original Design Concepts	94
	Design and Functional Improvement	101
IX	POSTPROCESSOR	105
	OVERVIEW	105
	FILE UTILIZATION	106
	CORE UTILIZATION	107
	LIMITATIONS	

		PAGE
X PROJECTE	ED IMPROVEMENTS	111
	TICIENCY	
EXT	TENDED CAPABILITY	112
APPENDIX A	LAMINATE GENERATOR ROUTINES	113
В	INITIAL GENERATOR ROUTINES AND LABELED	
	COMMON BLOCKS	139
C	LOADS GENERATOR ROUTINES	291
0	LINEAR INCREMENTAL ROUTINES AND LABELED .	
	COMMON BLOCKS	311
E	NON-LINEAR INCREMENTAL ROUTINES AND	
	LABELED COMMON BLOCKS	375
F	POSTPROCESSOR ROUTINES AND LABELED	
	COMMON BLOCKS	453
REFERENCES .	tial Cameratur Elonent Processing Fries	493

LIST OF ILLUSTRATIONS

				PAGE
2.1	Data Flow Through a Complete Solution		94	7
2.2	Function of Update in Preprocessing			14
5.1	Initial Generator Organization			35
5.2	Initial Generator Joint, Constraint, and Material Processing Files			44
5.3	Initial Generator Element Processing Files			45
5.4	Initial Generator Output Processing Files			46
7.1	Linear Incremental Solution Organization			61
8.1	Nonlinear Incremental Solution Organization			78

LIST OF TABLES

		PAGE
2.1	CONTENT OF MASTER MATRIX DATA FILES	11
3.1	PROGRAM AND FILE DECLARATIONS	20
3.2	SYSTEM CONTROL CARDS FOR A COMPLETE SOLUTION	21
3.3	INPUT DATA FOR A COMPLETE SOLUTION	22
5.1	CONTENTS OF MATRIX ECT	39
5.2	CONTENTS OF MATRIX EVT	39
5.3	INITIAL GENERATOR LABELED COMMON REFERENCES	50
7.1	LINEAR INCREMENTAL SOLUTION PROCESSING FILES	69
7.2	LINEAR INCREMENTAL SOLUTION LABELED COMMON REFERENCES	73
8.1	NONLINEAR INCREMENTAL SOLUTION INITIALIZATION PROCESSING	
	FILES	88
8.2	NONLINEAR INCREMENTAL SOLUTION PROCESSING FILES	89
8.3	NONLINEAR INCREMENTAL SOLUTION LABELED COMMON REFERENCES	92
8.4	ROUTINES MODIFIED DURING NONLINEAR INCREMENTAL SOLUTION DEVELOPMENT	95
8.5	NONLINEAR INCREMENTAL S LUTION ORIGINAL DESIGN FILE ALLOCATION	99
8.6	NONLINEAR INCREMENTAL SOLUTION ORIGINAL DESIGN PROCESSING FILES	100
Α	INDEX TO LAMINATE GENERATOR ROUTINES	115
В	INDEX TO INITIAL GENERATOR ROUTINES AND LABELED COMMON BLOCKS	141
С	INDEX TO LOADS GENERATOR ROUTINES	293
D	INDEX TO LINEAR INCREMENTAL ROUTINES AND LABELED COMMON	
_		313
Ε	INDEX TO NONLINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS	377
F	INDEX TO POSTPROCESSOR ROUTINES AND LABELED COMMON BLOCKS .	455

SECTION I

GENERAL

The Bird Impact Math Model Computer Program (IMPACT) is a system of computer programs for calculating the transient dynamic response of a windshield system subjected to impact loading. The programs were designed and coded to provide a reliable, efficient, and convenient tool for use in the windshield design process. Effective application of IMPACT should reduce the time and cost required for both design and testing of these complex structural systems.

This document provides detailed descriptions of the computer code intended for use by the engineer/programmer responsible for implementation and maintenance of the IMPACT system. The theoretical development and the resulting formulations of the analytical approach to the solution process are described in Part 1 of this report. Part 2 of this report is intended for the engineering user and describes modeling techniques, input data requirements, and application of the programs to windshield design problems.

SYSTEM COMPONENTS

The IMPACT system is comprised of seven stand alone computer programs designed for batch mode operation. In addition, the design of the system provides for the optional use of the CDC utility UPDATE, an editing and maintenance program for files of card images.

The seven stand alone computer programs which comprise the IMPACT system are

- 1) Laminate Generator
- 2) Initial Generator
- 3) Loads Generator

- 4) FORMAT Phase II
- 5) Linear Incremental Solution
- 6) Nonlinear Incremental Solution
- Postprocessor

The interface between these programs consists of card image or binary matrix data stored on sequential external files. The design of the system provides for optional use of some of these programs when applying the system to a given design problem.

Six of the seven computer programs in the IMPACT system are new and were written specifically for the Windshield Technology Demonstrator Program. The seventh program is a modified version of FORMAT Phase II, the matrix abstraction phase of the FORMAT system. These modifications, made in conjunction with this effort, are documented separately from this report as supplements to existing FORMAT documentation (References 6 and 10).

Some code for the solution of eigen problems and theory for the sorting of tabular data were obtained from outside sources. The eigen equation solver, used in the incremental solution of the equations of motion, is the RGEIG module obtained from the EISPACK library of eigen problem solvers (Reference 16). The sort routines (QKSØRT, et al.) used in the initial matrix generation step, are original code based on sorting theory developed by Knuth (Reference 17).

CODING CHARACTERISTICS

All coding in the IMPACT system was done in the FORTRAN IV programming language. The code is oriented to the CDC computer due to the following characteristics.

- No double precision data or arithmetic operations are used in lieu of the accuracy of the 60 bit word length.
- Alphanumeric data is stored at 10 characters/word.

- 3) Use of the CDC FORTRAN utilities ENCODE/DECODE is employed.
- 4) The character "*" is used as delimiters for alphanumeric character strings in some FORMAT statements.
- The system input file is repositioned to re-read data in the input stream.
- 6) The system design is enhanced by the use of the CDC utility, UPDATE.

All external files used by the code are sequential, no random access techniques are employed.

The development of the IMPACT system took place on the CDC CYBER-74 computer at the ASD Computer Center, Wright-Patterson AFB, Dayton, Ohio. The operating system in place during this time was NOS/BE L414J CYBR CMR3. All compilation was performed by the FTN compiler at optimization level 1. The version of the compiler was FTN 4.5+414.

SECTION II SYSTEM OVERVIEW

The user initiates an analysis by preparing tabular data which describes the idealized model of the windshield system under investigation. The model may include support structure for the transparency which may itself consist of a number of laminates. The tabular data prepared by the user, consisting of geometry, constraint, material property, and element definition data, is described in detail in Part 2.

PROGRAM FUNCTIONS

() .

The Laminate Generator provides a preprocessing function with respect to multi-layered transparencies. Optionally, the user may prepare the model definition data consistent with the requirements of the Laminate Generator. The program will then augment the input model definition data with the joint coordinates and element definitions of interior joints and elements within a laminate. In addition, surface normal vectors representing a unit pressure distribution over the exterior surface of the transparency are generated. When applicable, this program reduces the amount of input data prepared by the user and provides vector data for use in assembling pressure loading conditions in subsequent analysis steps.

The Initial Generator serves the prime function of transforming the complete model definition data in tabular form into matrix data consistent with the requirements of the subsequent solution process. Using the model definition data, the unassembled element stiffness, damping, and mass matrices are generated as are other matrices of geometric transformations, thermal effects, etc. The data generated here is independent of mechanical loading on the structure and satisfies the requirements of either a linear and nonlinear analysis whichever might follow.

The Loads Generator provides the means of computing discrete joint

loads on the idealized model as a function of time and bird length, mass, velocity, and impact direction. Optionally, the user may prepare the model definition data to include the description of the impact loading consistent with the requirements of the Loads Generator. The program will then generate a matrix of incremental joint loads at the times specified in either card image or binary form.

The FORMAT Phase II program is used to compute the structural mass and stiffness matrices, decompose the structural stiffness matrix, extract vibration modes, perform the modal transformation, and produce properly ordered binary output data files for input to the incremental solution step. Input to this processing step are the binary file of matrices from the Initial Generator and, optionally, the loads matrix from the Loads Generator in either card image form or as a binary matrix in a separate file. The required tasks in this phase of the solution process may be accomplished in one or more executions of the FORMAT program.

The Linear and Nonlinear Incremental Solution programs solve the equations of motion incrementally for the modal response, structural displacements, and element forces, stresses, and strains. The results from each increment are output to a binary file for subsequent processing. The format and content of the output file is identical for either a linear or non-linear solution.

The Postprocessor accepts the output file from either a linear or nonlinear solution and selectively prints the results. Selection may be specified for time increments, joints, modes, and elements in any logical combination.

DATA FILES

Figure 2.1 shows the flow of data through a complete solution. Each data file is identified for subsequent reference in this discussion,

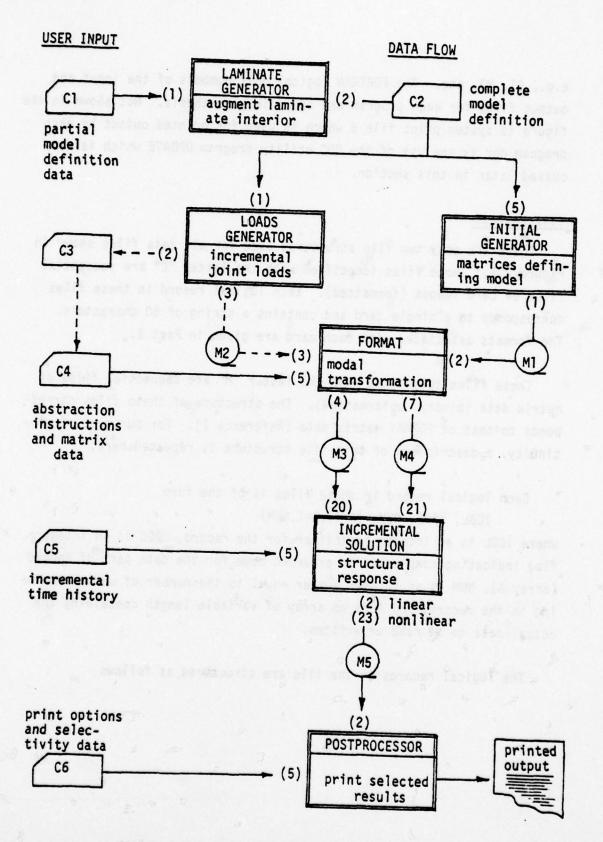


Figure 2.1. Data Flow Through Complete Solution

e.g., Cl, M3, etc. The FORTRAN logical unit numbers of the input and output files for each program are shown in parenthesis. Not shown in the figure is system print file 6 which is used for printed output by each program nor is the use of the CDC utility program UPDATE which is discussed later in this section.

File Formats

There are only two file structures used for all data files shown in Figure 2.1. Those files identified with the letter "C" are sequential files of card images (formatted). Each logical record in these files corresponds to a single card and contains a string of 80 characters. The formats associated with each card are given in Part 2.

Those files identified with the letter "M" are sequential files of matrix data (binary, unformatted). The structure of these files corresponds to that of FORMAT matrix data (Reference 1). For purposes of continuity, a description of this file structure is repeated here.

Each logical record in these files is of the form IC β L, K β DE, NUM, (A(I),I=1,NUM)

where ICOL is an integer identifier for the record, KODE is an integer flag indicating compressed or expanded mode for the data part of record (array A), NUM is an integer number equal to the number of words remaining in the record, and A is an array of variable length containing the actual data to be read or written.

The logical records in the file are structured as follows

Tape header
Matrix A header
Column 1 of matrix A
Column 2 of matrix A

:

Last column of matrix A
Matrix A trailer
Matrix B header
Column 1 of matrix B
Column 2 of matrix B

:

Last column of matrix B Matrix B trailer

:

Tape trailer

The contents of the header and trailer records are as follows

	ICOL	KØDE	NUM	Data
Tape header	-10	0	7	(TNAME(I), I=1,6),TMØD
Tape trailer	-20	0	1	O TABLE OF THE STATE OF THE STA
Matrix header	- 1	0	9	(MNAME(I), I=1,6), MMØD, IMAX, JMAX
Matrix trailer	- 2	0	1	o do do to the shelled

where TNAME and MNAME are six character tape and matrix names stored one character per word with blank word fill in trailing words as necessary, TMØD and MMØD are integer numbers used as modifiers of the tape and matrix names for identification, and IMAX and JMAX are the row and column dimensions of the matrix.

In matrix column data, ICOL is a positive integer equal to the column number. If a column of a matrix has more than 50% non-zero elements, the

column is written in expanded form (KØDE=0) and NUM is equal to IMAX. If a column has less than 50% non-zero elements, the column is written in compressed form (KØDE=1). Compression is accomplished by forming an array of the non-zero values and their corresponding row locations in the column as the data part of the record. For example, if the 12th column of a matrix with a row dimension of 100 had only 3 non-zero elements, it would be compressed and appear as a logical record of the form

ICOL	KØDE	NUM	Data
12	1	6	V1, L1, V2, L2, V3, L3

where ICØL = 12 is the column number, KØDE = 1 indicates a data record in compressed form, NUM = 6 is the number of words remaining in the record (three pairs of value and location), the element values are V_1 , V_2 , V_3 , and the row locations of these elements are L_1 , L_2 , and L_3 . Note that L_1 , L_2 , L_3 must be in ascending order.

If a column of a matrix is completely null, no record for that column will be present in the file.

File Contents

The files shown in Figure 2.1 are the master files used by the IMPACT system to pass data between each of the stand alone programs. The content of each of the card image files is given in detail in Part 2. The content of each of the matrix data files is given in Table 2.1. The FORMAT tape and matrix names shown in parentheses are specified by user input and, consequently, may vary while all other names are fixed since they are imbedded in the program code.

USE OF UPDATE

The design of the IMPACT system provides for the optional use of the CDC utility UPDATE during the preprocessing phase. This phase includes the execution of the Laminate Generator, Initial Generator, and Loads Generator. Figure 2.2 shows the intended use of UPDATE in an application

TABLE 2.1. CONTENT OF MASTER MATRIX DATA FILES

FILE	FORMAT N AND MODI	FIERS	DESCRIPTION		
	TAPE	MATRIX			
		UZERØ,1	U _o , original joint coordinates		
	Tabon 50	MPT,1	MPT, material property data		
	0.00	ECT,1	ECT, element constants		
		PRUPT,1	P _{RUPT} , reordering transform for degrees of freedom		
		PRUF,1	P _{RUF} , reordering transform for elements		
		KEL,1	k, lumped element stiffness		
	744	MEL,1	m, lumped element mass		
MI	MTAPE,1	KBEL,1	k, unlumped element stiffness		
		CBEL,1	c, unlumped element damping		
		FFBAR,1	F _F , element force transform		
		SIGFB,1	σ̄F, element stress transform		
		EPSIG,1	ϵ_{σ} , element strain transform		
		DEBT,1	$\delta \bar{e}_{T}$, element thermal deformations		
		EVT,1	EVT, element variables		
-11	sked incress	CØNST,1	CØNST, problem constants		
M2	LTAPE,1	DPØT,1	$\delta^{p}(\phi)T$, incremental applied loads		

TABLE 2.1. CONTENT OF MASTER MATRIX DATA FILES (Continued)

TLE	FORMAT NAMES AND MODIFIERS		DESCRIPTION		
ID TAPE		MATRIX	a in satur i		
мз	(FILE20,1)	(PBUF,1) MPT,1 UZERØ,1 ECT,1 MEL,1 KBEL,1 CBEL,1 FFBAR,1 SIGFB,1 EPSIG,1 DEBT,1 EVT,1 CONST,1	Pur element force modal transformation Copied from file M1		
M4	(FILE21,1)	(PBPHI,1)	δP̄(φ)U, transformed incremental applied loads P̄ _{UPTJ} , degree of freedom modal transformation		

TABLE 2.1. CONTENT OF MASTER MATRIX DATA FILES (Continued)

FILE			DESCRIPTION
	TAPE	MATRIX	
		CØNST,1	CØNST, augmented problem constants
		TIME,1	t, incremental time history
	WINDØW,52877	UZERØ,1	Copied from file M3
	(linear)	(PBPHI,1)	Copied from file M4
M5		(PBUPTJ,1)	Copied from file M4
	TAPE,1 (non-linear)	RESPNS, 8	Δ_{β} , $\delta\Delta_{\beta}$, v_{β} , and v_{β} , modal response
		BARS, B	$\bar{F}_{K_{\beta B}}$, σ_{β_B} , and ϵ_{β_B} , bar
			element forces, stresses, and strains
		MEMBRN, 8	$\bar{F}_{K_{\beta_{M}}}$, $\sigma_{\beta_{M}}$, and $\epsilon_{\beta_{M}}$, membrane
	1 4	X0.2	element forces, stresses, and strains
	1 1 1	CELLS,8	$F_{K_{\beta C}}$, $\sigma_{\beta_{C}}$, and $\varepsilon_{\beta_{C}}$, cell
			element forces, stresses, and strains
	00 (2260-2720)	A) STAGRUS	where ß is the increment number and these four matrices are repeated for each time incremen If there are no elements of a given type, the corresponding matrix will not be present.

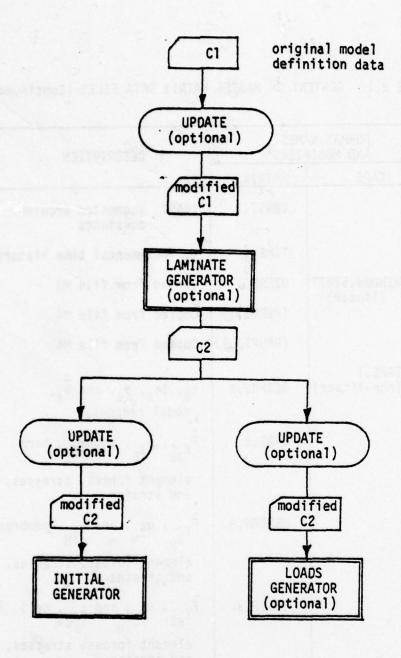


Figure 2.2. Function of UPDATE in Preprocessing

using all three preprocessing programs. The basic function of UPDATE in the IMPACT system is to edit the model definition data as necessary for each of the preprocessing programs. A secondary function is to permanently store the model definition data in an easily accessible form once it has been read into the system. On a large model with a large amount of data, this will avoid many card handling and reader errors each time the model definition data is required.

In Figure 2.2, each of UPDATE steps as well as the execution of the Laminate and Loads Generators are optional. Obviously, many combinations of these programs are possible in applying these tools to the variety of design problems a user might encounter. Suffice to say that the effective use of UPDATE in the preprocessing phase will enhance the users effectiveness by alleviating card handling problems.

SECTION III OPERATIONAL CONSIDERATIONS

GENERAL

Only one of the six new programs in the IMPACT system currently uses the overlay capability of the CDC operating system. This feature is used extensively by the Initial Generator. The overlay is accomplished using the SEGLOAD option of the loader. The SEGLOAD directives for implementation of this program are given in Section V under the heading CORE UTILIZATION.

Significant savings in core requirements could be realized by using overlay in the implementation of the Linear and Non-Linear Incremental Solution programs. The remaining new programs coded for IMPACT are relatively small and would not yield enough savings to justify overlay. The FORMAT program already uses this feature.

The following tables gives 1) minimum core requirements for the current version of each program as implemented, and 2) the associated size of blank common in the compiled code as implemented where applicable. The core requirement is in octal and the blank common region is in decimal.

PROGRAM	CORE REQUIREMENT (octal)	BLANK COMMON LENGTH (decimal)
Laminate Generator	130000	NA
Initial Generator	130000	NA
Loads Generator	71000	NA
FORMAT Phase II	100000	10000
Linear Incremental Solution	104000	8000
Nonlinear Incremental Solution	134000	8000
Postprocessor	60000	10000

EXTENDING BLANK COMMON

The FORMAT Phase II program, the Linear and Non-Linear Incremental Solutions, and the Postprocessor use blank common exclusively for core storage of data during their execution. Space is allocated within the blank common region for all arrays required in each program. The array space is allocated according to problem size as defined by input data.

Even though the blank common regions are of fixed dimension in the source code, the effective blank common region can be increased at execution time without recompiling any code when operating on the CDC system. By requesting additional core on the job request card and supplying input data to the program indicating the increased size of blank common, larger problems can be processed than could be accommodated by the dimensioned size of the work area in the compiled code.

For example, a program requires a field length of 100000 words (octal) with a blank common region of 10000 words (decimal). For a given problem, an increase of 2000 words (decimal) is required in the blank common region. By requesting an additional 4000 words (octal) for program execution to account for the 2000 word (decimal) increase in blank common region and inputing data to the program specifying this increase in available work space, the program could process the larger problem without recompiling any code.

Of course, this procedure can be used only with a program whose structure and input are consistent with this philosophy. The four programs of the IMPACT system mentioned above conform to these requirements. The blank common size requirements and associated input data to over ride the size parameters in the code are given in Sections VII, VIII, and IX of this document under the heading LIMITATIONS. Again, input card formats associated with this data are given in Part 2. Similar information regarding FORMAT Phase II is given in References 6 and 10 and discussed in Part 2.

OVER RIDING FILE NAMES

On the CDC system when executing multiple stand alone programs as may be done using IMPACT, it may be necessary to over ride system default file names because of conflicts between two programs. That is, one program may output its data on a file named TAPE1 and the second program may expect its input on TAPE3. In order to resolve this conflict, the default file name in one of the programs must be temporarily renamed during the execution of that program.

On the CDC system, file names of FORTRAN programs are established by means of the PROGRAM statement, the first statement of the main program. The system provides for over riding these names at execution time by means of a system control card. The format of this command, however, requires foreknowledge of the sequence of appearance of file names in the PROGRAM statement for a given program.

Table 3.1 gives the PROGRAM statements for each of the seven programs in the IMPACT system. It shows all files that are used by each program, and, together with Figure 2.1, implicity defines all files used as scratch as well as those used for master input/output.

SYSTEM CONTROL CARDS

As previously stated, the seven programs of the IMPACT system may be used in any number of combinations in actual application to the variety of design problems that may be encountered. However, in order to show an example of a complete deck set up including system control cards and data, a single run using all components of the IMPACT system is described here.

Table 3.2 gives the system control cards for a complete solution while Table 3.3 lists the corresponding user input data. The complete job is broken down into steps for reference in the tables and this dis-

TABLE 3.1. PROGRAM AND FILE DECLARATIONS

```
LAMINATE GENERATOR
    PRØGRAM LAMGEN ( TAPE1, TAPE2, ØUTPUT, TAPE6=ØUTPUT )
INITIAL GENERATOR
    PRØGRAM BIRDG1 ( TAPE1=512, INPUT, ØUTPUT, TAPE5=INPUT, TAPE6=ØUTPUT,
             TAPE7 =512, TAPE8 =512, TAPE9 =512, TAPE10=512,
             TAPE11=512, TAPE12=512, TAPE13=512, TAPE14=512,
             TAPE15=512, TAPE16=512, TAPE17=512, TAPE18=512)
LOADS GENERATOR
    PRØGRAM LØDGEN ( TAPE1, TAPE2, TAPE3, ØUTPUT, TAPE6=ØUTPUT )
FORMAT
    PRØGRAM FØRMAT ( TAPE1=512, TAPE2=512, TAPE3=512, TAPE4=512,
   1 INPUT=512, TAPE5=INPUT, ØUTPUT=512, TAPE6=ØUTPUT, TAPE7=512,
   6 TAPE8=512, TAPE9=512, TAPE10=512, TAPE14=512, TAPE15=512, TAPE16=512)
LINEAR INCREMENTAL SOLUTION
    PRØGRAM RESPNS(TAPE1 =512, TAPE2 =512, TAPE3 =512, TAPE4 = 512
   1,INPUT =512,TAPE5 =INPUT,ØUTPUT=512,TAPE6=ØUTPUT,TAPE7 =512
   2,TAPE8 =512,TAPE9 =512,TAPE10=512,TAPE11=512,TAPE12=512
   3,TAPE13=512,TAPE14=512,TAPE15=512,TAPE16=512,TAPE17=512,TAPE18=512
   4,TAPE19=512,TAPE20=512,TAPE21=512,TAPE22=512,TAPE23=512
   5.TAPE29=512
NONLINEAR INCREMENTAL SOLUTION
    PRØGRAM RESPNS(TAPE1 =512, TAPE2 =512, TAPE3 =512, TAPE4 =512
   1, INPUT =512, TAPE5 = INPUT, ØUTPUT=512, TAPE6=ØUTPUT, TAPE7 =512
   2, TAPE8 =512, TAPE9 =512, TAPE10=512, TAPE11=512, TAPE12=512
   3,TAPE13=512,TAPE14=512,TAPE15=512,TAPE16=512,TAPE17=512,TAPE18=512
   4,TAPE19=512,TAPE20=512,TAPE21=512,TAPE22=512,TAPE23=512
   5, TAPE30=512, TAPE31=512 )
POSTPROCESSOR
    PRØGRAM PØST ( TAPE1, TAPE2, TAPE3,
   1
                    INPUT, TAPE5=INPUT, ØUTPUT, TAPE6=ØUTPUT )
```

TABLE 3.2. SYSTEM CONTROL CARDS FOR COMPLETE SOLUTION

STEP	SYSTEM CONTROL CARD	OS
	RCQ, T075, I0150, CM140000, STCS8. LIMIT(7777)	D750545, MORRIS, 32096
1	UPDATE(N,F,CETAPE1) RETURN(NEWPL) REWIND(TAPE1)	Provi
2	ATTACH(LGO, LAMGENLGO) MAP(ON) LGO. RETURN(TAPE1, LGO)	
3	REWIND(TAPEZ) UPDATE(N.F.CECASE) KETURN(NEMPL.TAPEZ) REWIND(CASE)	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
4	ATTACH(BSLCRD, BIRDG18L) UPDATE(N,F) REWIND(COMPILE)	61 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
5	ATTACH(BLGO, BIRDGILGO) MAP(ON) SEGLDAD(I=COMPILE, BRBARS) LOSET(PRESETEZERO) LOAD(BLGO) NOGO. RETURN(BSLCHO, COMPILE, BLGO, NEWPL) REWIND(BABS) BABS(TAPEZ, CASE) RETURN(BARS) REWIND(TAPEZ, CASE)	
6	ATTACH(LGO,LODGENLGO) MAP(DN) LGO(CASE,TX) RETURN(CASE,TX,LGO) REWIND(TAPES)	5 WINSHED 007-01
7	ATTACH(PH2,PH4SE24,CY=1) PH2, REWIND(TAPE2,TAPF3,TAPE4)	803 94.7 4 697.08 00000 1 800 C1 00000 1 801 60 E
8	PH2(,,TAPE4,TAPE3) REWIND(TAPE2,TAPE3,TAPE4)	8/1 3 eat of 1
9	PH2(,,,TAPE20,,,,TAPE21) REWIND(TAPE20,TAPE21)	724 1 1 1 1 1
10	ATTACH(LGO,LINEARLGO) MAP(DN) RFL(140000) LGO. RETURN(LGO,TAPE20,TAPE21) REWIND(TAPE2)	10 10 11 11 11 11 11 11 11 11 11 11 11 1
11	ATTACH(LGO,POSTLGO) MAP(OH) LGO.	1 1 1 1 1

TABLE 3.3. INPUT DATA FOR COMPLETE SOLUTION

STEP			INPUT DATA		
	.DECK CASE			(2777	10161
	1	75.0	9332.0	151174 171	
	1	1	.02+6	02-12	
	2 1				
	i i		4.0	1.0	
	2 5	4.0		1.0	
. 1	2 7	4.0	4.0 -	1.0	
	5 9	8.0		1.0	
	2 3 2 5 2 7 2 9 2 11 2 13 2 14 2 15	4.0	4.0	1.0	
	2 13	12.0		1.0	
	2 15	12.0	4.0	1.0	
	2 16	12.0	4.0		
	29999				
	3 1 16				75.0
	39994				
	49999 5 1 1	1.0			
	5 1 1 5 2 1 5 3 1 5 4 2 5 5 5 2 5 7 3 5 8 3 5 9 3 5 10 4 5 11 4 5 12 4	.,,	1.0		
	5 3 1			1.0	
	5 4 2	1,0			
	5 5 2		1.0		
	5 6 2			1.0	
	5 4 2 5 5 2 5 7 3 5 8 3 5 9 3 5 10 4	1.0			
	5 8 3		1.0		
1	5 10 4	1,0		1.0	
, 1	5 11 4	0.00	1.0		MELTER I
	5 12 4			1.0	
-				1.0	
1	5 14 16			1.0	
	7 100				
	7 101 100	1 1 1.0			
	7 199				
	79999				
	8 1 11 1.	0			
	89999				
	10 100 ALU	MINUM 2024-16	•		
	10 102 1 7.4	4 €+6			
	10 103 1 500	00.			
	10 104 1 668	00.			
	10 105 1 .04				
	10 106 1 .33				
-	10 107 1 .12				
	10 100 1 50.	E-03			
	10 199				
1	109999				
	11 1 48	.004	5000.	15.	
	11 2 3	•,8		-1:0	
	11 4	-1.0		-1.0	
	11 5	11.0	2.0	1.0	
	11 0 1		1,0		
	11 . 2	4.0	1.0		
	11 6 3	A.0	1.0		STATE OF THE STATE
	110000				. 001

TABLE 3.3 INPUT DATA FOR COMPLETE SOLUTION (Continued)

STEP	INPUT DATA							
	12 1 9 11 13 15 12 2 5 7 9 11 12 3 1 3 5 7 120999							
1	20 1 13 14 100 1.0 20 2 15 16 100 1.0 209999 30 1 9 11 15 13 100 .5							
	30 2 10 12 16 14 100 .5 309999 40 1 1 3 7 5							
	40 2 5 7 11 9 40 9999 50 1 9 50 2 11 4 E-2 4 E-2 4 E-2							
	50 3 13 .4 E-2.4 E							
3	eREAD TAPEZ							
4	SPORMAT STANDARD							
7	TRUN INPUT TAPE (MTAPE,1) INPUT TAPE (LTAPE,1) OUTPUT TAPE (DECOMP,1) SINSTRUCTION PT,0PT = DPOT .DEJCOL. (1) SAVE (DECOMP) DPOT							
	HR B PRUF, MEL SEGMF? PRUPJ, PRUPJ & B PRUPT DEJCHL (44) PR B PRUPJ HULT, PT PRT B PR TRANSP, X,LTL,UR B PRUF, KEL SEGMF; PRT UT B PRUPJ THULT, UR SAVE (DECOMP) HR, PRUPJ, LTL, UR PRIPT HR, PRUPJ, LTL, UR PRIPT (,,,) UT							
	SEND SFORMAT STANDARD SRUM GO, LUGIC [NPUT TAPE (MTAPE, 1) INPUT TAPE (OECOMP, 1) OUTPUT TAPE (TRANSF, 1)							
8	SINSTRUCTION VAL, TR = MR .USERO6. LTL VAL, TR = MR .USERO6. LTL LEUPA . THULT . PRUP . THULEA . TH							
	25 25 1.0F-6							

TABLE 3.3. INPUT DATA FOR COMPLETE SOLUTION (Continued)

TEP	INPUT DATA				
	SFORMAT STANDARD SRUN GO, LOGIC INPUT TAPE (MTARE, 1) INPUT TAPE (TRANSF, 1) OUTPUT TAPE (FILE20, 1) (UTPUT TAPE (FILE21, 1)		07 02 02 02 03 03 03		
9	SINSTRUCTION SAVE (FILEZO) PRUF SAVE (FILEZO) MOT SAVE (FILEZO) UZERO SAVE (FILEZO) ECT, MEL, KBEL, CBEL, FFBAR SAVE (FILEZO) SIGFB, EPSIG, DEBT, EVT, CONST SAVE (FILEZO) DPBO SAVE (FILEZO) PRUPJ SENO	000.887 100 2911 1001 9621 1001 9621 1001 9621 1001 9621 1001 9621 1001 9621 1001	17 ev12		
10	1 6 10 25F 16 15000 10.0 20.0 30.0 40.0 70.0 50.0 90.0 100.0	50.0	٠٥.٥		
11	1	16 16 16 1891 1091 1907 1097 1907 1097	0.51		

cussion. The following files are assumed to be permanently stored disc files in the system.

LAMGENLGØ	Laminate Generator relocatable decks	
BIROGISL	Initial Generator SEGLØAD directives preceded by a *DECK UPDATE control card (card images)	
BIRDG1LGØ	Initial Generator relocatable decks	
LØDGENLGØ	Load Generator relocatable decks	
PHASE2A, CY=1	FØRMAT Phase II absolute file	
LINEARLGØ	Linear Incremental Solution relocatable decks	
PØSTLGØ	Postprocessor relocatable decks	

During this discussion, Figure 2.1 should be referred to for master input/output files of each program. Also, Table 3.1 should be referred to for the sequence of appearance of file names in the PRØGRAM declarations of each program. It is assumed that the reader has a working knowledge of the CDC system and its control cards.

In Table 3.2, the job card requests 140000 words of central memory for the run which is more than sufficient to load and execute all programs. The LIMIT card requests more than the system default disc storage space normally allocated to a job.

The CDC utility UPDATE is executed first (Step 1) receiving input from the system input file and outputing the COMPILE file under the name TAPE1. In Step 2, the Laminate Generator uses all default file names accepting file TAPE1 as input and creating file TAPE2 as output. TAPE1 is the partial model definition data and TAPE2 is the augmented model definition data. This is followed by another execution of UPDATE (Step 3) simulating a final editing and/or save of this data which, rather than being output under the default file name COMPILE, is renamed CASE.

Step 4 executes UPDATE again to create a card image input stream for SEGLØD which is output under the default name CØMPILE.

Step 5 includes both the loading of the Initial Generator and its execution. Input directives to SEGLØAD is the card image CØMPILE file from Step 4. Input to the Initial Generator is the complete model definition data, card image file CASE. The normal output file TAPEl is over ridden and renamed TAPE2.

Next the Load Generator is executed (Step 6). The normal input file TAPE1 is renamed CASE in order to accept the same model definition data used by the Initial Generator. The output is on TAPE3, the default file name for the binary matrix data output file. However, the normal card image output file TAPE2 is renamed to the dummy name TX since TAPE2 is already in use as the Initial Generator output file.

The following three steps, 7, 8, and 9, execute the FØRMAT Phase II program to assemble the input files necessary for the Linear Incremental Solution which follows. In the first execution, all default file names are used. Input is on file TAPE2 from Step 5 and TAPE3 from Step 6. Output is on TAPE4. In the second execution (Step 8), input consists of file TAPE2, the same file input to Step 7, and TAPE4 output from Step 7. In this step, therefore, the normal input file name TAPE3 is over ridden and renamed TAPE4, and the normal output file name TAPE4 is over ridden and renamed TAPE3. This sets up the stage for the final execution (Step 9) in which the input is, again, file TAPE2 from Step 5, and file TAPE3 output from Step 8. The normal output file names, TAPE4 and TAPE7, are renamed TAPE20 and TAPE21 for compatibility with the following step.

The Linear Incremental Solution is then executed (Step 10) using all default file names. Output is on TAPE2. In this step, blank common is extended to accommodate the size of the problem. On the first input card for this step (Table 3.3, Step 10), the available blank common is specified to the program in decimal as 15000 (last value on card). This is 7000 words (decimal) greater than the size of blank common in the compiled code. Therefore, in order to make additional core available for

execution, an RFL command is placed before the load and go command, LGØ. This effectively over rides the field length the loader normally establishes from the relocatable file it accesses for the load. The requested field length on the RFL card, 140000 words (octal), is sufficient to compensate for the 7000 words (decimal) added to blank common. (See minimum core requirements and dimensioned blank common block sizes discussed at the beginning of this section).

The last step, execution of the Postprocessor (Step 11) is then performed using all default file names, in which case, TAPE2 is the input file.

This example would be identical if the Nonlinear Incremental Solution had been used rather than the linear with the following exception. The default output file for the non-linear is TAPE23. The last control card, the command executing the Postprocessor, would, therefore, have to over ride the default input file name of TAPE2 to TAPE23 and would appear as


LGØ (, TAPE23)

SECTION IV LAMINATE GENERATOR

OVERVIEW

This program accepts user prepared tabular data describing the model, including the laminated section and generates additional tabular data which is merged into the input. The generated data consists of joint coordinates and cell definition data representing interior joints and elements below the exterior surface of the laminate. In addition, surface normal vectors are generated at each joint on the exterior surface of the laminate. The magnitude of these vectors corresponds to a unit pressure on the surface area associated with each joint. The format of the tabular card input prepared by the user as well as that of the tabular output is described in Part 2 of this report. Detailed descriptions of each routine in this program are given in Appendix A of this document.

The core required by this program without the use of overlay or segmentation is 130000 octal words. The program uses three external files. One is used for card input, one for printed output, and, optionally, one for card image output. Organization of all routines for the program is shown below.

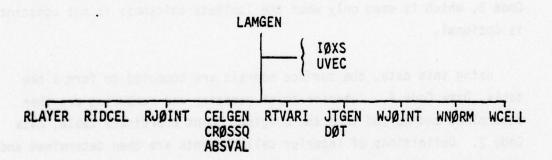

No labeled or blank common regions are used by the program. Arrays A and N are dimensioned in the main program which allocates space within these arrays for use by each of the routines it calls.

Routine IØXS is used to read data not required by the program and write it on the output file(s). Routine UVEC is used to unitize vectors. Routines RLAYER, RIDCEL, and RJØINT read the layer, cell, and joint data, respectively.

Routine CELGEN generates the cell definition data for the cells in the laminate and the surface normal vectors. Routine CRØSSQ finds the cross product of two vectors, and routine ABSVAL determines the magnitude of a vector. Routine RTVARI reads the variable thickness data and stores the thickness of each layer under each laminate surface joint. Routine JTGEN generates the coordinates of each joint in the laminates. Routine DØT is a function that forms the dot product of two vectors.

Routines WJØINT, WNØRM, and WCELL write the joint, surface normal, and cell data on the output file(s).

FILE UTILIZATION

Required input to the program are the tables of joint coordinates, laminate definitions, and cell definitions which are Data Codes 2, 7 and 40, respectively. The table of variable laminate thickness, Data Code 8, which is used only when the laminate thickness is not constant, is optional.

Using this data, the surface normals are computed to form a new table, Data Code 6. Interior joint geometry and numbering are then determined and merged into the original joint coordinate table, Data Code 2. Definitions of interior cell elements are then determined and merged into the original cell definition table, Data Code 40.

The output consists of the augmented joint coordinate and cell definition tables, Data Codes 2 and 40, the surface normal table, Data Code 6, and copies of all other tables present in the original input with the exception of the laminate definition and thickness tables,

Data Codes 7 and 8, which are omitted.

There is one card input file referenced by the integer variable ITAPE. The primary output file is referenced by the integer variable JTAPE. These two variables, ITAPE and JTAPE, are initialized in the main program as files 1 and 2.

The code provides for the following option. If JTAPE = 6, only the printed output is written to file 6. If JTAPE ≠ 6, the card image output is written to file JTAPE and the printed output is written to file 6.

LIMITATIONS

The program uses two singularly subscripted arrays, A and N, which are dimensioned in the main program as 25000 and 2000, respectively. The sizes of these arrays are stored in integer variables MSIZEA and MSIZEN which are initialized in the main program. The dimensions of arrays A and N and their respective sizes stored in MSIZEA and MSIZEN can be changed to accommodate smaller or larger models. The formulae for determining the space requirements for these arrays are:

MSIZEA \geq 10*NCELLS + 7*NJOINT + NJT*NL MSIZEN \geq 4*(NL-1) + NQUAD + NJT

where NCELLS is the total number of cell elements in the complete model, NJØINT is the number of joints in the complete model, NJT is the number of joints on the exterior laminate surface, NL is the number of layers in the laminate, and NQUAD is the number of cell elements on the exterior surface of the laminate.

Although the format of the input data provides for multiple laminate definitions, the code is limited to only one laminate definition.

SECTION V INITIAL GENERATOR

OVERVIEW

This program accepts tabular input data describing the structural model in terms of geometry, elements, constraints and material and physical properties. From this description, matrix data is generated as demanded by the subsequent solution process. The mathematical formulation of the output matrix data is given in Appendix H of Part 1 of this report. The card input prepared by the user describing the structural model is described in Part 2. Detailed descriptions of each labeled common block and routine in this program are presented in Appendix B of this document.

The program implementation includes extensive use of the CDC segmentation capability to overlay both labeled common regions and code. The core required for program execution using this feature is 130,000 octal words. In addition to the system input/output files, 5 and 6, the program uses thirteen external files of which twelve are intermediate data storage and one for the master output. No blank common is used.

The data assembled and output on the master file is compatible for use in either a linear or nonlinear incremental solution. This compatibility inherently results in some additional overhead since the requirements of each type of incremental solution are different. For example, the generation of matrices ECT and EVT and the computation of the Ramberg-Osgood coefficient in runs preparing data for a linear solution is not required. Conversely, the generation of matrix $\sigma_{\rm F}$ for a nonlinear solution is unnecessary. However, for the sake of consistency and user convenience, this approach was adopted.

Special Input for Checkout

There are some special input parameters pertaining to program checkout runs which are not discussed in the User's Manual, Part 2 of this report. These parameters are input under Data Code 1. On card 1 in columns 3 to 6 an integer master tape dump flag, MTDF, may be entered which controls the printing of output matrix data according to:

MTDF = 0 no dump

MTDF = 1 dump header/trailer

MTDF = 2 full dump

Also, on card 1 in columns 7 to 10 an integer joint number can be entered which will trigger the printing of all intermediate calculations for all elements connected to the joint specified. Finally, on card 1 in columns 11 to 14 an integer print flag can be input, which, if non zero, triggers the printing of all intermediate calculations in the assembly of matrices PRUPT and PRUF.

On card 2 of Data Code 1, in columns 3 to 6, an integer can be entered which is used as the maximum number of lines per page for printing. If not input, the number defaults to 45. Also, in columns 19 to 33 and 34 to 48, two coefficients are input as noted in the User's Manual. The first coefficient is used in defining the stiffness, or more appropriately, the lack of stiffness in bar elements with gaps in connectivety specified. The second coefficient is used to suppress insignificant values from the stiffness matrix of each element in the structural model. This was done to reduce matrix density and thus promote storage in compressed form and reduce execution time in mathematical operations. The values specified for these two coefficients in the User's Manual were derived empirically.

Organization

Figure 5.1 shows the functional organization of the program in terms of all labeled common blocks and the principle routines called by the main program. Vertical positioning in the figure depicts the basic overlay structure used. Labeled common blocks are in parentheses.

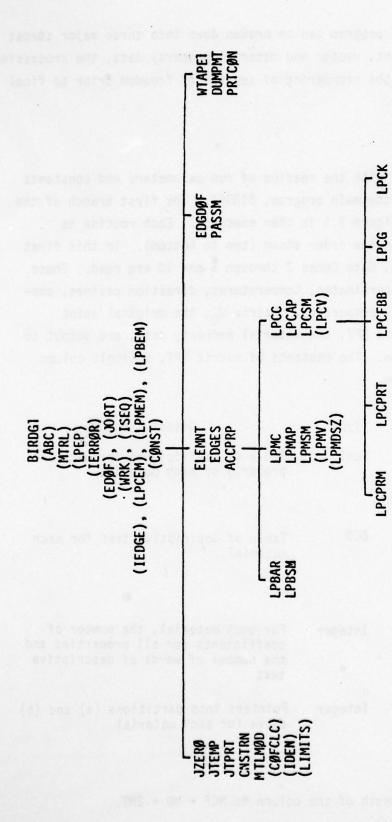


Figure 5.1. Initial Generator Organization

Functionally, the program can be broken down into three major steps; the processing of joint, vector and material property data, the processing of element data, and the reordering of degrees of freedom prior to final output of matrix data.

Operation

Processing begins with the reading of run parameters and constants under Data Code 1 by the main program, BIRDG1. The first branch of the tree on the left in Figure 5.1 is then executed. Each routine is invoked in sequence in the order shown (top to bottom). In this first major processing step, Data Codes 2 through 5 and 10 are read. These are tables of joint coordinates, temperatures, direction cosines, constraints, and material properties. Matrix \mathbf{U}_0 , the original joint coordinates, and matrix MPT, the material property data, are output to the master output tape. The contents of matrix MPT, a single column matrix, is shown below.

Partitions	MPT Record	Туре	Description
(a)	1 .	Real	Table of coefficients for each property of each material
(b)	NCF 1	BCD	Table of descriptive text for each material.
(c)	ND 1	Integer	For each material, the number of coefficients for all properties and the number of words of descriptive text
(d)	MT 1	Integer	Pointers into partitions (a) and (b) above for each material

Processing of element data, the second major step, is accomplished by middle branch of tree shown in Figure 5.1. A loop is set up in the main program to process all element data. The loop begins with a call to routine ELEMNT. This routine reads element definition data, Data Codes 20, 30, 40 and 50, one element at a time, and returns flags to the main program which control subsequent processing. One flag signals the end of data for the Data Code currently being processed which dictates either going on to next table, or, if all tables have been processed, exiting the loop.

If a return from routine ELEMNT indicates the presence of data for a particular type element, routines EDGES and ACCPRP are called in turn to assemble an array of joint number pairs for each element edge force and to establish the material properties for the element, respectively. One of the three sub-branches is then executed according to the element type; lumped parameter bar (LPB), lumped parameter membrane (LPM), or lumped parameter cell (LPC). No output data is written to the master output file in this step. Output consists of intermediate data stored on scratch files.

The last major processing step is accomplished by the two remaining branches on the right in Figure 5.1. These routines are executed once in the order EDGDØF, PASSM, WTAPE1, DUMPMT, and PRTCØN. Routine EDGDØF assembles an array of sorted unique joint pairs for each edge in the model from data previously assembled by routine EDGES. Using this and other data regarding constraints, routine PASSM then assembles and outputs matrices PRUPT and PRUF in the reordered row format. Finally, the three routines of the last branch are executed to write all remaining master output data, dump the master output tape (optional), and print the data from matrix CØNST, respectively. CØNST contains all model constants, sizing data, and other run parameters (Appendix B, Labeled Common CØNST).

Two special or psuedo matrices are formed and output which are not part of the theoretical development given in Part 1. These matrices are ECT, the element constant table, and EVT, the element variable table.

Each element contributes a column to ECT and EVT. The data for a column of ECT and EVT for each type element is given in Tables 5.1 and 5.2, respectively. These two matrices are used during each time increment of the nonlinear response solution. Matrix ECT is read only while matrix EVT, containing material property and stress/strain state data of each element, is read and rewritten during each increment.

Reordering of Degrees of Freedom

The reordering of degrees of freedom which takes place in the final processing step is done to reduce the wavefront of the structural stiffness matrix subsequently decomposed by the SEQWF module of FORMAT (Reference 10). The three-row formats (sequence) of degrees of freedom referred to in this report are the total degrees of freedom, T, the unconstrained degrees of freedom, U, and the reordered unconstrained degrees of freedom, RU. The latter being the desired order for SEQWF and, consequently, the row order of the Initial Generator output matrices PRUPT and PRUF.

The T degrees of freedom consist of global X,Y,Z translation at each joint followed by all edge degrees of freedom as shown below.

T Degrees of Freedom

$$\begin{vmatrix}
1 & J_{1X} \\
2 & J_{1y} \\
3 & J_{1Z}
\end{vmatrix}$$

$$\begin{vmatrix}
J_{1X} \\
J_{2X} \\
J_{2y}
\end{bmatrix}$$
All joint degrees of freedom
$$\begin{vmatrix}
J_{2X} \\
J_{2Z}
\end{vmatrix}$$

TABLE 5.1 CONTENTS OF MATRIX ECT

	LOCATION	V	TYPE	DESCRIPTION	
Bar	Mem	Cel1			
1	1	1	integer	element number	
2-3	2-5	2-9	integer	joint connectivity (p, q, r etc.)	
4	6	10	integer	material property number	
5	-	-	real	bar area	
6	-		real	bar tension gap	
7	- 400	504° 70	real	bar compression gap	
	7	-	real	membrane thickness	
-	8	11	real	stress orientation angle	
8	9	12	real	mass	
9	10-13	13-24	integer	T dof of edge forces	
10-11	14-22	25-54	real	unit thermal deformation coefficients	

TABLE 5.2 CONTENTS OF MATRIX EVT

LOCATION	TYPE	DESCRIPTION
1	integer	element number
2	real	temperature
3	real	E
4	real	EA
5	real	σ _A
6	real	ਰੰ
7	real	Er material properties at
8	real	μ current temperature
9	real	α _T
10	real	P
11	real	s
12	real	h
13	real	n
14	real	Ē
15	real	ਰ ∟

$$\left\{ \begin{array}{c} J_{n_X} \\ J_{n_Y} \\ J_{n_Z} \end{array} \right\} \quad \left\{ \begin{array}{c} J_{n_T} \\ J_{n_Z} \\ J_{n_Z} \end{array} \right\} \quad \left\{ \begin{array}{c} E_1 \\ E_2 \\ J_{n_Z} \\ J_{n_Z}$$

where NJ is the number of joints, NE is the number of edges, J_{n_T} are the X,Y,Z global translation at joint n, and E_n are all edges connected to joint n. The edges in E_n are identified by joint pairs in ascending order where the second joint is always greater than the first and the positive direction is taken to be from the first to the second joint. For example,

Edge Degrees of Freedom


First Joint	Second Joint	97
207 1 2297740	6	1
1	18	} E,
1	56	
2	3	1.
2	17	} 2

The U degrees of freedom are in the same order as the T degrees of freedom, but with joint constrained degrees of freedom omitted. Edge degrees of freedom cannot be constrained.

where NC is the number of constraints, and $\boldsymbol{J}_{n_{_{\mbox{\textbf{U}}}}}$ are the unconstrained global translation at joint n.

The RU degrees of freedom consist of the U degrees of freedom with the edge degrees of freedom for a joint immediately following the unconstrained joint degrees of freedom, as shown below.

RU
Degrees of Freedom

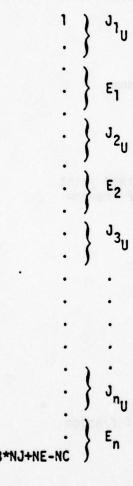

OVERLAY

Loading of the Initial Generator program should include the use of the CDC segmentation capability. The basic overlay structure is shown in Figure 5.1. Note that the labeled common regions are overlayed as well as code. The SEGLOAD directives to accomplish this overlay structure are given below. Beginning card columns are noted above each of the three fields.

1	8	17
	TREE	BIRDG1-(IN,ELEM,ASSM,ØUT)
ELEM	TREE	EA-(BAR, MEM, CELL)
	GLØBAL	CONST, IEDGE, IERROR, ISEQ, EDOF, LPEP, MTRL
	GLØBAL	CØN.RM,Q8.IØ.,FCL.C.,IØ.BUF.
EDØF	EQUAL	JORT
ISEQ	EQUAL	WRK
IEDGE	EQUAL	LPBEM, LPMEM, LPCEM
IN	INCLUDE	CNSTRN, JTEMP, JTPRT, JZERØ, MTLMØD, SKDATA, TAPEHD
IN	GLØBAL	CØFCLC,LIMITS
EA	INCLUDE	ACCPRP, EDGES, ELEMNT
BAR	INCLUDE	LPBAR, LPBPRT, LPBSM
MEM	INCLUDE	LPMAP, LPMC, LPMPRM, PMPRT, LPMSM
MEM	GLØBAL	LPMDSZ,LPMV
CELL	TREE	LPCAP-LPCC-LPCSM-(LPCPRM,LPCPRT,LPCFBB,LPCG,LPCK)
LPCAP	GLØBAL	LPCV
ASSM	INCLUDE	PASSM,EDGDØF
ØUT	INCLUDE	DUMPMT, PRTCØN, TAPETR, WTAPE1
	END	BI RDG1

FILE UTILIZATION

All tabular card input data is read from system input file 5 and all printed output is written to system output file 6. In addition, thirteen external files are used. Units 7 through 18 are used as scratch files and unit 1 is used for master matrix data binary output.

Figures 5.2, 5.3 and 5.4 show the use of these files during the three major processing steps of the Initial Generator program. The content of each of these files is summarized in the following.

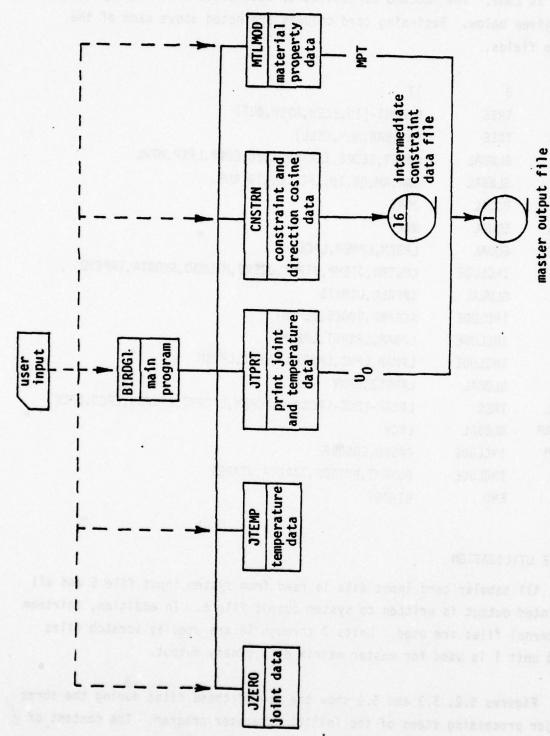


Figure 5.2. Initial Generator Joint, Constraint, and Material Property Processing Files


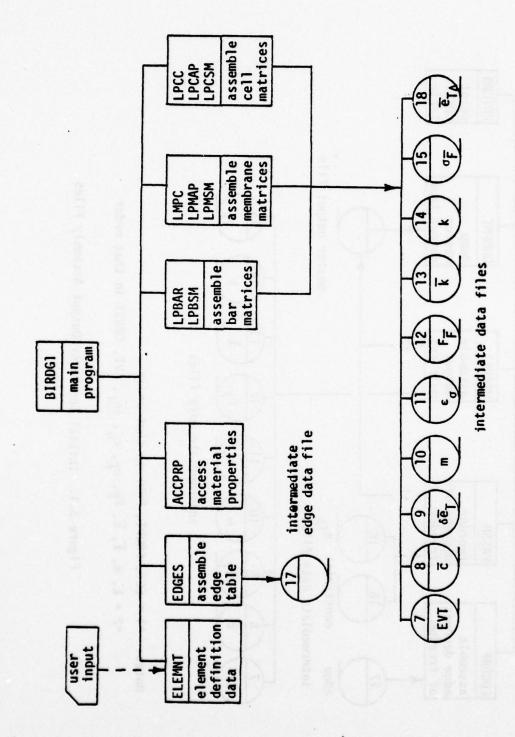


Figure 5.3. Initial Generator Element Processing Files

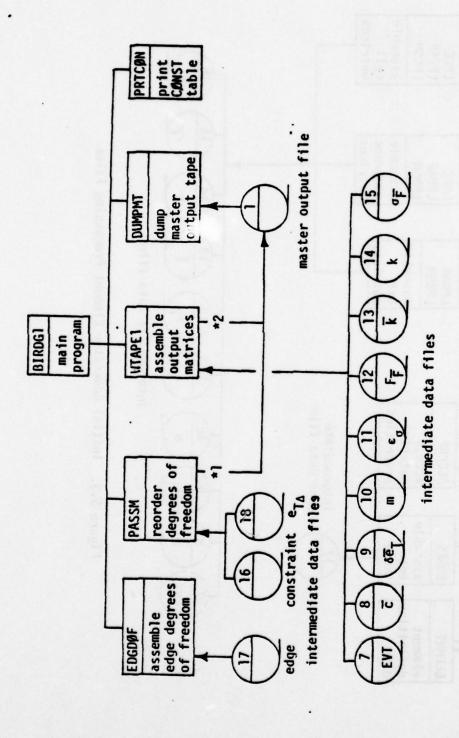

Notes: *1 = ECT, PRUPT, PRUF in that order *2 = k, m, \vec{k} , \vec{c} , \vec{F} , \vec{c}_{σ} , $\vec{\delta e}_{T}$, EVT, CONST in that order

Figure 5.4. Initial Generator Output Assembly Files

File	Content
1	Master output matrix data
7	Intermediate material property and other potentially variable data for each element (EVT)
8	Intermediate unassembled damping matrix for each element (\overline{c})
9	Intermediate deformations due to initial thermal gradients for each element $(\delta \bar{e}_T)$
10	Intermediate unassembled lumped mass matrix for each element (m)
11	Intermediate unassembled strain transformation for each element (ε_{σ})
12	Intermediate unassembled force transformation for each element $(F_{\overline{F}})$
13	Intermediate unassembled stiffness matrix for each element (\overline{k})
14	<pre>Intermediate unassembled lumped stiffness matrix for each element (k)</pre>
15	Intermediate unassembled stress transformation for each element $(\sigma_{\overline{F}})$
16 ·	Intermediate constraint data for each constraint
17	Intermediate edge data for each element
18	Intermediate thermal deformation transform for each element $(\overline{e}_{T\Delta})$

The output of matrices of element data as well as the processing of such data is in the order bars, membranes, cells, and point mass elements. The size of some of the matrices and arrays for individual contributions from the three types of elements is given below.

Matrix		
Array	Size	
k, c	NK x NK	(symmetric)
k, c, m	NF x NF	(symmetric)
FF	NF x NK	
F	NS x NK	

•	€_			NS	x	NS	(symmetric)
	εσ δēτ,	TA		NK	x	1	
	ECT			NB	x	1- 1	
	EVT			NV	X	1988879 9	
where			bar		r	membrane	cell
	NI	F .	7			16	36
5.30	NI	(=	2			9	30
	N:	S =	1			3	12
	N	3 =	11			22	54
	N'	V =	14			15	24

Only the mass matrix, m, and the element constant table, ECT, apply to point mass elements. In this case, NF = 3 and NB = 5.

The master output file is written in a format consistent with FORMAT master input/output matrix tapes. The FORMAT tape name and modifier in the header record is MTAPE, 1. The order and discription of the matrices output for the structural model defined by the tabular input data is given below.

Matrix or Array	FORMAT Matrix Name and Modifier	Row and Column Dimensions	Description
Uo	UZERØ, 1	NJ x 3	joint coordinates
MPT	MPT, 1	NM x 1	material properties
ECT	ECT, 1	100 x NEM	element constants
PRUPT	PRUPT, 1	NU x NT	T dof reordering
PRUF	PRUF, 1	NU x NPF	element force reordering
k	KEL, 1	NPF x NPF	lumped element stiffness
m	MEL, 1	NPF x NPF	lumped element mass
k	KBEL, 1	NFB x NFB	element stiffness

₹ .	CBEL, 1	NFB x NFB element damping
FF	FFBAR, I	NFF x NFB element force transform
₫ ₽	SIGFB, 1	NSS x NFB element stress transform
εσ	EPSIG, 1	NSS x NSS element strain transform
δ e T	DEBT, 1	30 x NEM element thermal deformation
EVT	EVT, 1	24 x NEM element variables
CØNST	CØNST, 1	30 x 1 problem constants
where	NJ	is the number of joints
	NM	is the length of the material property array
	NEM	is the number of elements
	NU	is the number of unconstrained degrees of freedom
	NT	is the total number of degrees of freedom
	NPF	is the number of lumped element forces including point mass element
	NFB	is the number of lumped element forces
	NFF	is the number of internal element forces
	NSS .	is the number of stresses/strains

and NPF is the only dimension which includes point mass elements. Matrices MPT, ECT, $\delta \bar{e}_{T}$, EVT and CØNST are mixed integer/floating point arrays which are not usable directly by FORMAT.

CORE UTILIZATION

All internal core storage is by means of labeled common blocks. No blank common is used. Detailed descriptions of each labeled common block is given in Appendix B. Table 5.3 lists each of these labeled common blocks and all routines in the program which reference them.

TABLE 5.3 INITIAL GENERATOR LABELED COMMON REFERENCES

Labeled Common Block	References By Routine
CØFCLC	CACALC, PROP
CØNST	BIRDG1, JTEMP, JZERØ, MTLMØD, PASSM, PASSM1, PASSM2, PASSM4, PASSM5, PRTCØN, WTAPE1
IERRØR	BIRDG1, ACCPRP, CNSTRN, CØCALC, DRCNUM, EDGDØF, ELEKNT, JTEMP, JZERØ, LPCKC, MATDES, MTLMØD, ØVER3, PASSM, PASSM1, PASSM2, PASSM4, PASSM5, PRØP, PRTCØN, RAMØSG, WTAPEl
EDØF	EDGDØF, PASSM
IDÉN	CACALC, MATDES, MTLMAD, PRAP
JøRT	BIRDG1, ACCJZE, JTEMP, JTPRT, JZERO, LPBAR, LPBPRT, LPCAP, LPCG, LPCPRT, LPMAP, LPMG, LPMPRT
LIMITS	COCALC, MATDES, MTLMOD, PROP
ГРВЕМ	LPBAR, LPBPRT, LPBSM
LPCEM	LPCAP, LPCEBT, LPCK, LPCKM, LPCSM, LPCZM

TABLE 5.3. INITIAL GENERATOR LABELED COMMON REFERENCES (Continued)

References By Routine	LPCAP, LPCEBT, LPCFFB, LPCG, LPCKC, LPCPRT, LPCSM	BIRDG1, ELEMNT, LPBAR, LPBPRT, LPBSM, LPCAP, LPCC, LPCEBT, LPCFFB, LPCG, LPCKC, LPCPRT, LPCSM, LPMAP, LPNC, LPMFFB, LPMEBT, LPMG, LPMPRT, LPMSM	LPMAP, LPMKC, LPMPRT, LPMSZD, LPMS1, LPMS2	LPNAP, LPMFFB, LPMEBT, LPMPRM, LPMSM, LPMSZD, LPMZM	LPMAP, LPMFFB, LPMEBT, LPMG, LPMPRT, LPMSM, LPMSZD	BIRDGI, ACCPRP, LPBSM, LPCSM, LPMSM, MATDES, MTLMBD, PRBP, RAMBSG	CNSTRN, DUMPMT, LPCK, LPCKC	DADTA OVCODI CTACK CLAND
Q	aa aa aani aalav	LPCEBT, LPCFFB, LPCG, LPCKC, PMPRT, LPMSM				, PRØP, RAMØSG	800/20 083 083 082 082 081 083	

LIMITATIONS

Currently problem size limitations of the program are as follows:

Maximum	Type Data
1200	joints
50	direction cosines
600	constraints
300	oblique constraints
20	materials
10	coefficients or values/material property
660	coefficients for all properties of all materials
240	words of descriptive text for all materials (10 characters/word)
7200	edge element forces
7200	T degrees of freedom
3600	edge degrees of freedom

Limitations with respect to material properties can be modified by changing dimensions of arrays in labeled common block MTRL. At the same time, the data statement in routine MTLMØD initializing the values in labeled common block LIMITS must be changed to be consistent with the array sizes of labeled common block MTRL.

All other limitations are basically functions of the size of labeled common blocks EDØF, IEDŒE, and ISEQ. These common regions are used as a group in the reordering of degrees by routines EDŒDØF and PASSM and must be of equal size. This size is the limit for number of T degrees of freedom and edge element forces. Half this dimension is the limit for edge degrees of freedom. The current dimensioned size of each of these three common regions is 7200 which is reflected in the list of limitations above.

Labeled common JORT is used to store joint coordinate and temperature tables and is overlayed with labeled common EDØF. JORT requires four equal size partitions whose length is the limit for number of joints. The current implementation with common region EDØF of size 7200 is, therefore, sufficient for 1800 joints. Present dimensions in common region JORT, however, are sized for a limit of 1200 joints.

Limitations on direction cosines and constraints are a function of array sizes in labeled common block WRK as defined in routine CØNSTN. This common region is overlayed with labeled common block ISEQ. The declaration for common region WRK in routine CØNSTN is the largest in the program and uses only 3453 locations of the 7200 abailable. By increasing the array sizes of labeled common WRK as defined in routine CØNSTN but not exceeding the size of labeled common ISEQ, these limitations could be eased without any overall penalty.

Even though some of the current limitations could, and probably should, be eased without increasing overall core requirements for the program, the array sizes as presently defined, have been sufficient for processing the largest possible problems under the T degrees of freedom limitation.

Labeled country to sverience with lose of common cost coordinate and temperature takens of a sverience with lose of common cost country of the source carbitrates and the country of the limit for maken of judges. The courtry to improve and the country of the cou

User common region to organism and constraints are a function of array sizes in labeled common block VCK as defined in restine CSMSTM.

This common region is overlayed with imbeled common plack fSED. The declaration for common region VRK in routine CBMSTM is she introvit in common end uses, only 1453 locations of the 1800 analyzable. By the propose and uses, sizes of labeled common VMK as celled in roptine CBMSTM but not exceeding the size of labeled common ISED, these limitations common ISED, these limitations


frem though some of the current limitations could and protects to evaluate the characters of another than street, one extend the characters of another than anticological than array of the largest countries and the street in the largest countries and the street and the largest countries and the street and the largest countries and the street and the

SECTION VI LOADS GENERATOR

OVERVIEW

This program accepts user prepared tabular input data describing the model including the impact loading and generates a matrix of incremental point loads. The card input prepared by the user is described in Part 2 of this report. The mathematical formulation is given in Appendix H of Part 1. Detailed descriptions of each routine in this program are given in Appendix C of this document.

The core required for this program without the use of overlay or segmentation is 71000 octal words. The program uses three external files in addition to system print file 6. One file is used for card input, one for card image output, and one for binary matrix data output. Organization of all routines for the program is shown below.

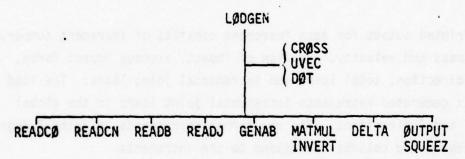

No labeled or blank common regions are used by the program. Array A is dimensioned in the main program which allocates space within the array for use by each of the routines it calls.

Routines CRØSS, UVEC, and DØT perform the vector operations of cross product, unitize, and dot product, respectively. Routines READCØ and READCN read the joint coordinate and impact constant data, respectively.

Routines READB, READJ, GENAB, MATMUL, DELTA, and ØUTPUT are called for each load increment. READB reads the footprint travel and the load

factor. READJ reads the numbers of joints that receive load. GENAB generates the A and B matrices used by MATMUL in performing the matrix multiplication $A^{T}(AA^{T})^{-1}BF$ which results in an array of joint loads. INVERT inverts the 3x3 matrix AA^{T} . DELTA finds the change in joint loads from the previous to the current load increment.

OUTPUT writes the change in joint loads on the output file(s) using SQUEEZ to compress the data written on the FORMAT tape.

FILE UTILIZATION

Required input to the program are the table of joint coordinates, Data Code 2, and the tables of impact definition data and impact footprint joint data, Data Codes 11 and 12. This data provides: 1) over all model geometry, 2) bird length, mass and velocity, and 3) the incremental load in terms of magnitude, direction and loaded joints.

Printed output for each increment consists of increment number, bird mass and velocity, duration of impact, average impact force, load direction, total load, and incremental joint loads. The load matrix generated represents incremental joint loads in the global X, Y, and Z directions. The row format corresponds to joint T degrees of freedom and columns correspond to the increments.

The output card image file is formatted for use as a FØRMAT Phase II card input matrix with the name DPØT. The binary output file is formatted for use as a FØRMAT Phase II master input matrix tape with the tape name LTAPE, 1 and a matrix name of DPØT.

There is one card input file referenced by the integer variable ITAPE. The card image matrix output file is referenced by the integer variable JTAPE. The binary matrix data output file is referenced by the integer variable KTAPE. These three variables, ITAPE, JTAPE and KTAPE are initialized in the main program as files 1, 2 and 3, respect-tively. All printed output is written to file 6.

LIMITATIONS

The program uses the singularly subscripted array A which is dimensioned in the main program as 10000. The size of this array is stored in the integer variable NSIZEA which is initialized in the main program. The dimension of array A and its size stored in NSIZEA can be changed to accommodate smaller or larger models. The formula for determining the space requirement for array A is:

NSIZEA ≥ 3*NJTØT + 9*NJTN + NDØF

where NJTØT is the number of joints under Data Code 2, NJTN is the largest number of joints in any increment under Data Code 12, and NDØF is the number of joint T degrees of freedom from Data Code 11.

SECTION VII LINEAR INCREMENTAL SOLUTION

OVERVIEW

This program accepts matrix data representing the structural model in mathematical form and solves the linear equations of motion incrementally to obtain the structural response. The solution of the linear equation of motion is a subset of the nonlinear solution as described in Appendix H of Part 1 of this report. The FORMAT steps required to generate the input matrix data for this program as well as the card input required are described in Part 2 of this report. Detailed descriptions of each labeled common block and routine in this program are given in Appendix D of this document.

The core required by the program is problem dependent. Sufficient space must be available in blank common in which all working storage space is dynamically allocated during execution. This requirement is covered in detail in the latter part of this section (see LIMITATIONS). However, for a nominal size problem of 30 or less transformation modes, which is the predominant sizing factor, the program requires 140,000 octal words for execution. The minimum requirement is 104,000 octal words. In addition to the system input/output files 5 and 6, the program requires 22 external files of which 19 are used as scratch, two as master input, and one as master output.

Current Approach

The program as coded is significantly different from the theoretical development given in Part 1 in one area. This involves the introduction of the cosine load variation or impedance matrix and the formation of the A matrix from which all eigenvalues and eigenvectors are extracted to obtain the modal incremental response.

Currently, the program does not include the computation and application of the impedance matrix in the modal response equations. In addition, the equations solved for the modal response are based on an A matrix of the form

$$\begin{bmatrix} -\vec{K}^{-1}\vec{C} & -\vec{K}^{-1}\vec{M} \\ \hline I & 0 \end{bmatrix}$$

where the desired form as given in Part 1, which permits a singular modal stiffness matrix K, is

$$\begin{bmatrix} 0 & I \\ -\overline{M}^{-1}\overline{K} & -\overline{M}^{-1}\overline{C} \end{bmatrix}$$

This inconsistency came about due to changes in theoretical approach which took place during method development. Originally, the form of the A matrix was the latter using $\bar{\mathsf{M}}^{-1}$. Subsequently, it was decided to use the form with $\bar{\mathsf{K}}^{-1}$ because of singularities in the modal mass matrix in some classical test problems. However, the final approach as documented in Part 1, reverts back to the original form of the A matrix using $\bar{\mathsf{M}}^{-1}$. This was made possible by introducing the impedance matrix and automatically accounting for null rows/columns in the modal mass matrix. Unfortunately, coding of the linear solution was nearly complete using the $\bar{\mathsf{K}}^{-1}$ form of the A matrix and time did not permit changing the code to be consistent with the current theoretical approach.

Organization

Figure 7.1 shows the functional organization of the program in terms of all labeled common blocks and the principle routines. Labeled common blocks are in parentheses. Vertical positioning in the figure depicts a basic overlay structure which could be implemented in the future.

()

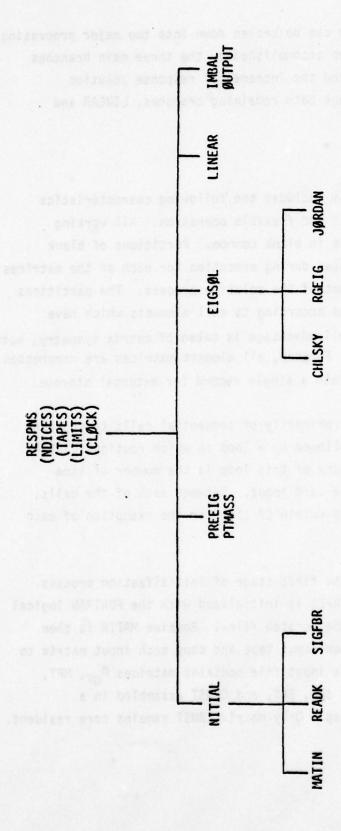


Figure 7.1 Linear Incremental Solution Organization

Functionally, the program can be broken down into two major processing steps; the initialization step accomplished by the three main branches NITIAL, PREEIG, and EIGSØL, and the incremental response solution accomplished by looping through both remaining branches, LINEAR and IMBAL.

Operation

The design of this program includes the following characteristics deemed essential for efficient and flexible operation. All working storage used by the program is in blank common. Partitions of blank common are dynamically allocated during execution for each of the matrices encountered during an increment of the solution process. The partitions for element matrices are sized according to cell elements which have the largest requirements. Full advantage is taken of matrix symmetry, both in storage and computations. Further, all element matrices are compressed if possible and reformatted into a single record for external storage.

The main program consists primarily of sequential calls to routines NITIAL, PREEIG, and EIGSØL followed by a loop in which routines LINEAR and IMBAL are called. The index of this loop is the number of time increments as specified by the card input. Between each of the calls, timing routines are invoked to obtain CP time for the execution of each module.

Routine NITIAL performs the first stage of initialization process. First, labeled common block TAPES is initialized with the FORTRAN logical unit numbers to be used for the scratch files. Routine MATIN is then called to read the first master input tape and copy each input matrix to individual scratch files. The input file contains matrices \overline{P}_{UF} , MPT, U_0 , ECT, m, \overline{k} , \overline{c} , $F_{\overline{F}}$, $\sigma_{\overline{F}}$, ε_{σ} , $\delta \overline{e}_{\overline{I}}$, EVT, and CØNST assembled in a previously executed FORMAT step. Only matrix CØNST remains core resident.

All card input is then read by routine NITIAL consisting of run parameters and incremental time history. The CONST array is augmented with the number of modes and time increments from the card input. The first data card is read with a format (416, 111, 216) and contains the following run parameters:

BETA	beginning time interval
NELEMS	total number of physical elements (excludes point mass elements)
NTRVLS	number of time intervals
NG	number of transformation modes
HEAT	"F", dummy logical control flag
NJTS	number of joints
NWØRK	optional extent of blank common

The array NTRVLS, ascending values of elapsed time, is then read with format (6E12.0).

Using the problem sizing information obtained from the matrix and card input, routine NITIAL then begins the process of allocating partitions of the blank common region for each array required in subsequent processing steps. The first location of each of these partitions is stored in labeled common block NDICES. The details of the dynamic allocation scheme used are given later in this section (see CORE UTILIZATION).

Next, the cell stress transform, $\sigma_{S\sigma}$, is initialized by routine NITIAL since it is constant for all cell elements.

Routine READK is then called by NITIAL to rewrite matrices \overline{k} , \overline{c} , $F_{\overline{F}}$, ε_{σ} , and $\delta \overline{e}_{\overline{1}}$ in optimum format. Element partitions of matrices \overline{k} , \overline{c} , and ε_{σ} are reformatted in upper triangular row-wise form to take advantage of symmetry. The partitions of matrices \overline{k} , \overline{c} , and $\delta \overline{e}_{\overline{1}}$ for each element are then written on a single file as three records. The partition of ε_{σ} is

written to a seperate file as one record. Element partitions of matrix $F_{\overline{F}}$ are compressed and written to a seperate file as a single record.

After setting various blank common partitions to zero, NITIAL calls routine SIGFBR to rewrite matrix $\sigma_{\overline{F}}$ in optimum format. Element partitions of $\sigma_{\overline{F}}$ are compressed and written to a seperate file as a single record.

Interspersed in the above initialization steps is the setting of parameters in labeled common block LIMITS and the transcribing of certain input data to the master output file. The data written to the master output file by routine NITIAL are the augmented matrix of problem parameters, CØNST, the matrix of card input incremental time history, TIME, the matrix of original joint coordinates, UZERØ, and the contents of the second master input file, matrices DPBPHI and PBUPTJ, the incremental applied loads and the modal to joint T degree of freedom transform, respectively.

The second stage of initialization is performed by routine PREEIG. This consists of computing the modal stiffness, damping, mass, and loads matrices, \overline{K} , \overline{C} , \overline{M} , and $\delta \overline{P}_{KO}$, respectively. Some of the byproducts of this task are also stored seperately on external files. After first initializing the arrays \overline{K} , \overline{C} , \overline{M} , \overline{V} , \overline{A} , $\delta \overline{P}_{KO}$, $\overline{P}_{(M)U}$ to zero, the following operations are performed for each physical element in the model.

Read
$$\bar{k}$$
, \bar{c} , $\delta \bar{e}_T$, m, $F_{\bar{F}}$, and \bar{P}_{UF} from scratch files $\delta \bar{F}_{KO} = -\bar{k} \delta \bar{e}_T$

Write $\delta \bar{F}_{KO}$ and DK to seperate scratch files

$$\bar{K} = \bar{K} + DK D^T$$

$$\vec{c} = \vec{c} + p = p^T$$

After all bars, membranes, and cells have been processed in this manner, routine PTMASS is called to add point mass element contributions to matrix \overline{M} if any of these elements are present in the model.

The third and final stage of initialization is performed by routine EIGSØL, the third main branch from the left in Figure 7.1. This consists of the A matrix assembly and subsequent solution for eigenvalues and eigenvectors. Routine CHLSKY is called to obtain the decomposition of K and the A matrix is assembled according to

$$A = \begin{bmatrix} -\bar{K}^{-1}\bar{C} & -\bar{K}^{-1}\bar{M} \\ \hline I & 0 \end{bmatrix}$$

and the eigen equation of the form

$$\left[\begin{array}{c|c} A \end{array}\right] \left[\begin{array}{c|c} H_{\Delta} & H_{V} \end{array}\right] = \left[\begin{array}{c|c} H_{\Delta} & H_{V} \end{array}\right] \left[\begin{array}{c|c} \cdot 1 \\ \hline \lambda & \cdot \end{array}\right]$$

is solved for the eigenvalues $H = \begin{bmatrix} H_{\Delta} \\ H_{V} \end{bmatrix}$ and the diagonal matrix of eigenvalues λ_{D} . The inverse of the eigenvectors is then obtained using routine JØRDAN and both the eigenvectors and their inverse are written to the same scratch file.

The eigenvalue problem is solved by routine RGEIG which is part of the EISPACK library (Reference 16). The version of routine RGEIG in this code has been modified slightly from that in the EISPACK library. In an effort to reduce core space, the origin of the real input matrix was moved n^2 locations down from the origin of the matrix of eigenvectors where n is the order of the problem. This allows for the eigenvectors exclusively in the complex mode.

This concludes the initialization steps. Other than core resident data, input to the incremental solution step consists of matrices $\sigma_{\overline{F}}$, ε_{σ} , DK, $\delta \overline{F}_{KO}$, H and H⁻¹ residing on scratch files, and matrix $\delta \overline{P}_{(\phi)U}$ on the second master input file.

Executing the incremental solution is accomplished by routines LINEAR and IMBAL. These routines are called in this sequence by the main program for each time increment. Routine LINEAR computes the modal response and routine IMBAL computes the element forces, stresses and strains from the modal response.

Core resident data during the incremental solution which remains constant includes \bar{K} , \bar{K}^{-1} , \bar{C} , \bar{M} , λ_D , $\delta\bar{P}_{KO}$ and the cell stress transform $\sigma_{S\sigma}$ previously set in routine NITIAL. Core resident data from the previous increment includes $\bar{P}_{(M)U}$, \bar{V} and $\bar{\Delta}$. Using this data and previously assembled data on external files, routine LINEAR performs the following operations for the increment.

Read $\delta \bar{P}_{(\phi)U}$ from the second master input file

Read H and H⁻¹ from scratch file $\bar{P} = \delta \bar{P}_{KO} + \bar{P}_{(M)U} + \delta \bar{P}_{(\phi)U}$ $Z = -K^{-1} \bar{P}$ $C_{a_D} = H^{-1} \left[\frac{Z}{\bar{V}} \right]$ diagonalized $F(\tau) = e^{\lambda \tau}$ where τ is the incremental time $Q = C_{a_D} F(\tau)$

$$\begin{bmatrix} \underline{\delta \overline{\Delta}} \\ \overline{V} \end{bmatrix} = H Q$$

$$\underline{\delta \overline{\Delta}} = \underline{\delta \overline{\Delta}} - Z$$

$$\hat{\overline{V}} = H_V \lambda_D C_{a_D}$$

Routine IMBAL then completes the computation of the modal response by performing the following operations.

$$\overline{P}_{(M)U} = \overline{M} \mathring{\nabla} + \overline{C} \nabla$$

$$\overline{\Delta} = \overline{\Delta} + 6\overline{\Delta}$$

This is followed by a call to routine ØUTPUT which writes the modal response to the master output file. The modal response is output as a column matrix with the name RESPNS and a subscript equal to the increment number. The data output consists of $\bar{\Delta}$, $\delta\bar{\Delta}$, \bar{v} , \bar{v} , P_1 and P_2 arranged in that order in a column of length 6*NG where NG is the number of transformation modes. The P_1 and P_2 partitions of the column have no real significance.

Routine IMBAL then enters a loop for processing each element. This loop processes bar, membrane, and cell elements in that order. A matrix is written to the master output file for each element type that exists in the model. The following operations are performed for each element.

Read $\sigma_{\overline{F}}$, ε_{σ} , DK, and $\delta \overline{F}_{KO}$ from scratch files $\overline{F}_{K} = \delta \overline{F}_{KO} - DK^{\overline{I}} \overline{\Delta}$ $\sigma = \sigma_{\overline{F}} \overline{F}_{K}$ for bars and membranes or $\sigma = \sigma_{S\sigma} \ \sigma_{\overline{F}} \ \overline{F}_{K}$ for cells $\varepsilon = \varepsilon_{\sigma} \ \sigma$ Write \overline{F}_{K} , σ , and ε to master output file

The element forces, stresses, and strains are arranged in that order into a single column of the output matrix for each type of element. The matrix names used for the three element types are BARS, MEMBRN, and CELLS. Each is subscripted with the increment number.

This ends the processing for an increment. Execution of routines LINEAR and IMBAL is repeated for each of the increments specified on the first input data card.

FILE UTILIZATION

All card input is read from the system input file 5 and all printed output is written to the system output file 6. Although FORTRAN logical units 7 and 29 are declared in the PRØGRAM statement in the main program, they are never referenced. FORTRAN logical units 1 through 4 and 8 through 23 are referenced as external files using the variables N1 through N20 stored in labeled common block TAPES (see Appendix D, LABELED COMMON TAPES). File N2 is used as the master output file while N17 and N18 are used for the two master input files. All three master input/output files are formatted consistent with FORMAT master input/output matrix tapes.

The code does not key on the FORMAT tape or matrix names in the input files. Matrix data is identified by its sequential position on the input files. The sequence of matrix data on the first input file, N17, is \overline{P}_{UF} , MPT, U_{O} , ECT, m, \overline{k} , \overline{C} , $F_{\overline{F}}$, $\sigma_{\overline{F}}$ ε_{σ} , $\delta \overline{e}_{T}$, EVT, and CØNST. The sequence of matrix data on the second input file, N18, is $\delta \overline{P}_{(\phi)U}$ and \overline{P}_{UPTJ} . All of these matrices are created in the Initial Generator except for \overline{P}_{UF} , $\delta \overline{P}_{(\phi)U}$, and \overline{P}_{UPTJ} which are computed in preceding FORMAT steps.

Table 7.1 shows the use of external files by each of the principle routines during the solution process. The routines are listed in their execution sequence. All relevant data stored on external files are listed at the top. In the table, the variable external file references alongside "IN" implies the data is read from that file in the corresponding

TABLE 7.1. LINEAR INCREMENTAL SOLUTION PROCESSING FILES

edy	= 6 F	210	or ,		115	10001	82	N8	
Internally Generated	DK 6F Ko					RIS			NIS
=3	ă	esufi			e en	N7		ie n	E S
Master Input File 2	M UPJ	N18	sole.	081	i i			ey e	
Fig	n(+) _d 9	81N				nse w		818	738
	CONST	N17 core			2	07.49			
	EVT		NI7						
	δēτ		N17	22		Ξ.			
	0,		N17 N19	N19 N16					N16
-	140		N17 N12		N12 N14				N A
£ .	ė,	High	E T	KI3		E.			
Master Input File 1	IO		N17	==		٤,			
ster	K		N17 N8	8 E		£*			
ž			VIN NIO			NIO.			
	ECT		NI7						
	o°	169	VI.						
	E	Don	N17					3/16/	
	25	de fit	N17			Ē.			
ery en	Routine	NITIAL IN OUT	Steps HATIN IN	READK IN	IGFBR IN OUT	PREEIG IN OUT	EIGSØL IN OUT	LINEAR IN OUT	IMBAL IN
		2	steps	noites	116131	u I	<u> </u>	[& t nem qo	07

Note * - this data no longer required for remainder of solution.

routine. File references alongside "OUT" imply the data is written to that file in the corresponding routine.

All output to the master output file, N2, occurs in routines NITIAL, IMBAL and routine ØUTPUT which is called by IMBAL. The FORMAT tape name and modifier of the master output is WINDØW, 52877 and is written by NITIAL. A description of each of the output matrices including the routine from which they originate is given below.

	FORMAT Matrix Name	Row and Column	
Routine	and Modifier	Dimensions	Description
NITIAL	CONST, 1	30 x 1	problem constants
NITIAL	TIME, 1	NTRVLS x 1	incremental time history
NITIAL	UZERØ, 1	NJTS x 3	original joint coordinates
NITIAL	DPBPHI, 1	NG x NTRVLS	incremental transformed applied loads
NITIAL	PBUPTJ, 1	NG x 3*NJTS	modal to joint T degree of freedom transform
ØUTPUT	RESPNS, B	6*NG x 1	modal response
IMBAL	BARS, 8	4 x NBAR	bar element response
IMBAL	MEMBRN, B	15 * NMEM	membrane element response
IMBAL	CELLS, B	54 * NCEL	cell element response

where ß is the increment number and NBAR, NMEM, and NCEL are the number of bar, membrane, and cell elements, respectively. Note that matrices BARS, MEMBRN, and CELLS will be present only if the corresponding element types are present in the structural model. Also, the names DPBPHI and PBUPTJ may vary since they are user defined in a preceeding FORMAT step. All other matrix names shown above are imbedded in the program code.

CORE UTILIZATION


All internal core storage is within array A in blank common. The array is implicitly partitioned by routine NITIAL where the beginning locations of each partition are computed. These beginning locations, or indices, are stored in labeled common block NDICES. In the allocation scheme, an overlay structure is used within array A where a given space is reused for different data as the solution process proceeds. For reference, the labeled common block declaration for NDICES is repeated here.

COMMON /NDICES/IVBDB, IVBB, IVBX, IDPBPU, IPBMUB, IDPPUB, IDBL, IVBL

- , IPBAR, IPBPHU, IKB, ICB, IMBAR, IMBARL, IDEBCL, ICØNST
- , ITIME, ISIGSS
- , IKBL, IZ, ICA, IQ, IVAL, IFTAU, IVEC, IEGSYS
- IU,LU,IECT,IEVT,IMPT,IDEBO,IDFBKO,IDSEB
- IFK, IFBK, IDEL, IDEDL, IFSFB, IFSFBB, IPBCU
- , IPBKU, ISIGFB, ISIGBH, IEPSIG, IPSLØN, ID, IDK
- , ISKB, ISKBB, ISCB, ISCBB, IPBUF, ISK, ITK, ICIB, IMEL

Each integer variable in NDICES is the first location of a partition in array A. For example, A (IVBDB) and A (IVBB-1) point to the first and last locations of the partition used to store matrix $\dot{\nabla}_g$. By definition, the length of the partition would be equal to the number of transformation modes NG.

The variables in NDICES are allocated in such a way as to represent three contiguous members. The members are from IVBDB through ISIGSS, from IKBL through IEGSYS, and from IU through IMEL. The member IVBDB through ISIGSS is permanently resident in array A, while the remaining to members are effectively overlaid. Graphically, the overlay structure can be shown as

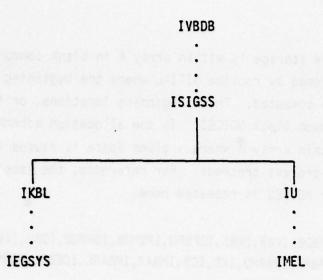

where the vertical positioning implies relative location in array A and IVBOB starts at A(1). The member IKBL through IEGSYS is used exclusively by routine EIGSOL for the eigen problem solution. Member IU through IMEL is used by all other parts of the program.

The actual allocation in the present code deviates from this scheme in that the partition associated with IU has been moved to the end of the permanently resident member IVBDB through ISIGSS. This was done so that the joint coordinate data would be permanently core resident. This is no longer a requirement in the linear incremental solution and could be changed to conform to the allocation scheme as shown above.

There are three other labeled common blocks used by the program, LIMITS, TAPES, and CLØCK. Detailed descriptions of each common block are given in Appendix D. Table 7.2 lists each of the common blocks and all routines which reference them.

LIMITATIONS

Sufficient space must be available in blank common array A to accommodate the problem. The size of array A required for a given problem is a function of many parameters. The dimensioned size of array A is 8000 which is stored

TABLE 7.2 LINEAR INCREMENTAL SOLUTION LABELED COMMON REFERENCES

Labeled Common Block	Referenced by Routine
CLØCK	TIMEQ, TSETQ
LIMITS	RESPNS, EIGSØL, IMBAL, LINEAR, NDXSET, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR
NDICES	RESPNS, EIGSØL, IMBAL, LINEAR, NDXSET, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR
TAPES	RESPNS, EIGSØL, IMBAL, LINEAR, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR

in variable NWØRK and initialized by routine NITIAL. Larger sizes can be defined by inputting the appropriate value of NWØRK on the first input data card which is read by NITIAL.

The size of NWØRK must be sufficient to satisfy the following relationships

NWØRK \geq 1200 + 5NM + 27NG + NELEMS + NTRVLS + 3NJTS + $8NG^2$ NWØRK \geq 6700 + 5NM + 113NG + NELEMS + NTRVLS + 4NJTS + NUM

where NG is the number of transformation modes $=(NG^2 + NG)/2$ MM is the number of physical elements (excludes point NELEMS mass elements) NTRVLS is the number of time increments NJTS is the number of joints MUM is the length of the MPT record (row dimension of and matrix MPT)

SECTION VIII NONLINEAR INCREMENTAL SOLUTION

OVERVIEW

This program accepts matrix data representing the structural model in mathematical form and solves the nonlinear equations of motion incrementally to obtain the structural response. The solution of the nonlinear equations is mathematically consistant with the theory developed in Part 1 of this report and the equations summarized in Appendix H of that document. However, the procedures followed by this program are not complete with respect to material nonlinearity nor is the code optimized for geometric nonlinearity. This will be covered in detail later in this section.

The FORMAT steps required to generate the input matrix data for this program as well as the card input required are described in Part 2 of this report. Detailed descriptions of each labeled common block and routine in this program are given in Appendix E of this document.

The core required by the program is problem dependent. Sufficient space must be available in blank common in which all working storage space is dynamically allocated during execution. This requirement is covered in detail in the latter part of this section (see LIMITATIONS). However, for a nominal size problem of 30 or less transformation modes, which is the predominant sizing factor, the program requires 170000 octal words for execution. The minimum requirement is 134000 octal words. In addition to the system input/output files 5 and 6, the program requires 23 external files of which 20 are used as scratch, two as master input, and one as master output.

Development History

The original design of this code was based on a theoretical approach

significantly different from that documented in Part 1. The design included strategies for the computations of both geometric and material non-linearities according to the original theoretical approach.

The theoretical approach in this early stage of development attempted to account for geometric nonlinearity by means of a scalar correction factor to be applied to the linear incremental modal response. The correction factor, \hat{a} , was computed as the single unknown of a third order polynomial whose coefficients included the effects of fictitious forces and deformations.

Subsequent application of this code to geometrically nonlinear problems proved unsatisfactory. Several alternate theoretical approaches to geometric nonlinearity were proposed, implemented in the code, tested, and either accepted or rejected. During this time, some code relative to material nonlinearity was deleted from the test versions of the program since 1) the test cases did not include these effects, 2) the material nonlinearity code was incomplete, and 3) because of the change in approach to geometric nonlinearity, the original program design and associated code for processing material nonlinearity was not compatible with the modified code either in an operational or theoretical sense. At this point in time, all executive routines and associated data relative to processing material nonlinearity according to the original theoretical approach were implemented throughout the code. However, the routines necessary for the actual updating of material properties and regeneration of element stiffness, damping, etc. were not yet ready for implementation.

The modifications made to the original code during this development process were intended as temporary changes for testing purposes only. It was assumed that subsequently, the final approach adopted would be implemented as efficiently as possible. However, time constraints did not permit reimplementation of the final approach to geometric nonlinearity

nor the completion of the material nonlinearity code. The final version of the code, therefore, reflects this development history and the consequences of time constraints. Under the heading FUTURE DEVELOPMENT at the end of this section, more specific information is provided regarding elimination of some of these shortcomings.

The final version of the code reflects the final theoretical approach adopted for geometric nonlinearity which is that documented in Part 1 of this report. The principle differences between this approach and the original is the iterative solution process for the modal response rather than the â approach, and the introduction of the cosine load variation or impedance matrix.

The following discussion of the Nonlinear Incremental Solution program covers those areas of processing consistant with the final theoretical approach to geometric nonlinearity. The actual code, however, still contains many operations based on the original approach to both material and geometric nonlinearity. These areas of the code are described under the heading FUTURE DEVELOPMENT at the end of this section. In addition, the documentation of each routine in Appendix E identifies these areas of code in more detail.

Organization

Figure 8.1 shows the functional organization of the program in terms of all labeled common blocks and the principle routines. Labeled common blocks are in parentheses. Vertical positioning in the figure depicts a basic overlay structure which could be implemented in the future.

Functionally, the program can be broken down into two major processing steps; the initialization step accomplished by the two main branches NITIAL and ØUTPUT, and the incremental solution accomplished by looping through the remaining branches, PREEIG, EIGSØL, FIFDEF, PREBAL, and IMBAL. The iterative solution for the modal response is an inner loop consisting of the EIGSØL and FIFDEF modules.

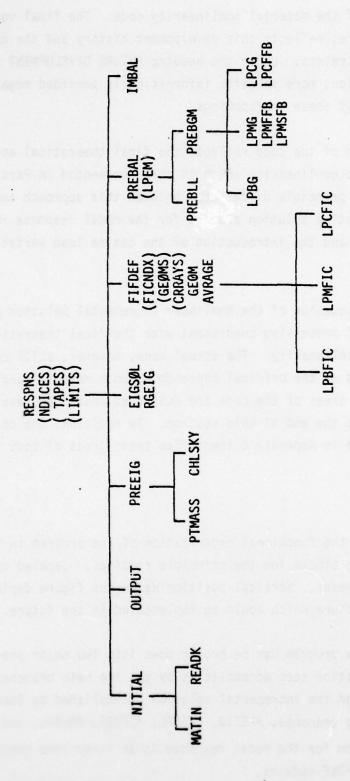


Figure 8.1. Nonlinear Incremental Solution Organization

Operation

The design of this program includes the following characteristics deemed essential for efficient and flexible operation. All working storage used by the program is in blank common. Partitions of blank common are dynamically allocated during execution for each of the matrices encountered during an increment of the solution process. The partitions for element matrices are sized according to cell elements which have the largest requirements. Full advantage is taken of matrix symmetry, both in storage and computations. Further, all element matrices are compressed if possible and reformatted into a single record for external storage.

The main program RESPNS consists of sequential calls to routines NITIAL and ØUTPUT followed by a loop whose index is the number of time increments as specified by the card input. Within this loop, routines PREEIG, EIGSØL, FIFDEF, PREBAL, and IMBAL are called in sequence where EIGSØL and FIFDEF are called repeatedly under control of an inner loop. The index of this inner loop, which is the iterative processing to account for geometric nonlinearity in the solution of the modal response, is a constant initialized as 5.

Routine NITIAL performs the first stage of initialization process. First, labeled common block TAPES is initialized with the FORTRAN logical unit numbers to be used for the scratch files. Routine MATIN is then called to read the first master input tape and copy each input matrix to individual scratch files. The input file contains matrices \bar{P}_{UF} , MPT, \bar{U}_{O} , ECT, m, \bar{k} , \bar{c} , \bar{F}_{F} , σ_{F} , ε_{σ} , $\delta\bar{e}_{T}$, EVT, and CØNST assembled in a previously executed FORMAT step. Only matrices CØNST and \bar{U}_{O} remain core resident.

All card input is then read by routine NITIAL consisting of run parameters and incremental time history. The first data card is read with a format (416, 111, 216) and contains the following run parameters:

BETA beginning time interval

NELEMS total number of physical elements (excludes point mass elements)

NTRVLS number of time intervals

NG number of transformation modes

HEAT "F", dummy logical control flag

NJTS number of joints

NWØRK optional extent of blank common

The array NTRVLS, ascending values of elapsed time, is then read with format (6E12.0).

Using the problem sizing information obtained from the matrix and card input, routine NITIAL then begins the process of allocating partitions of the blank common region for each array required in subsequent processing steps. The first location of each of these partitions is stored in labeled common block NDICES. The details of the dynamic allocation scheme used are given later in this section (see CORE UTILIZATION).

Next, the cell stress transform, $\sigma_{S\sigma}$, is initialized by routine NITIAL since it is constant for all cell elements.

Routine READK is then called by NITIAL to rewrite matrices \bar{k} , \bar{c} , $F_{\bar{F}}$, ε_{σ} , and $\delta\bar{e}_{\bar{T}}$ in optimum format. Element partitions of matrices \bar{k} , \bar{c} , and ε_{σ} are reformatted in upper triangular row-wise form to take advantage of symmetry. The partitions of matrices \bar{k} , \bar{c} , and $\delta\bar{e}_{\bar{T}}$ for each element are then written on a single file as three records. The partition of ε_{σ} is written to a separate file as one record. Element partitions of matrix $F_{\bar{F}}$ are compressed and written to a separate file as a single record.

NITIAL then reads the original joint coordinate data into core from the scratch file where it had been written by routine MATIN. Before exiting NITIAL, various blank common partitions are initialized to zero including those for \bar{v} , \bar{v} , $\delta \bar{P}_U$, $\bar{P}_{(M)U}$, $\delta \bar{P}_{(\phi)U}$, and $\delta \bar{E}_{CL}$.

Interspersed in the above initialization steps is the setting of problem parameter variables in labeled common block LIMITS.

Routine ØUTPUT transcribes certain input matrix data to the master output file. After augmenting array CØNST with the number of modes and time increments from the card input, the data written to the master output file are the augmented matrix of problem parameters, CØNST, the matrix of card input incremental time history, TIME, the matrix of original joint coordinates, UZERØ, and the contents of the second master input file, matrices DPBPHI and PBUPTJ, the incremental applied loads and the modal to joint T degree of freedom transform, respectively.

This concludes the initialization process. All data passed to the incremental solution process is on external files except for the arrays of incremental times, original joint coordinates, and problem constants. During the incremental solution, it is assumed that the element stiffness and damping remain constant and that no initial element deformations from thermal or other causes are present.

Incremental solution processing begins with the execution of routine PREEIG. First, the transformed incremental applied loads for the increment, if any, are read from the second master input file. The matrix of transformed loads \bar{P} is then partially assembled according to

$$\bar{P} = \delta \bar{P}_U - \bar{P}_{(M)U} + \delta \bar{P}_{(\phi)U}$$

where $\delta \bar{P}_U$ are the unbalanced forces from the previous increment, $\bar{P}_{(M)U}$ are the inertia forces from the previous increment, and $\delta \bar{P}_{(\phi)U}$ are the applied loads.

A loop is then entered whose index is the number of elements in the structural model. The following operations are performed for each element.

Read \bar{k} , \bar{c} , and $\delta \bar{e}_T$ from scratch file $\delta \bar{F}_{KO} = -\bar{k} \delta \bar{e}_T$ Read D from scratch file (D = $\bar{P}_{UF} F_F$) $\bar{P} = \bar{P} + D \delta \bar{F}_{KO}$ DK = D \bar{k} $\bar{K} = \bar{K} + DK D^T$ $\bar{C} = \bar{C} + D \bar{c} D^T$ Read \bar{F}_K from scratch file

FK = $\bar{F}_K + \delta \bar{F}_{KO}$ Write DK, \bar{k} and FK to scratch file

After all bars, membranes, and cell elements have been processed, the assembly of the transformed loads is completed by subtracting the modal damping forces of the previous increment $\bar{P}_{(C)U}$ from the partially assembled loads \bar{P} .

The sequence of operations above is slightly different on the initial pass for the first increment. Matrix D is computed from matrices \bar{P}_{UF} and \bar{F}_{F} read from scratch files and then matrix D is written to a separate scratch file. Matrix \bar{F}_{K} , the element forces from the previous increment, is initialized to zero rather than read from a scratch file. Matrix \bar{M} is computed according to

$$\bar{M} = \bar{M} + \bar{P}_{UF} m \bar{P}_{UF}^T$$

where M is implicitly initialized to zero as are K and C in the sequence above. After all bar, membrane, and cell elements have been processed, routine PTMASS is called by PREEIG to add contributions from point mass elements, if any, to matrix \bar{M} . Finally, any null rows/columns of \bar{M} are augmented on the diagonal with a value equal to 1 x 10⁻⁴ of the root mean

square of all non zero diagonal elements of the matrix. Routine CHLSKY is then called to decompose \overline{M} . The decomposition of this matrix then remains core resident for the remainder of the run.

The inner loop consisting of routines EIGSØL and FIFDEF is then executed for 5 iterations. Routine EIGSØL assembles the A matrix for which the eigenvalues, λ , and the eigenvectors, H, are obtained. Routine RGEIG, which is part of the EISPACK library (Reference 16), is called for solution of the eigen problem. The version of routine RGEIG in this code has been modified slightly from that in the EISPACK library. In an effort to reduce core space, the origin of the real input matrix was moved n² locations down from the origin of the matrix of eigenvectors where n is the order of the problem. This allows for the eigenvectors exclusively in the complex mode.

Input to EIGSØL are the core resident transformed modal stiffness, damping, decomposed mass, and loads matrices \bar{K} , \bar{C} , \bar{M}^{-1} , and \bar{P} , respectively. Also input for all iterations other than the first are the equivalent loads derived from fictitious force and deformation effects computed by routine FIFDEF which are also core resident. Output from EIGSØL are the modal displacements, velocities, and accelerations, $\delta\bar{\Delta}$, \bar{V} , and \bar{V} , respectively. The equations for solution of the modal response are given in Appendix H of Part 1 (H.161 through H.175).

Routine FIFDEF is then executed to obtain the effects of fictitious forces and deformations. Using the modal response computed by routine EIGSØL, and element forces due to fictitious deformations computed by FIFDEF in the previous incrment, FIFDEF processes each element individually to determine the element deformations, temporarily updated joint coordinate data, and compute element forces. This data is then used to solve for the element fictitious forces and deformations from which the equivalent transformed loads and element forces due to fictitious deformations are derived for use in the next iteration. The element forces due to

fictitious deformations are output to a scratch file for use by FIFDEF in the next iteration.

Routines GEØM and AVRAGE are called by FIFDEF to temporarily update geometry and average geometry, respectively. Routines LPBFIC, LPMFIC, and LPCFIC are called by FIFDEF to compute fictitious force and deformation effects from bar, membrane, and cell elements, respectively.

Routines EIGSØL AND FIFDEF are then executed again for the next iteration until 5 iterative steps have been completed. At the end of the iterative process, the final element forces and deformations from FIFDEF are passed on a scratch files to routine PREBAL, the next step in the incremental solution. The final modal response from EIGSØL consisting of the incremental displacements $\delta\Delta$, the cumulative velocities $\bar{\mathbf{v}}$, and the cumulative accelerations $\bar{\mathbf{v}}$ are core resident.

Routine PREBAL permanently updates joint coordinates, computes the incremental element forces, and regenerates matrices $F_{\overline{F}}$ and $\sigma_{\overline{F}}$ based on the new geometry. Before processing each element to accomplish these tasks, the transformed modal inertia forces are updated based on the accelerations at the end of the increment according to

$$\bar{P}_{(M)U} = -\bar{M}\dot{v}$$

Following this, the implicit initialization of the arrays for $\bar{P}_{(C)U}$ and $\bar{P}_{(K)U}$ to zero, and a call to routine PREBLL to perform some intermediate allocation of work space, the following operations are performed for each element.

Read \bar{P}_{UF} , $F_{\bar{F}_{\beta-1}}$, ECT, se and se from scratch files Call routine PREBGM to update coordinates and regenerate $F_{\bar{F}}$ and $\sigma_{\bar{F}}$ $D = \bar{P}_{UF}$ $F_{\bar{F}}$ Read \bar{F}_{K} and \bar{c} from scratch files

$$\vec{P}(C)U = \vec{P}(C)U + D\vec{c} \vec{F}_{\beta-1} \delta \dot{e}$$

Read $\vec{F}_{K_{\beta-1}}$ from scratch file

 $\delta \vec{F}_{K} = \vec{F}_{K} - \vec{F}_{K_{\beta-1}}$
 $\vec{P}(K)U = \vec{P}(K)U + D\vec{F}_{K}$

Write D, \vec{F}_{F} , $\delta \vec{F}_{K}$, and σ_{F} to scratch files

The last step in processing for an increment is the execution of routine IMBAL. First, the core resident matrices for cumulative transformed modal applied loads and displacements are augmented with their incremental components according to

$$\bar{P}(\phi)U = \bar{P}(\phi)U + \delta \bar{P}(\phi)U$$

$$\bar{\Delta} = \bar{\Delta} + \delta \bar{\Delta}$$

Next, routine IMBAL writes the model response to the master output file. The modal response is output as a column matrix with the name RESPNS and a subscript equal to the increment number. The data output consists of $\bar{\Delta}$, $\delta\bar{\Delta}$, \bar{v} , $\dot{\bar{v}}$, P_1 and P_2 arranged in that order in a column of length 6*NG where NG is the number of transformation modes. The P_1 and P_2 partitions of the column have no real significance.

Routine IMBAL then enters a loop for processing each element. This loop processes bar, membrane, and cell elements in that order. A matrix is written to the master output file for each element type that exists in the model. The following operations are performed for each element.

Read
$$\sigma_{\bar{F}}$$
, ε_{σ} , \bar{F}_{K} , $\varepsilon_{\beta-1}$ and $\delta \bar{F}_{K}$ from scratch files $\sigma = \sigma_{\bar{F}} \bar{F}_{K}$ for bars and membranes or $\sigma = \sigma_{S\sigma} \sigma_{\bar{F}} \bar{F}_{K}$ for cells

 $\varepsilon = \varepsilon_{B-1} + \varepsilon_{\sigma} \sigma_{F} \delta_{K}^{F}$ Write F_{K} , σ , and ε to master output file

The element forces, stresses, and strains are arranged in that order into a single column of the output matrix for each type of element. The matrix names used for the three element types are BARS, MEMBRN, and CELLS. Each is subscripted with the increment number.

This ends the processing for an increment. Execution of routines PREEIG, EIGSØL, FIFDEF, PREBAL, and IMBAL is repeated for each of the increments specified on the first input data card.

FILE UTILIZATION

All card input is read from the system input file 5 and all printed output is written to the system output file 6. Although FORTRAN logical unit 7 is declered in the PRØGRAM statement in the main program, it is never referenced. FORTRAN logical units 1 through 4 and 8 through 23 are referenced as external files using the variables N1 through N2O stored in labeled common block TAPES (see Appendix E, LABELED COMMON TAPES). Files N3O and N31, FORTRAN logical units 30 and 31, respectively are used by routine FIFDEF exclusively for passing data during the iterative solution of the modal response. File N23 is used as the master output file while N17 and N18 are used for the two master input files. All three master input/output files formatted consistent with FORMAT master input/output matrix tapes.

The code does not key on the FORMAT tape or matrix names in the input files. Matrix data is identified by its sequential position on the input files. The sequence of matrix data on the first input file, N17, is \bar{P}_{UF} , MPT, U_{o} , ECT, m, \bar{k} , \bar{c} , $F_{\bar{F}}$, $\sigma_{\bar{F}}$ ε_{σ} , $\delta \bar{e}_{T}$, EVT, and CØNST. The sequence of matrix data on the second input file, N18, is $\delta \bar{P}_{(\phi)U}$ and \bar{P}_{UPTJ} . All of these matrices are created in the Initial Generator except for \bar{P}_{UF} , $\delta \bar{P}_{(\phi)U}$, and \bar{P}_{UPTJ} which are computed in preceding FORMAT steps.

Tables 8.1 and 8.2 show the use of external files by each of the principle routines during the initialization and solution processes, respectively. The routines are listed in their execution sequence. All relevant data stored on external files are listed at the top. In the tables, the variable external file references alongside "IN" implies the data is read from that file in the corresponding routine. File references alongside "OUT" imply the data is written to that file in the corresponding routine.

The file utilization shown in Table 8.1 is for a typical increment and does not apply to the first increment which includes some initialization processing not shown.

At the end of an increment, the absolute designations of the external files listed in Table 8.2 under Last Increment and Current Increment are interchanged so that the variable file references remain unchanged for the next increment. The files "flip-flopped" in this manner are

N13 and N14 N3 and N19 N4 and N5 N9 and N10

During the iterative solution for moda! response, i.e. looping through routines EIGSØL and FIFDEF, routine FIFDEF passes the element forces due to fictitious deformations on files N30 and N31. File N30 contains element forces from the last iteration while file N31 is output with element forces from the current iteration. These files are "flip-flopped" at each iteration.

All output to the master file, N23, occurs in routines ØUTPUT and IMBAL. The FORMAT tape name and modifier of the master output is TAPE, 1 and is written by ØUTPUT. A description of each of the output matrices including the routine from which they originate follows on the next page.

TABLE 8.1. NONLINEAR INCREMENTAL INITIALIZATION PROCESSING FILES

19715							Maste	r Inp	Master Input File 1	le 1					Master Input File 2	Input e 2
Routine	a a	PUF	MPT		U _o EĊT	E	احدا	IU	<u></u>	Ř۳	وم	δĒΤ	EVT	CONST	δ [¯] (φ)υ [¯] υρυ	PupJ
NITIAL	IN	2 (2.2)						Mai Pi		epiesb s				N18 Core	6 badeti proje se	ба Бря п
MATIN	IN	7 LN LIN	N17	N17 N17 Core N12	N17 N12	N17 01N	N17	N17 N14	N17 N4	11N *	7 LN 9 LN	N17 N2	N17		ens te Biens's	
READK	IN PUQ						82	4 LN	N4 N13	282 .5	N19 N16	NZ N				efoliar.
PUTPUT	IN PUT	one di	10 2100	15-02-12 15-12-1				ality e		later:	- (Tayla)			16 (CS	81N	8 *

means this data no longer required for remainder of solution Notes: 1)

5

In the original version of the code, the first master input file, N17, is subsequently used as a scratch file by routine PREBALT in processing material nonlinearity. Consequently, the first master input file should always be a temporary file if the original code for material nonlinearity is reactivated.

TABLE 8.2. NONLINEAR INCREMENTAL SOLUTION PROCESSING FILES

Master Input Data	0(♦) 0(♦)	N18	2/10/1	stey enemed Tox GE	eman ki Natifish T. T	19 5M 19 60 5 5 1950
nos a fro	e . e	essentanii Enciresse		N7	N7	
Intermediate Data	OF KF	en torrie	E Nie	N30 N31	1.,0	8320 8880
ediat	I	paletron	N8			
terme	17 17 X	: Esboa tabart			9N	9N
In	위· · 氏	9N		90	8 .20	E239
ent	u	ala tad		ASSES IN F	£ ,	OLN
for crem	IT.	nonexer	19	NS NS	NS	NS NS
Data for int Incre (8)	a	de 1198		06 1 98	6 LN	1,00
Data for Current Increment (B)	 	31# - , ZN			N14	est st s erzeseen
	199 W 1995	S. C. W.	3,068,000	98 13 Pe	1 112 1	6N
Data from Last Increment (8-1)	FK	N4			N4	192512 01
ata Inc (8-	a	N3				
Last	14			N13	N13	
	e G					N16
Constant Data	k c će _T	IN	orangu ya	at 5gami banti 151	E	ramanni Politicok s
nstan	ECT	dealt .	040 ± 1801	N12	N12	ous to ac
S	PUF	in a min	tifw desir	E	I.N	Teve as
3 2 2 2 2 2 2		IN	NI DU	IN	IN	IN DOUT
Donting		PREEIG	E1GSØL	FIFDEF IN	PREBAL IN	INBAL

Routine	FORMAT Matrix Name and Modifier	Row and Column Dimensions	Description
ØUTPUT	CØNST, 1	30 x 1	problem constants
ØUTPUT	TIME, 1	NTRVLS x 1	incremental time history
ØUTPUT	UZERØ, 1	NJTS x 3	original joint coordinates
ØUTPUT	DPBPHI, 1	NG x NTRVLS	incremental transformed applied loads
ØUTPUT	PBUPTJ, 1	NG x 3*NJTS	modal to joint T degree of freedom transform
IMBAL	RESPNS, B	6*NG x 1	modal response
IMBAL	BARS, B	4 x NBAR	bar element response
IMBAL	MEMBRN, 8	15 * NMEM	membrane element response
IMBAL	CELLS, B	54 * NCEL	cell element response

where ß is the increment number and NBAR, NMEM, and NCEL are the number of bar, membrane, and cell elements, respectively. Note that matrices BARS, MEMBRN, and CELLS will be present only if the corresponding element types are present in the structural model. Also, the names DPBPHI and PBUPTJ may vary since they are user defined in a preceding FORMAT step. All other matrix names shown above are imbedded in the program code.

CORE UTILIZATION

All internal core storage is within array A in blank common. The array is implicitly partitioned by routine NITIAL where the beginning locations of each partition are computed. These beginning locations, or indices, are stored in labeled common block NDICES. In the allocation scheme, an overlay structure is used within array A where a given space is reused for different data as the solution process proceeds. For reference, the labeled common block declaration for NDICES is repeated here.


COMMON /NDICES/IVBDB, IVBB, IVBX, IDPBPU, IPBMUB, IDPPUB, IDBL, IVBL

, IPBAR, IPBPHU, IKB, ICB, IMBAR, IMBARL, IDEBCL,	ICONST
---	--------

- ITIME, ISIGSS
- , IKBL,IZ,ICA,IQ,IVAL,IFTAU,IVEC,IEGSYS
- , IU,LU,IECT,IEVT,IMPT,IDEBO,IDFBKO,IDSEB
- , IFK, IFBK, IDEL, IDEDL, IFSFB, IFSFBB, IPBCU
- , IPBKU, ISIGFB, ISIGBH, IEPSIG, IPSLØN, ID, IDK
- , ISKB, ISKBB, ISCB, ISCBB, IPBUF, ISK, ITK, ICIB, IMEL

Each integer variable in NDICES is the first location of a partition in array A. For example, A (IVBDB) and A (IVBB-1) point to the first and last locations of the partition used to store matrix $\dot{\vec{v}}_g$. By definition, the length of the partition would be equal to the number of transformation modes NG.

The variables in NDICES are allocated in such a way as to represent three contiguous members. The members are from IVBDB through ISIGSS, from IKBL through IEGSYS, and from IU through IMEL. The member IVBDB through ISIGSS is permanently resident in array A, while the remaining two members are effectively overlaid. Graphically, the overlay structure can be shown as

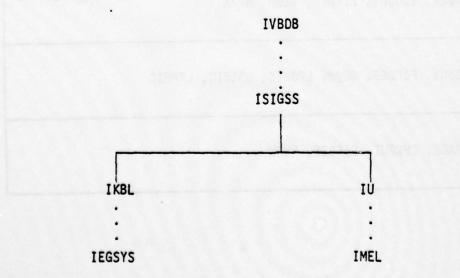

DOUGLAS AIRCRAFT CO LONG BEACH CALIF

AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL. PART 3. PROGRAMMING-ETC(U)

DEC 77 R C MORRIS

MDC-J-7174-PT-3

AFFDL-TR-77-99-PT-3

NL AD-A063 741 UNCLASSIFIED 2 OF 6 ADA 063741 10/12 10/12 10/12 Ø, - Nighter

TABLE 8.3. NONLINEAR INCREMENTAL SOLUTION LABELED COMMON REFERENCES

Labeled Common Block	References by Routine
NDICES	RESPNS, AVRAGE, CHKØUT, CHKPNT, EIGSØL, FIFDEF, FØRMAT, GEØM, IMBAL, NDXSET, NITIAL, ØUTPUT, PØLSØL, PBARUF, PREBAL, PREBGM, PREBGU, PREBLL, PREBST, PREEIG, PTMASS, READK
LIMITS	RESPNS, AVRAGE, CHKØUT, CHKPNT, EIGSØL, FIFDEF, FØRMAT, IMBAL, NDXSET, NITIAL, NKRK, ØUTPUT, PBARUF, PØLSØL, PREBAL, PREBGM, PREBGU, PREBLL, PREBST, PREEIG, PTMASS, READK
TAPES	RESPNS, CHKPNT, EIGSØL, FIFDEF, IMBAL, NITIAL, ØUTPUT, PBARUF, PREBAL, PREBGM, PREBGU, PREBLL, PREBST, PREEIG, PTMASS, READK
LPEM	CHKPNT, LPBG, LPCFFB, LPCG, LPCSFB, LPMFFB, LPMG, LPMSZD, LPMS1 LPMS2, ØUTPUT, PREBAL, PREBGM, PREBGU, PREBLL, PREBST
FICNDX	CHKØUT, EDGUNV, FIFDEF, GEØM, NKRK
GEØMS	EDGUNV, FIFDEF, GEØM, LPBFIC, LPCFIC, LPMFIC
CRRAYS	AVRAGE, CHKØUT, FIFDEF, NKRK

where the vertical positioning implies relative location in array A and IVBDB starts at A(1). The member IKBL through IEGSYS is used exclusively by routine EIGSØL for the eigen problem solution. Member IU through IMEL is used by all other parts of the program.

The actual allocation in the present code deviates from this scheme in that the partition associated with IU has been moved to the end of the permanently resident member IVBDB through ISIGSS. This was done so that the joint coordinate data would be permanently core resident.

There are six other labeled common blocks used by the program, LIMITS, TAPES, LPEM, FICNDX, GEØMS, and GRRAYS. Detailed descriptions of each common block are given in Appendix E. Table 8.3 lists each of the common blocks and all routines which reference them.

LIMITATIONS

Sufficient space must be available in blank common array A to accommodate the problem. The size of array A required for a given problem is a function of many parameters. The dimensioned size of array A is 8000 which is stored in variable NWØRK and initialized by routine NITIAL. Larger sizes can be defined by inputting the appropriate value of NWØRK on the first input data card which is read by NITIAL.

The size of NWØRK must be sufficient to satisfy the following relationships

$$NM = (NG^2 + NG)/2$$

NTRVLS is the number of time increments

NJTS is the number of joints

and NUM is the length of the MPT record (row dimension

of matrix MPT)

FUTURE DEVELOPMENT

In the preceding description of the final version of the Nonlinear Incremental Solution, a number of processing operations designed for the original theoretical approach were not discussed. These will be covered here as a guide in future development, provide more insight to the code as it exists, and to promote salvaging of code where possible.

The modifications necessary to progress from the original version of the code to the final version were grouped into three UPDATE steps.

Table 8.4 lists each of the decks modified in each of the three steps as well as the UPDATE identification name associated with subsets of these modifications. A description of the changes made is also provided. These modifications are a mixture of corrections to errors, supplements to capability, changes in order to implement the final approach to geometric nonlinearity, and deletions of some material nonlinearity code.

In order to preserve the original design concepts and provide a record of program development, the original source code and the three sets of deck modifications as well as the final source code have been included as part of the program delivery to the contractor.

Applicability of Original Design Concepts

In order to understand the Nonlinear Incremental Solution code in its final form, some background information regarding the original theoretical approach is necessary.

The original theoretical approach to geometric nonlinearity was to scale the linear incremental model response by a factor â computed as a function of fictitious force and deformation effects during the increment

TABLE 8.4. ROUTINES MODIFIED DURING NONLINEAR INCREMENTAL SOLUTION DEVELOPMENT

STEP	*IDENT	DECK	DESCRIPTION
- cent c code gc gc nen-	СНК	FIFDEF GEØM AVRAGE NKRK	Suppress intermediate printing from fictitious force module designed into code for check out purposes only.
	FIXUP	CHKØUT FIFDEF AVRAGE NDICES ARRAYS LPBFIC VECT	Error corrections for fictitious force module.
i v Od stab i v Od	ERRPRT .	FIFDEF GEØM EDGUNV LPBFIC AVRAGE	Delete intermediate printing from fictitious force module introduced into code for debugging during initial testing.
	TEMP1	RESPNS IMBAL PØLSØL PREEIG READK NITIAL HALT	Add routine HALT, modify intermediate printing, error corrections, and modify imbalance test.
	TEMP2	PREMBAL IMBAL EIGSØL	Modify intermediate printing, introduce output data for intermediate postprocessor, and delete portion of code in PREBAR relative to material nonlinearity.

TABLE 8.4. ROUTINES MODIFIED DURING NONLINEAR INCREMENTAL SOLUTION DEVELOPMENT (Continued)

STEP	*IDENT	DECK	DESCRIPTION	
2	ТЕМРЗ	RESPNS. PREBLL CHKPNT FIFDEF PREEIG	Modify intermediate print, error cortions, remove some problem dependent replace routine JØRDAN, and introduciterative approach to geometric nonlity, cosine load variation, and augmation of M null rows and columns with diagonal terms having small values.	code e inear en-
	2001717	NITIAL	stroennos neval Tribleo	
		LPBFIC	Fight touce module.	
		IMBAL	SIDENYA	
		EIGSØL	\$3000k 30kl .	
		PREBAL JØRDAN	ZYARRA	
		RESPNS	Add routine PTMASS, accommodate poin mass elements, delete preliminary po	
3	TEMP4	RESPNS IMBAL NITIAL PREEIG PREBAL READK ØUTPUT PTMASS	Add routine PTMASS, accommodate poin mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data
3	TEMP4	IMBAL NITIAL PREEIG PREBAL READK ØUTPUT	mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data
3	TEMP4	IMBAL NITIAL PREEIG PREBAL READK ØUTPUT	mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data
3	TEMP4	IMBAL NITIAL PREEIG PREBAL READK ØUTPUT	mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data
3	TEMP4	IMBAL NITIAL PREEIG PREBAL READK ØUTPUT	mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data
3	TEMP4	IMBAL NITIAL PREEIG PREBAL READK ØUTPUT	mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data
ged abub	Destroint	IMBAL NITIAL PREEIG PREBAL READK ØUTPUT PTMASS	mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data t-
323	becred of	IMBAL NITIAL PREEIG PREBAL READK ØUTPUT PTMASS	mass elements, delete preliminary po processor output, process U as an N on external files, introduce output generation consistant with final pos processor.	st- J x 3 data t-

(see History of Development at the beginning of this section). No processing of an iterative nature was involved here. However, in accounting for material nonlinearity, a second iteration through the entire incremental solution process was required. For this solution, average modal stiffness and damping matrices, \bar{K} and \bar{C} , were used. The averaging was done using the initial \bar{K} and \bar{C} matrices at the beginning of the increment and the \bar{K} and \bar{C} computed at the end of the first iteration which included the effects of changes in the material properties of any elements due to plasticity and the failure of any elements that occurred in the first solution. The criteria for determining the necessity of this second iteration was the equilibrium imbalance test at end of the first solution.

For the second iterative solution, some data computed in the first iteration was passed on external files since it did not require regeneration. This included the element stiffness and damping matrices and some geometric data based on initial geometry for the increment generated for the computation of fictitious forces and deformations.

In the code, the variable denoting that the second iterative pass is being processed is called BETBAR for β . This flag is used to control which operations of the complete solution process are to be executed during the second iteration. Array A (IDEBCL), which is core resident, is used to flag those elements that fail during the solution process. This array is primarily used to store the dissipated damping energy due to temperature change in each element, $\delta \bar{E}_{CL}$ (always positive). Elements which had failed during previous increments were flagged by a -10 and elements failing during the current increment were flagged as -1. The values in array A (IDEBCL) are tested at various points in the code to detect failed elements and omit processing for such elements.

The input matrix EVT was intended as a data file for those element parameters which may vary during the solution process. These parameters included element temperature, current material properties, stress/strain

state in terms of equivalent stress and stress, increment at which last update occurred, increment at which element failed, etc.

The allocation of all data to external files for this original program design is given in Table 8.5. The following data quantities listed in the table are redefined here for clarification.

$$D = \overline{P}_{UF} F_{\overline{F}}$$

$$DK = D \overline{K}$$

$$FK = \overline{F}_{K_{B-1}} + 6\overline{F}_{K_{0}}$$

$$\overline{C}\overline{I} = D \overline{C} D^{T}$$

 D_0, G_f = geometric data for the generation of fictitious forces and deformations

where each of the above is computed individually for each element.

Table 8.6 shows the intended use of these files during a typical increment of the solution process. Certain initializing operations are performed in the first increment which are not shown here. The 20 external files used are listed across the top while the major modules appear in their execution sequence at the left.

This information should provide more insight to the code, the reasoning behind some operations still present there, and reduce the effort required for future modifications. The basic design features of this program enhance its adaptability to changes in methodology. These features include the library of utility routines to perform a wide variety of incore matrix operations and the partitioning of blank common for required array space.

Some other features of the code which should be pointed out are the intermediate print capabilities in routines CHKØUT and CHKPNT. Routine CHKØUT is used exclusively in the FIFDEF module to output intermediate calculations at various predetermined points in the computations. In

TABLE 8.5. NONLINEAR INCREMENTAL SOLUTION ORIGINAL DESIGN FILE ALLOCATION

	Increment		
β-l Files	β Files	β Files	Resident Data
N1	N2		(k̄ ₁ , c̄ ₁ , δē _{T1} , i=1,NELM)
N3	N19	N19	(D _i , i=1,NELM), (D _{Oi} ,G _{fi} , i=1,NELM)
N4	N5	N5	(Fk;, i=1,NELM)
	N6		(DK _i , CI _i , FK _i , i=1,NELM)
	N6		(σ _{Fi} , δ _{FKi} , i=1,NELM)
5		N6	(DK _i , i=1,NELM)
6., 15.	X-1	N6	(σ _{F₁} , δ _F _{K₁} , i=1,NELM)
			(δe _i , δė _i , i=1,NELM)
		N8	(Se;, Se;, 1=1,NELM)
N9	NIO		(EVT _i , i=1,NELM), (ε_i , i=1,NELM)
	ווא		(P _{UFi} , i=1,NELM)
Sal 9	N12		(ECT;, i=1,NELM), MPT
N13	N14	N1 4	(FF; i=1,NELM)
	N15		(8FKo; i=1,NELM)
N16	N17		(ε _{σ,} , i=1,NELM), U
	N18		δP(φ)U
		N20	(RAVE, CAVE, 1=1, NELM)

Note: NELM = number of physical elements (excludes point mass elements)

TABLE 8.6. NONLINEAR INCREMENTAL SOLUTION ORIGINAL DESIGN PROCESSING FILES

	3	£	. 5	Data from Last Increment (a-1)	- A	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	3	E4 B	Data for Current Increment (6) VT K co FF D FK	5 .0	(a)	D	F. F.	•	E M E	2	o o	or or in	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Averaging Pass (p) Averaging Kave del		Constan	Constant Data	
5			35	£	8	2	1	N 0	0 2	E .	1	8	55	N O		2 2	- 2	¥ 9	\$			=	NI2 NI2	1 ~
		~2	3 (98)		~	~ 2		- Mag	1871				la la		×2			(14)	>2				ubi i	
1			36.			ar.		7.1	Ø., I										230				SE.	-
				~ 2											~ 2	22	2			113		~ 3		+
			198					341		,							71		197	1			~ 2	
	•	~2	œ	~2	-	~ 2	u	3	>≥	=	*5	25	× 2			~ 2		>2	~3	>≥		~2	~ 2	-
	Test FIFDE	F. P	ibriu LSBL,	m 1mb	AL. A	NO 14	Test equilibrium imbalance; if satisfactory, go to IMBAL FIFDEF, PMLSML, PREBAL, AND IMBAL as follows.	facto	7, 90	to	HBAL	2	=	uns a	Isfac	tory.	2	xecut	- P	; if unsatisfactory, re-execute PLEEIG, EIGS	GSPL.	28		-
		-4			~										>≥					~2				-
							8.5		10.34				~2		~2	~ 2	~ 2			38	- ž	~ 2	~ 2	-
				~ 2	~ ~	~ 2	U				>2	÷ 2	×2				25	> ē	~ 2	~ 2	-	~ X		
						~ 2	>\$			~			~ 2	× 2			~ 2	111						

Notes: C denotes core resident
R denotes read
W denotes write
RM denotes rewind

the original design source code, calls were made to this routine to initiate printing. As noted in Table 8.4, many of these calls which were eliminated can be reactivated for checkout purposes. Routine CHKPNT is called exclusively by routine PREBAL at preset points in the code. Depending on an array of flags in routine CHKPNT corresponding to each of these points in routine PREBAL, specific arrays are output to aid in debugging the solution process. The actual printing in this instance is done by routine PLPP, a general print routine for any real or integer array.

Design and Functional Improvements

Even though the current version of the code and its approach may not be the ultimate method adopted for geometric nonlinearity, the redundancies and inefficiencies now present and planned strategies for implementation of material nonlinearity should be discussed so that they be considered in any future development effort.

Obviously, all unnecessary code relative to original theoretical approach should be eliminated. This includes all calculations relative to â and passing of certain data on external files. That data identified in Tables 8.1 and 8.2 is the only data presently required for the incremental solution. All other data processing on external files in the final code is unnecessary. Some routines included in the source code of the final version are no longer used, i.e. FØRMAT and PØLSØL.

In the iterative solution for geometric nonlinearity, routine EIGSØL recomputes the eigenvalues and eigenvectors of the A matrix at each iteration. This is unnecessary since the A matrix is constant during the iteration. Only that part of the transformed load matrix due fictitious forces and deformations changes at each iteration necessitating the solution of only those modal response equations which involve the load matrix \bar{P} .

Further, in the last iteration for geometric nonlinearity, routine FIFDEF need only recompute the final element forces \bar{F}_K which are a function of the input data to FIFDEF from EIGSØL. The calculations for fictitious force and deformation effects in FIFDEF are unnecessary since their only use is as input to routine EIGSØL which will not be called again for the current increment.

That portion of code in routine PREBAL relative to material nonlinearity, which was deleted in modification step 1 under *IDENT TEMP2 in Table 8.4, contained computations, logic, file processing, and calls to routines consistent with the original design for material nonlinearity. Included in this sequence of code is a call to routine PREBST. This routine was to be the executive routine for the updating of element material properties and regeneration of element stiffness and damping matrices. Under control routine PREBST, the stress/strain state of the element would be computed and tested to determine whether or not regeneration of stiffness and damping were necessary. The testing would be based on the amount of change in the following parameters since the element was last updated.

- 1) Temperature recompute material properties
- Equivalent stress in plastic range recompute Young's Modulus, E
- 3) Equivalent strain use new element geometry.

At this point in the processing sequence, the data necessary for testing and regeneration would be available from the following sources:

- Array A(IDEBCL), which is core resident, would identify previously failed elements.
- 2) Matrix MPT, the core resident array of material property coefficients, would be used to compute new material properties as a function of temperature.

- 3) Array A(IEVT), which is core resident, would provide element material properties and other data parameters from the time of last update, e.g. temperature, equivalent stress/strain, etc.
- 4) Current element geometry would be available in core from the previous execution of routine PREBGM.

The following new code and modifications would be required in order to make this approach to element updating operational.


- All necessary data is currently available with the exception of some data in array A(IEVT), e.g. increment number of last update, temperature at time of last update, change in temperature since last update, equivalent stress/strain at time of last update, etc.
- 2) Routine PREBST, which is a dummy routine in the original version of the source code, has to be designed and coded as do the routines required for the testing to determine if updating is necessary. Routine PREBST calls the testing routines and, if necessary, calls the regeneration routines.
- 3) Those routines necessary for the actual computation of new material properties and the regeneration of the compliance, stiffness, and damping matrices must be provided. Nearly all these routines are available from the Initial Generator. The routines for generation of element geometry (routines LPBG, LPMG, LPMFFB, etc., under routine PREBGM in Figure 8.1) were also obtained from the Initial Generator and implemented in a manner simulating the program structure of the Initial Generator. This was done in anticipation of implementing the other Initial Generator routines for compliance, stiffness, and damping matrix regeneration.

SECTION IX POSTPROCESSOR

OVERVIEW

This program accepts output data from the linear incremental or nonlinear incremental solution and selectively prints data according to user input criteria. The card input prepared by the user is described in Part 2 of this report. The format of the output data from either linear or nonlinear incremental solution is described in Section VII of Part 3. Detailed descriptions of each routine and labeled common block in this program are given in Appendix F of this document.

The core required by this program without the use of overlay or segmentation is 60000 octal words. In addition to the system input/output files 5 and 6, three external files are required. These three files, referenced as integer variables ITP1, ITP2, and ITP3, are used for program generated selection tables, incremental solution input data, and selected partitions of input matrix PBUPT, respectively. Organization of all routines in this program is shown below. Labeled common blocks are shown in parentheses.

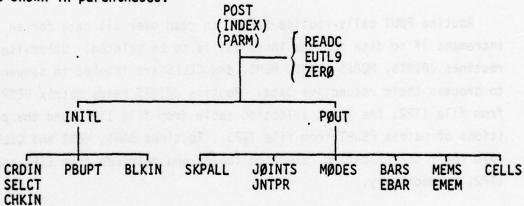

A singularly dimensioned array A in blank common is used for all data storage. Two labeled common blocks, PARM and INDEX, are used by the program. PARM is used to store problem parameters from input matrix CØNST as well as program generated selectivity flags. INDEX is used

to store beginning locations or indices of partitions within blank common array A.

All initialization takes place under routine INITL. Initialization consists of allocating array space, processing all card input, assembling selection tables for joints, bars, membranes, and cells, assembling required partitions of input matrix PBUPT, and initializing line headers and print flags for the forces, stresses, strains, and equivalent stresses for each type of element.

Routine INITL reads matrices CØNST, TIME and UZERØ from file ITP2 and stores this data in core. Array space is then allocated followed by a call to routine CRDIN to process all card input data. Matrix DPBPHI is read over by routine INITL as is matrix PBUPT if no joint data is requested for printing. If joint data is requested, matrix PBUPT is read and processed by routine PBUPT. Routine BLKIN is then evoked to initialize all line headers and print flags for each type element.

Routine PØUT calls routine SKPALL to read over all data for an increment if no data for the increment is to be printed. Otherwise, routines JØINTS, MØDES, BARS, MEMS, and CELLS are invoked in sequence to process their respective data. Routine JØINTS reads matrix RESPNS from file ITP2, the joint selection table from file ITP1, and the partitions of matrix PBUPT from file ITP3. Routines BARS, MEMS and CELLS read their corresponding selection tables and matrices from ITP1 and ITP2, respectively.

FILE UTILIZATION

All card input is read from file 5. All printed output is written to file 6. The three scratches files required, ITP1, ITP2 and ITP3, are initialized in the main program as files 1, 2 and 3, respectively.

File ITP1 is used to store joint, bar, membrane, and cell selection tables. A selection table is assembled and written to ITP1 only if that type data exists in the model and at least one of the subsets of that type data has been requested for printing. Routine SELCT reads the card input for the selection tables which are present, assembles the table accordingly, and writes the table onto ITP1.

File ITP2 contains the incremental solution output data consisting following FØRMAT matrices:

CØNST Matrix of problem constants

TIME Matrix of incremental time

UZERØ Matrix of original joint coordinates

DPBPHI Matrix of incremental loads

PBUPT Modal to T degree of freedom transformation matrix and for each increment:

RESPNS Modal response matrix

BARS Bar element response matrix

MEMBRN Membrane element response matrix

CELLS Cell element response matrix

If bar, membrane, or cell element data does not exist in the modal, the corresponding matrix will not be present in the incrmental solution output.

File ITP3 is used to store partitions of matrix PBUPT. Routine PBUPT assembles the partitions according to the joints selected for printing coordinate, displacement, velocity, and/or acceleration data.

CORE UTILIZATION

All array space is allocated into a singularly dimensioned blank common array A. The beginning location of each partition within array A is stored in labeled common block INDEX. Labeled common block

PARM is used to store problem parameters and print selection flags. Both labeled common blocks, PARM and INDEX, are used by all principle routines.

Some of the more pertinent problem parameters stored in labeled common block PARM are described below.

NJTS	number of joints
NBARS	number of bars
NMEMS	number of membranes
NCELS	number of cells
NMØDS	number of modes
NTVLS	number of time intervals

LIMITATIONS

Sufficient space must be available in blank common array A to accommodate the problem. The size of array A required for a given problem is a function of the problem parameters stored in labeled common block PARM. If IWØRK is the length of array A, and defining L_1 as

and L_2 as the larger of NJTS, NBARS, NMEMS, and NCELS, then

IWØRK
$$\geq$$
 640 + L₁ + L₂ + 2*NTVLS + 3*NJTS + 3*NMØDS

The integer IWØRK is the first word of blank common and is equal to the size of array A in blank common. The integers ILNMAX and ICLMAX are stored in labeled common block INDEX and are equal to the maximum number of lines and columns printed on each page. These three variables, IWØRK, ILNMAX and ICLMAX, are initialized to 10000, 60, and 8, respectively. However, the user may override these values on the first input card provided the following is true of the user specified values:

IWØRK ≥ 10000 ILNMAX ≥ 20 $8 \ge ICLMAX \ge 1$

SECTION X PROJECTED IMPROVEMENTS

EFFICIENCY

The following modifications to the final version of the program code are recommended in order to reduce the machine resources required for execution and to reduce execution time.

- Increase the dimensioned size of the arrays in labeled common blocks JØRT and WRK in the Initial Generator so that they take advantage of the available space defined by labeled common blocks EDØF and ISEQ, respectively (see Section V, LIMITATIØNS).
- 2) Where possible, take advantage of symmetry in the generation of \bar{k} , \bar{s} , m and ε_{σ} in the Initial Generator.
- Use SEGLØAD in the implementation of the Linear and Nonlinear Incremental Solution programs.
- 4) Delete excess files declared in the PROGRAM statements of the Linear and Nonlinear Incremental Solution programs.
- 5) Delete unnecessary copies of master input data to scratch files in routine MATIN of the Linear and Nonlinear Incremental Solution programs.
- 6) In the Linear Incremental Solution, eliminate the allocation of space for the joint coordinate data since it is not required.
- 7) Eliminate all unnecessary processing in the Nonlinear Incremental Solution program left over from the original design (see Section VIII, FUTURE DEVELOPMENT).
- 8) Eliminate all unnecessary printing from the Nonlinear Incremental

Solution program left over from program check out.

- 9) Provide the logic and processing commands to store joint coordinate data on an external file during the eigen problem solution (EIGSØL) in the Nonlinear Incremental Solution.
- 10) Perform the functions of routine PREEIG (regeneration of \bar{K} , \bar{C}) in routine PREBAL of the Nonlinear Incremental Solution.

EXTENDED CAPABILITY

The following modifications to the final version of the program code are recommended in order to extend basic capabilities already in existance.

- Development convergence criteria and necessary code to end the iteration process through routines EIGSØL and FIFDEF for geometric nonlinearity in the Nonlinear Incremental Solution program.
- Introduce the cosine load variation or impedence matrix to the Linear Incremental Solution program.
- 3) Modify the processing matrix $\delta \bar{e}_T$ in routine PREEIG of the Nonlinear Incremental Solution to account for the fact that $\delta \bar{e}_T$ is presently assumed constant.

Introduction of additional capabilities to the Nonlinear Incremental Solution such as material nonlinearity and restart will be contingent on theoretical development. Guidelines for program modifications to accommodate material nonlinearity are discussed in Section VIII under FUTURE DEVELOPMENT. In this particular area, consideration should be given to the use of random access files for external storage of matrices \bar{k} , \bar{c} , $\delta \bar{e}_T$, and EVT in element partitions. This would provide for rewriting these matrices only for those elements whose properties change rather than for all elements as the present design requires.

APPENDIX A

LAMINATE GENERATOR ROUTINES

naldoede@ move3

APPENDIX A LAMINATE GENERATOR ROUTINES

This appendix contains detailed descriptions of all routines in this program. Table A gives page number references within this document for documentation of each routine.

The detailed description of each routine is divided into the following subheadings:

Algorithm verbal flow chart of routine logic and data flow
Input/Output description of all external data set input/output
Argument List name, type, and description of each argument
Labeled Common list of all labeled common blocks declared
Subroutines Called list of all routines called

Error Detection description of tests made for errors and action

TABLE A. INDEX TO LAMINATE GENERATOR ROUTINES

																				Page
																			14	a tone
MAIN PROGRAM	LAMGEN				•				•	•	•	•		•	•	•	•	•	•	116
FUNCTION	ABSVAL										•								•	118
SUBROUTINE	CELGEN		•			•														119
SUBROUTINE	CRØSSQ				•															121
FUNCTION	DØT	•					•				•	•		•	•	•				122
SUBROUTINE	IØXS .				•															123
SUBROUTINE	JTGEN								•											124
SUBROUTINE	RIDCEL											•								126
SUBROUTINE	RJØINT																			128
SUBROUTINE	RLAYER						•	•				•								130
SUBROUTINE	RTVARI				•		•			•									•	132
SUBROUTINE	UVEC .			•									•							134
SUBROUTINE	WCELL			•				•												135
SUBROUTINE	WJØINT													•						136
SUBROUTINE	WNØRM	•			•			•		•		•	•	•			•			137

Argument List

MAIN PROGRAM LAMGEN

The main program allocates core and calls the input, calculation, and output subroutines.

Algorithm

Two arrays are set up -- A and N -- and every element in the A array is initialized to 10^{30} . The first subroutine called is IØXS to read and write Data Code 2 data (if any). The next subroutine called is RLAYER. The element and joint numbering increments read by this subroutine are required by MAIN to allocate sufficient core for generated cell and joint data. The message

'LAYERS READ NO. LAYERS = nnnn'

is printed after a successful return from RLAYER. The call to RIDCEL is next. The number of quadrilaterals and the joint numbers of their corners read in by this subroutine are required to allocate sufficient core to contain the generated joint data. After calculating the total number of cells that will have to be handled the message 'CELLS HAVE BEEN READ NO. CELLS = nnnnn NO. QUADS = nnnnn' is printed. The subroutine that reads the joint data, RJØINT, is called next, and after the largest joint number to be handled is calculated, the message

'JOINTS HAVE BEEN READ NO. JOINTS = nnnnn'

is printed. The subroutine CELGEN, called next, sets up an array of quadrilateral corner joint numbers required by RTVARI and JTGEN, which are called next. The subroutines WJØINT, WNØRM, and WCELL follow, with calls to IØXS interspersed to keep the numerical order of the Data Codes on the output files intact.

Input/Output

There is no input, all output is printed on file 6.

Argument List

Labeled Common

None

Subroutines Called

IØXS, RLAYER, RIDCELL, RJØINT, CELGEN, RTVARI, JTGEN, WJØINT, WNØRM, WCELL

Error Detection

If an error flag is received from one of the reading subroutines (RLAYER, RIDCEL, or RJØINT) indicating necessary data was not read, the message

'JOB TERMINATED'

is written and execution of the program is stopped.

FUNCTION ABSYAL

This routine finds and returns the length of a vector.

Algorithm

The three components of the input vector are squared, the square root of the sum of the squares is the length of the vector.

Input/Output

None

Argument List

C

A real array of components of a vector

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE CELGEN

This routine generates the data required to form the cells of the laminate and sets up an array of joint numbers that correspond to the corners of quadrilaterals.

Algorithm .

Data for the cells is generated for a stack of cells under each quadrilateral, one stack at a time. First, the stress orientation angle and material number for each cell in the stack are stored in the cell array. Then, for each corner of the quadrilateral, the number of the joint at the corner is stored in an array in numerical order (i.e., no duplication of joint numbers), a cross product is formed of the two sides of the quadrilateral forming the corner, a quarter of the magnitude of which is added to the running sum in the area array for that joint, and the unit vector of which is added to a running sum in the surface normal array, and finally, the numbers of the joints in the stack and stored in the cell array in the correct location for each cell in the stack. The joint coordinates in the stack are checked to see if any of the joints has been already defined by the user. If a user-defined joint does exist below the quadrilateral corner, the joint number of the corner is made negative as an indicator for later subroutines (JTGEN & RTVARI).

Input/Output

None

Argument List

VJØINT	A real array of coordinates of joints stored by joint number
IDCELL	An integer array of numbers of the joints on the eight corners and the material number of each cell, stored by cell number
ZETA	A real array of stress orientation angles

ML An integer array cell number increments, joint number increments, and material number of each layer

An integer array of joint numbers corresponding to the corners of quadrilaterals, stored in numerical order

JQUADP An integer array of numbers of cells that have only four defined corners (quadrilaterals) stored in order in which

they were read

VNØRM A real array of running sums of unit vectors at each quad-

rilateral corner, stored in the same order as the joints

in JØINTP

AREA A real array of areas associated with the joints on

the quadrilateral corners

NJØINT An integer scalar defining the total number of joints

NJT An integer scalar defining the number of joints that

define quadrilateral corners

NCELLS An integer scalar defining the total number of cells

NQUAD · An integer scalar defining the number of quadrilaterals

NL An integer scalar defining the number of layers

Labeled Common

None

JØINTP

Subroutines Called

CRØSSQ, UVEC, ABSVAL

Error Detection

SUBROUTINE CRØSSQ

This routine forms and returns the cross product of two input vectors.

Algorithm .

The mathematics of forming a cross product are performed and the resultant returned through the argument list.

Input/Output

None

Argument List

U A real array for the first input vector

V A real array for the second input vector

W A real array for the resultant vector

Labeled Common

None

Subroutines Called

None

Error Detection

FUNCTION DØT

This routine calculates the dot product of two input vectors.

Algorithm

The pairs of x, y, and z components of the two input vectors are multiplied and added.

Input/Output

None

Argument List

U A real array for the first vector

V A real array for the second vector

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE IØXS

This routine reads selected data and directly writes it back out on files 6 and JTAPE.

Algorithm

Given beginning and ending Data Code numbers for a series of Data Codes, all data with Data Codes in the series is read from ITAPE and written in the same order on file 6 and, if JTAPE \neq 6, on file JTAPE.

Input/Output

Input is read from file ITAPE; output is written on files 6 and JTAPE.

Argument List

ITAPE	An integer scalar defining the number of the input file
JTAPE	An integer scalar defining the number of one of the output files
JCØDE	An integer scalar defining the starting Data Code number
LCØDE	· An integer scalar defining the ending Data Code number

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE JTGEN

This routine generates the joint coordinates for the joints in the laminate.

Algorithm

The first step is to unitize the normal vectors created by CELGEN. The coordinates of the joints within the laminate are generated either along these normal vectors or along lines connecting user-defined joints in the laminate. The coordinates are generated for the stack of joints under each quadrilateral corner. If the coordinates of the first joint in the stack are other than the input values, the new coordinates are generated by multiplying the local normal vector by the input offset and adding that vector to the input location of the first joint. If the joint number stored in the array of quadrilateral corner joints is negative, indicating there is a user-defined joint in the stack of joints, there is a branch to the segment of the subroutine that constructs unit vectors between user defined joints in the stack and calculates the intervening joint coordinates along these unit vectors. If the joint number at the top of the stack is positive all the coordinates of joints in the stack are generated along the local surface normal.

Input/Output

None

Argument List

VJØINT A real array of coordinates of each joint

ML An integer array of layer information: element number increments, joint number increments, and material number

TL A real array of layer thickness, including the offset of the true outer laminate surface from the input laminate surface joints

TVARI

A real array of layer thickness for each stack of joints

that does not have internal user-defined joints

JØINTP

An integer array of joint numbers corresponding to quad-

rilateral corners stored in numerical order

VNØRM

A real array of surface normal vectors corresponding to

quadrilateral corners, stores in the same order as the

joints in JØINTP

NJT

An integer scalar defining the number of layer

Labeled Common

None

Subroutines Called

UVEC, DØT

Error Detection

SUBROUTINE RIDCEL

This routine reads the input file searching for Data Code 40 data (cell data) which it stores.

Algorithm .

The input file is read until a Data Code 40 card is encountered. The file is then backspaced one record and the first cell data is read and stored in an array in a location corresponding to the cell number read. If the input number used to define the fifth corner is zero, the cell is called a quadrilateral and its number is stored in another array. The file is read and the data stored until a cell number of 9999 is read or the Data Code on the card is not 40.

Input/Output

The input is read from file ITAPE.

Argument List

Argument Lis	
IDCELL	An integer array of numbers of joints on the eight cell corners (four corners for quadrilaterals) and the material number stored according to cell number
ZETA	A real array of stress orientation angles stored according to cell number
IDQUAD	An integer array of numbers of the cells that only have four defining corner joints input (quadrilaterals) stored in the order in which they are read
IFLAG	An integer scalar flag signalling the main program to terminate execution if no cell data are found
NCELLS	An integer scalar defining the largest cell number read
JQUAD	An integer scalar defining the number of quadrilaterals encountered
PXAM	An integer scalar defining the largest cell number among the quadrilaterals

MAXJT

An integer scalar defining the largest joint number used to

define a quadrilateral corner

ITAPE

An integer scalar defining the number of input file

Labeled Common

None

Subroutines Called

None

Error Detection

If no cell data cards are found the message
'NO CELLS (DATA CODE 40) ENCOUNTERED IN INPUT'
is printed and IFLAG is set equal to 1 to cause the main program to
terminate execution.

SUBROUTINE RJØINT

This routine reads the input file searching for Data Code 2 data (joint data) which it stores.

Algorithm

The input file is read until a Data Code 2 card is read. The file is backspaced one record and the coordinates are stored in an array in a location corresponding to the joint number. The file is read and the contents stored until a joint number of 9999 is read or a card without a Data Code of 2 is encountered.

Input/Output

The input is read from file ITAPE.

Argument List

VJØINT	A real array	of	coordinates	of	input	joints	stored	by	joint
	number								

IFLAG	An integer scalar flag signalling the main program to term-
	inate execution of no joint

NJØINT	An integer	scalar	defining	the	largest	joint	number	read

ITAPE An integer scalar defining the number of input file

Labeled Common

None

Subroutines Called

None

Error Detection

If no joint data cards are found, the message 'NO JOINTS (DATA CODE 2) ENCOUNTERED IN INPUT'

is written and IFLAG is set equal to 1 to cause the main program to terminate.

SUBROUTINE RLAYER

This routine reads the input file searching for Data Code 7 (layer data) which it stores.

<u>Algorithm</u>

The input file is read until a Data Code 7 card is found. The file is then backspaced one record and the layer data is stored in an array in a location corresponding to the layer number plus one. The zeroth layer (which really contains only the distance from the loft line to the top layer) is thus stored in the first column of the layer data. The input file continues to be read and layer data stored until a layer identification of 9999 is read or until a card that does not carry a Data Code of 7 is read.

Input/Output

The input is read from file ITAPE.

Argument List

TL A real array of thicknesses of the layers

ML An integer array of material number, element number

increment, and joint number increment for each layer

IFLAG An integer scalar for signalling the main program to

determine if no layer data is read

NL An integer scalar defining the largest layer number read

plus one

ITAPE An integer scalar defining the number of the input file

Labeled Common

None

Subroutines Called

Error Detection

If no layer data cards are read the message
'NO LAYERS (DATA CODE 7) ENCOUNTERED IN INPUT'
is printed and IFLAG is set equal to 1 to cause the main program to
terminate.

th locations corresponding to large durber and quadriference commer

SUBROUTINE RTVARI

This routine determines the thickness of every layer at every joint in the laminate using the thicknesses read in RLAYER for each layer as the default values and reading revised thickness data to calculate and store the non-default thicknesses.

Algorithm

First all the thicknesses read in by RLAYER are stored in an array in locations corresponding to layer number and quadrilateral corner number so that each quadrilateral corner has a stack of thicknesses associated with it. Then the input file is read, searching for revised thickness data (Data Code 8). When the data is found it is stored in the appropriate location in the array created earlier, replacing default values. The reading and storing continues until a joint number of 9999 is encountered or the card does not carry a Data Code of 8.

Input/Output

The input is read from file ITAPE.

Argument List.

TVARI A real array of thicknesses of layers beneath each joint on a quadrilateral corner

TL A real array of thicknesses of layers stored by layer

number by RLAYER

JØINTP An integer array of joint numbers corresponding to

quadrilateral corners

NL An integer scalar defining the number of quadrilateral

corners

ITAPE An integer scalar defining the number of the input file

Labeled Common

Subroutines Called

None

Error Detection

If any joint number input through Data Code 8 data has a user-defined joint in the stack of joints below it the message 'JOINT nnnn LISTED IN DATA CODE 8 IS ABOVE A USER-DEFINED JOINT -- USER-DEFINED JOINT WILL REMAIN UNCHANGED' is printed but execution continues since the user-defined joint will take precedence later on in the program.

If the revised thickness data duplicates the existing thickness data, the message 'CARD ENCOUNTERED IN DATA CODE 8 DUPLICATES EXISTING LAMINATE DATA' is printed as a caution to the user and execution continues.

If any input joint is not found in the list of joint numbers corresponding to quadrilateral corners the message
'JOINT NO. nnnn LISTED IN DATA CODE 8 IS NOT FOUND IN LIST OF QUAD CORNER JØINTS -- BAD DATA MAY RESULT'
is printed and execution is continued although revised thicknesses are liable to be applied to the wrong quadrilateral corners.

If no revised thickness data is found the message
'NO REVISED THICKNESSES (DATA CODE 8) ENCOUNTERED IN INPUT'
is printed and execution proceeds, assuming all thicknesses to be as they
were read by RLAYER.

SUBROUTINE UVEC

This routine forms and returns a unit vector from an input vector.

Algorithm

The length of the input vector is found and the input vector's components are divided by the length. The resulting unit vector is returned through the argument list.

Input/Output

None

Argument List

I	A	n integer n array C	scalar	defining	the	location	of	input v	ector
J		n integer n array C		defining	the	location	of	output	vector

C A real array of vectors

Labeled Common

None

Subroutines Called

None

Error Detection

If the length of the vector to be unitized is zero, the message 'ATTEMPT TO UNITIZE ZERO VECTOR' is printed and the zero vector is divided by a length of one and returned.

SUBROUTINE WCELL

This routine outputs the cell data in the format for Data Code 40 on files 6 and JTAPE.

Algorithm

The cell data (cell number, corner joint numbers, material number, and stress orientation angle) are written on file 6 and, if JTAPE # 6, on file JTAPE as well. The format for the JTAPE output does not include carriage control characters. After all the cell data has been written a cell number of 9999 is output to mark the end of the cell data.

Input/Output

The output is written on files 6 and JTAPE.

Argument List

IDCELL An integer array of cell data: eight joint numbers

defining the corners and the material number for each cell

ZETA A real array of stress orientation angles

NCELLS An integer scalar defining the number of cells

JTAPE An integer scalar defining the number of one of the

output files

Labeled Common

None

Subroutines Called

None

Error Detection

If array IDCELL has data greater than 10^5 , indicating no data was read or generated for the cell, the message 'GAP IN DATA' is output and execution continues with the next cell for which the program has valid data.

SUBROUTINE WJØINT

This routine outputs the joint data in the Data Code 2 format on files 6 and JTAPE.

Algorithm .

The joints data (joint number and coordinates) is written on file 6 and, if JTAPE \neq 6, on file JTAPE as well. The format for the JTAPE output has no carriage control characters. After all the joint data has been output, a joint number of 9999 is output as a flag indicating the end of the data.

Input/Output

The output is written on files 6 and JTAPE.

Argument List

VJØINT A real array of coordinates of the joints

NJØINT An integer scalar defining the number of joints

JTAPE An integer scalar defining the number of one of the

output files

Labeled Common

None

Subroutines Called

None

Error Detection

If the x-coordinate of a joint is 10^{30} , indicating that no data for the joint was read or generated, the message 'GAP IN SEQUENCE'

is output and execution continues at the next joint whose coordinates are known.

SUBROUTINE WNORM

This routine outputs the surface normal data in the Data Code 6 format on files 6 and JTAPE.

Algorithm

The normals and areas which have been generated for every joint on a quadrilateral corner are output on file 6 and JTAPE \neq 6, on file JTAPE as well. The format for JTAPE has no carriage control characters. When all normals have been written a joint number of 9999 is output to signal the end of the surface normal and area data.

Input/Output

The output is written on files 6 and JTAPE.

Argument List

VNØRM	A real array of the unitized surface normals for every	
	inint on a course of an innut quadrilateral	

joint on a corner of an input quadrilateral

AREA A real array of the areas associated with every joint

on a corner of an input quadrilateral

JØINTP An integer array of the joints on the corners of the input

quadrilaterals

NJT An integer array of numbers of joints on corners of input

quadrilaterals

JTAPE An integer scalar defining the number of one of the

output files

Labeled Common

None

Subroutines Called

Error Detection

None a shear start and as a stabilization spatruce off agreement animage and

The nortal's and arres which have been gamerated for every joint on a

y server employed built his est to years four &

An integer arms, of the doings on the corners of the input

v dahi dosevens

APPENDIX B

This appendix contains detailed descriptions of all routines and laceled common brooks in this program. Table 8 gives either page numbe

INITIAL GENERATOR ROUTINES AND LABELED COMMON BLOCKS

anotzanalosb akeznos ubidu esateuen (la de dell

APPENDIX B INITIAL GENERATOR ROUTINES AND LABELED COMMON BLOCKS

This appendix contains detailed descriptions of all routines and labeled common blocks in this program. Table B gives either page number references within this document or references to other documents for documentation of each routine or labeled common block. Some page number references may be to preceding appendices where the doucmentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm verbal flow chart of routine logic and data flow

Input/Output description of all external data set input/

output

Argument List name, type, and description of each argument

<u>Labeled Common</u> list of all labeled common blocks declared

Subroutines Called list of all routines called

Error Detection description of tests made for errors and action

taken

The detailed description of each labeled common block is divided into the following subheadings:

<u>Declaration</u> verbatum declaration of the labeled common block

Contents name and description of each variable appearing

in the declaration

Usage list of all routines which contain declarations

for the labeled common block

TABLE B. INDEX TO INITIAL GENERATOR ROUTINES AND LABELED COMMON BLOCKS

																							Page
MAIN PROGRAM	BIRDG1	•				•	•	•	•	•	•	•	•		•	•	•	•		•	•	•	145
LABELED COMMON	ABC .																						148
LABELED COMMON	CØFCLC																						149
LABELED COMMON	CØNST								•														150
LABELED COMMON	EDØF, I	DØI	F,	A	ND	I	SE	Q	•			•											152
LABELED COMMON	IDEN .																						153
LABELED COMMON	IERRØR																						154
LABELED COMMON	JØRT .			•																			155
LABELED COMMON	LIMITS																						156
LABELED COMMON	LPBEM																						157
LABELED COMMON	LPCEM																						158
LABELED COMMON	LPCV .																						159
LABELED COMMON	LPEP .																						161
LABELED COMMON	LPMDSZ																						163
LABELED COMMON	LPMEM																						165
LABELED COMMON	LPMV .																						166
LABELED COMMON	MTRL .																						168
LABEL ED COMMON	WRK .	•		•	٠	•		•	•		•	•	•	•	•	•			•	•	•	•	169
SUBROUTINE	ACCJZE																						170
SUBROUTINE	ACCPRP																						171
SUBROUTINE	CNSTRN											•											172
SUBROUTINE	COCALC		•.																				174
SUBROUTINE	DRCNUM																						175
SUBROUTINE	DUMPMT																						177
SUBROUTINE	EDGDØF																						178
SUBROUTINE	EDGES																						180
SUBROUTINE	ELEMNT													1.5									182

TABLE B. INDEX TO INITIAL GENERATOR ROUTINES AND LABELED COMMON BLOCKS (Continued)

																		Pa	age
SUBROUTINE	HØRNE	R																N.D	184
SUBROUTINE	JTEMP		•.																185
SUBROUTINE	JTPRT					•													186
SUBROUTINE	JZERØ																		187
SUBROUTINE	LPBAR																		188
SUBROUTINE	LPBPR	T																	190
SUBROUTINE	LPBSM																		191
SUBROUTINE	LPCAP																		193
SUBROUTINE	LPCC																		195
SUBROUTINE	LPCEB	T																	196
SUBROUTINE	LPCFF	В																	199
SUBROUTINE	LPCG																	1	204
SUBROUTINE	LPCK																		210
SUBROUTINE .	LPCKC																	1	211
SUBROUTINE	LPCPR	M											•					130	213
SUBROUTINE	LPCPR	T												•				7	214
SUBROUTINE	LPCSM																	7	215
SUBROUTINE .	LPCZM																	7	217
SUBROUTINE	LPMAP																	7	218
SUBROUTINE	LPMC																	7	219
SUBROUTINE	LPMD		•						•									2	220
SUBROUTINE	LPMEB	T																7	221
SUBROUTINE	LPMFF	В		•		•		•										2	223
SUBROUTINE	LPMG		•				•				•							7	225
SUBROUTINE	LPMK				•							•					•	2	227
SUBROUTINE	LPMKC										,							2	228
SUBROUTINE	LPMM																	2	230
SUBROUTINE	LPMPR	M															•	2	232
SUBROUTINE	LPMPR	T								•								2	233
SUBROUTINE	LPMSM																	2	234

TABLE B. INDEX TO INITIAL GENERATOR ROUTINES AND LABELED COMMON BLOCKS (Continued)

																	Page
SUBROUTINE	LPMSZD																236
SUBROUTINE	LPMS1	•															238
SUBROUTINE	LPMS2																240
SUBROUTINE	LPMZ .																242
SUBROUTINE	LPMZM			•													244
SUBROUTINE	LTRMLT																245
SUBROUTINE	MATDES	•															246
SUBROUTINE	MATHD					•		•									248
SUBROUTINE	MATTR												•				250
SUBROUTINE	MLTMTR									•							251
SUBROUTINE	MLTMØD																252
SUBROUTINE	ØVER3														• •		254
SUBROUTINE .	PARTN	•															255
SUBROUTINE	PASSM																257
SUBROUTINE	PASSMI																258
SUBROUTINE	PASSM2				•												260
SUBROUTINE .	PASSM3																262
SUBROUTINE	PASSM4		•														264
SUBROUTINE	PASSM5																266
SUBROUTINE	PASSM6																268
SUBROUTINE	PRØP .					•	•										269
SUBROUTINE	PRTCØN											•	•				271
SUBROUTINE	QKSØRT		•									•					272
SUBROUTINE	RAMØSG			•			•										274
SUBROUTINE	SID .					•	•	•									277
SUBROUTINE	SKDATA						•	•									279
SUBROUTINE	STACK																280
SUBROUTINE	SWAP .																281
SUBROUTINE	TAPEHD																282
SUBROUTINE	TAPETR						٠.										283

TABLE B. INDEX TO INITIAL GENERATOR ROUTINES AND LABELED COMMON BLOCKS (Continued)

																								Page
SUBROUTINE	VECT .													•	2							1	0.0	284
SUBROUTINE	WPART																				r			296
SUBROUTINE	WRMAT															i	•	•	•	•	·	•		200
SUBROUTINE	LITADES			Ĭ	ľ		·		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	288
SOBROOTINE	WTAPE1	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		•	289

MAIN PROGRAM BIRDGT

This routine is the overall executive or supervisory routine for the windshield technology program Initial Generator. It controls the sequence of input, the calling of subprograms or modules, and the coordination of data output. For the derivation of element matrices and additional mathematical formulations, refer to Appendix H of Part 1 of this report.

Algorithm

The program begins by initializing various counters and flags.

Then Data Code 1 is read and checked for validity. Subroutines JZERO and JTEMP are invoked to read Data Codes 2 and 3 building the joint coordinate and joint temperature tables. These are printed out by subroutine JTPRT.

Next, a tape header is written on tape 1 using subroutine TAPEHD.

The joint coordinate table is written onto tape 1, with the header and trailer records written by routines MATHD and MATTR. Direction numbers and constraints, Data Codes 4 and 5, are read and the reaction table created and written onto tape 16 by execution of subroutine CNCSTN. Next Data Code 6 is skipped over by calling routine SKDATA. Material properties, Data Code 10, are processed for future use and written onto tape 1 by module MTLMOD. Again SKDATA is used to skip over unnecessary input Data Codes 11 and 12, if present.

The program now goes into a loop for processing the various elements. One element is processed each time through the loop. First bar elements, then membranes, cells and point mass elements are processed in order. Subroutine ELEMENT is used to input and validate the element definition input, Data Codes 20, 30, 40, and 50. The joint temperature differentials are calculated and the material

properties are then obtained by invoking routine ACCPRP. Print flags are checked and the compliance matrix is formed according to the type of element. Subroutine LPBAR, LPCAP and LPMAP are invoked to generate the various element matrices which are saved as partitions of their respective matrices representing the total structure by routines LPBSM, LPCSM, LPMSM, and, in the case of point mass elements, by main program.

After processing all elements, the edges are processed by routine EDGDØF. Using the edge data, the ETC table and some program constants, the assembly module PASSM generates the PRUPT and the PRUF matrices writing them out to tape 1. Next, routine WTAPEl is used to generate the K, M, KBAR, CBAR, FFBAR, SIGMA FBAR, EPSILØN SIGMA, EBØT, and EVT matrices. These matrices along with the CØNST table are written onto tape 1. Finally, a tape trailer record is written onto tape 1 using routine TAPTR called from BIRDG1.

If a dump of tape 1 is requested by the user, it is dumped using the routine DUMPMT. When this is completed, the program constants are printed by subroutine PRTCØN and the run is wrapped up.

Input/Output

Tape 1 is the output tape for binary matrix data and is formatted for use as a FØRMAT matrix master input tape. Tapes 5 and 6 are used for system input and output, respectively. Tapes 7 through 18 are used as scratch units to store data passed between modules within the program. The data temporarily stored on these tapes is as follows:

Tape	Data
7	Element variable table (ECT)
8	Element damping matrix (C)
9	Element thermal matrices $(\overline{e}_{T_A} \text{ and } \delta \overline{e}_{T})$
10	Element mass matrix (m)

Tape	Data
- 11	Element stress/strain transform (ϵ_{σ})
12	Element force transform (FF)
13	Element stiffness matrix (K)
14	Element stiffness components (KLPB, DLPM and KLPC)
15	Element force/stress transform $(\sigma_{\overline{F}})$
16	Global/oblique constraint tables
. 17	Edge degree of freedom table
18	Element constant table (ECT)

Argument List

None

Labeled Common

CONST, IERROR, JORT, LPEP, MTRL

Subroutines Called

ACCPRP, CNSTRN, DUMPMT, EDGDØF, EDGES, ELEMNT, JTEMP, JTPRT, JZERØ, LPBAR, LPBSM, LPCAP, LPCC, LPCSM, LPMAP, LPMC, LPMSM, MATHD, MATTR, MTLMØD, PASSM, PRTCØN, SKDATA, TAPEHD, TAPETR, WTAPE1

Error Detection

A check is made for the Data Code I delimiter card being missing or out of sequence. If this card is missing the run is aborted. If the base temperature is not input, the program sets the IERRØR flag equal to zero aborting the run but continues execution to allow a scan of the remaining input data for additional errors.

LABELED COMMON ABC

This common block is used by the sorting module to store sort control parameters.

Declaration

COMMON /ABC / INIHI, INILO, IP, ISWAP, ICNTR, KEYFLD

Contents

INIHI	Pointer to last record in a file to be partitioned
INILG	Pointer to first record in a file to be partitioned
IP	Pointer to record that is the partitioning agent
ISWAP	Record interchange counter
ICNTR	Pointer to next subfile in the subfile stack
KEYFLD	Record element that contains the sort key

Usage

PARTN, QKSØRT, STACK, SWAP

LABELED COMMON CØFCLC

This common block is used to store data and program parameters associated with the computation of material properties.

Declaration

CØMMØN /CØFCLC/ TVPA(10,10),RTMP(10,3),ITMP(10,3),VPT(10), AP(10),ASC(10,10),BSC(10)

Contents

TVPA	An array of temperatures for a property where the rows are temperatures associated with a property in VPT and the columns are monotonically increasing powers of the temperature
RTMP	Scratch space required by routine SID, must be at least 3*number of rows
IMPT	Same as RTMP
VPT	Input property values associated with temperatures in TVPA
AP	Temporary storage for the calculated coefficients
ASC	Scratch storage used in the calculations

Usage

BSC

CØLALC, PRØP

Same as ASC

LABELED COMMON CONST

This common block is used to store coefficients and counters describing the overall model size and problem constants.

Declaration

DIMENSION CØNST(30)
CØMMON /CØNST/ NJ, NC, NM, NBAR, NMEM, NCELL, NPTM, NEDØF, NMØDES,
NPLJ, NØR, TBASE, HJ, NMC, ND, MP1, MP1NM, GC, GE
EQUIVALENCE (CØNST(1),NJ)

Contents

NJ Number of joints

NC Number of constraints

NM Number of materials

NBAR Number of bar elements

NMEM Number of membrane elements

NCELL Number of cell elements

NPTM Number of point mass elements

NEDØF Number of edge degrees of freedom

NMØDES Number of modes

NPLJ Number of pressure loaded joints

NØR Number of oblique reactions

TBASE Base temperature of the structure

HJ Mechanical equivalent of heat

NMC Total number of material property coefficients

ND Total number of material property words

MP1 Maximum number of properties per material + 1

MPINM MPI*NM

GC Cell stiffness matrix suppression coefficient

GE Bar compliance matrix suppression coefficient

Usage

BIRDG1, JTEMP, JZERØ, MTLMØD, PASSM, PASSM1, PASSM2, PASSM4, PASSM5, PRTCØN, WTAPE1

LABELED COMMON EDØF, IEDGE, AND ISEQ

These common blocks are always used as a group by those modules associated with the computation of overall structural degree of freedom row formats.

Declaration

CØMMØN /EDØF/ IDØF(7200) /IEDGE/ IEDG(7200) /ISEQ/ ISEQ(7200)

Contents

IDØF Edge degrees of freedom in same sequence as ISEQ

IEDG Sorted pairs of joints defining edges

ISEQ Index to original sequence of IEDG

The content of these common regions varies between modules. Source code listings should be consulted for specific information regarding content.

<u>Usage</u>

EDGDØF, PASSM

LABELED COMMON IDEN

This common block is used to store data and program parameters associated with reading material property input data, Data Code 10.

Declaration

CØMMØN /IDEN/ MR, IP, NPC, MAP, MRØLD, IPØLD, NCØLD, MAPØLD

Contents

MR	Material reference number of current record divided by 100
IP	Property identification number of current record
NPC	Number of coefficients input for current property
MAP	Number of coefficients to be computed for current property
MRØLD	MR for the previous record
IPØLD	IP for the previous record
NCØLD .	NPC for the previous record
MAPØLD	MAP for the previous record

Usage

COCALC, MATDES, MTLMOD, PROP

LABELED COMMON IERRØR

This common block is used to store the main error flag and print control flags.

Declaration

COMMON / IERROR/ IERROR, LNPAGE, MTDUMP, NPASSM

Contents

IERRØR Program fatal error flag

LNPAGE Lines per page print limit, defaults to 45 lines

MTDUMP Tape 1 dump flag which if 0 means no dump, if 1 dump

header records only, and if 2 dump complete tape

NPASSM Print flag for PRUPT and PRUF matrix assembly

Usage

BIRDGI, ACCPRP, CNSTRN, CØCALC, DRCNUM, EDGDØF, EDGES, ELEMNT, JTEMP, JZERØ, LPCKC, MATDES, MTLMØD, ØVER3, PASSM, PASSM1, PASSM2, PASSM4, PASSM5, PRØP, PRTCØN, RAMØSG, WTAPEI

LABELED COMMON JORT

This common block is used to store joint coordinate and temperature data.

Declaration

CØMMØN /JORT/ JO(3,1200), TEMP(1200)
REAL JO

Contents

JO

Joint coordinate table

TEMP

Joint temperature table

Usage

BIRDG1, ACCJZE, JTEMP, JTPRT, JZERØ, LPBAR, LPBPRT, LPCAP, LPCG, LPCPRT, LPMAP, LPMG, LPMPRT

LABELED COMMON LIMITS

This common block is used to store size limitation parameters associated with material property tabular data, Data Code 10.

Declaration

COMMON /LIMITS/ MXMTRL, MXPROP, MXCOFS, MXDES, MXPCO, MXPVL

Contents

MXMTRL	Maximum number of materials that space is provided for
MXPROP	Maximum number of properties that space is provided for
MXCOFS	Maximum number of coefficients for all properties for all materials that space is provided for
MXDES	Maximum number of packed words (10 characters per word) of material description for all materials
MXPCO	Maximum number of coefficients for a property
MXPVL .	Maximum number of values for a property

Usage

CØCALC, MATDES, MTLMØD, PRØP

LABELED COMMON LPBEM

This common block is used to store geometry and output matrix data for bar elements.

Declaration

```
CØMMØN /LPBEM/ CBAR(2,2), EBARTD(2), EBOT(2), EMASS(6,6), EPSSIG , FFBAR(7,2), KLPB(7,7), KBAR(2,2), SFBAR(2), AB(4), PQ(4)
```

REAL KBAR, KLBP

Contents

CBAR Element damping matrix

EBARTD Unassembled element deformations due to unit temperature

change

EBOT Initial element thermal deformations

EMASS : Element mass matrix

EPSSIG Element strain matrix

FFBAR Unassembled to global transformation matrix

KLPB Transformed element stiffness matrix

KBAR Element stiffness matrix

SFBAR Element stress matrix

AB X, Y, Z components of unit vector from P to Q

PQ Bar length and X, Y, Z components of length

Usage

LPBAR, LPBPRT, LPBSM

LABELED COMMON LPCEM

This common block is used to store cell element output matrices.

Declaration

CØMMØN /LPCEM/ CBAR(30,30), EBARTD(30), EBOT(30), EMASS(24,24), EPSSIG(6,12), FFBAR(36,30), KBAR(30,30), KLPC(36,36), SFBAR(12,30)

REAL KBAR, KLPC

Contents

CBAR Element damping matrix

EBARTD Unassembled element deformations due to unit temperature

change

EBOT Deformations due to the difference between element joint

temperature and the structural base temperature

EMASS Element mass matrix

EPSSIG Element strain matrix

FFBAR Unassembled to global transformation matrix

KBAR Element stiffness matrix

KLPC . Transformed element stiffness matrix

SFBAR Element stress matrix

Usage

LPCAP, LPCEBT, LPCK, LPCKC, LPCRM, LPCSM, LPCZM

LABELED COMMON LPCV

This common block is used to store cell element geometry and vector data.

<u>Declaration</u>

```
CØMMØN /LPCV/ PQ(4.8) , RQ(4,8) , RS(4,8) , PS(4,8) , AB(4,8) , BB(4,8) , CB(4,8) , DB(4,8) , EB(4,8) , FB(4,8) , FK(5,8) , LA(8) , LB(8) , LT(8) , THETA(8) , TPB(4) , TQB(4) , TRB(4) , TSB(4) , TPQ(4) , TRQ(4) , TRS(4) , TPS(4) , V(8) , ZETA(8)
```

REAL LA, LB, LT

Contents

PQ	Edge vector components and magnitude
RQ	Edge vecgor components and magnitude
RS	Edge vector components and magnitude
PS	Edge vector components and magnitude
AB	Unit vector components
BB .	Unit vector components
СВ	Unit vector components
DB	Unit vector components
EB	Unit vector components
FB	Unit vector components
FK	K factor
LA	Length of cell sub-element
LB	Width of cell sub-element
LT	Average thickness of cell sub-element
THETA	Corner angles THETAPO, THETAQO, THETARO, THETASO, THETAP1, THETAQ1, THETAR1, and THETAS1

ТРВ	Thickness vector components and magnitude
TQB	Thickness vector components and magnitude
TRB	Thickness vector components and magnitude
TSB	Thickness vector components and magnitude
TPQ	Thickness vector components and magnitude
TRQ	Thickness vector components and magnitude
TRS	Thickness vector components and magnitude
TPS	Thickness vector components and magnitude
V	T*A*B*SIN(THETA) for cell sub-element
ZETA	Orientation angle of cell sub-element

Usage

LPCAP, LPCEBT, LPCFFB, LPCG, LPCKC, LPCPRT, LPCSM

ATTHT

0

LABELED COMMON LPEP

This common block is used to store material properties, joint connectivity data, and other information for an element.

Declaration

```
DIMENSION CK(3,3), JMN(4)

COMMON /LPEP/ A , ALPHAT , CK1(6,6), CK2(6,6), E ,

EC , ET , H , JCN(8) , MR ,

MT , NU , PM(3) , PRFLAG , RHØ ,

T , TD(8) , VØL , ZETAPQ

EQUIVALENCE (CK1(1,1),CK(1,1)),(JCN(1),JMN(1)),

(JP ,JCN(1)),(JQ ,JCN(2)),(JR ,JCN(3)),(JS ,JCN(4)),

(JP0,JCN(1)),(JQ0,JCN(2)),(JR0,JCN(3)),(JS0,JCN(4)),

(JP1,JCN(5)),(JQ1,JCN(6)),(JR1,JCN(7)),(JS1,JCN(8)),

REAL NU, MT

INTEGER PRFLAG
```

Contents

A	Cross sectional area	
ALPHAT	Coefficient of thermal expansion	
CK	Compliance matrix	
CK1	Compliance matrix for upper half of LPC element	
CK2	Compliance matrix for lower half of LPC element	
E	Elastic modulas	
EC	Compression gap	
ET	Tension gap	
Н	Damping/stiffness ratio	
JCN	Array containing cell joint numbers JPO, JQO, JRO, JSO, JP1, JQ1, JR1, and JS1	
JMN	Array containing membrane joint numbers JP, JQ, JR, and JS	
MR	Material properties reference code	

MT Total element mass

NU Poisson's ratio

PM Point mass

PRFLAG Print flag

RHØ Mass density

T Membrane thickness

Array containing unit temperature differential at joints JPO, JQO, JRO, JSO, JPĪ, JQĪ, JRĪ, and JSĪ TD

VØL . Element volume

ZETAPQ Material or stress orientation angle

Usage

BIRDGI, ELEMNT, LPBAR, LPBPRT, LPBSM, LPCAP, LPCC, LPCEBT, LPCFFB, LPCG, LPCKC, LPCPRT, LPMPRT, LPCSM, LPMSM, LPMAP, LPMC, LPMFFB, LPMEBT, LPMG

LABELED COMMON LPMDSZ

This common block is used to store membrane element geometry data and intermediate matrix data.

Declaration

```
CØMMØN /LPMDSZ/ AØTP , AØTØ , AØTR , AØTS , DP(3,3), DQ(3,3), DR(3,3), DS(3,3), SP(3) , SQ(3) , SR(3) , SS(3) , ZP(3,3), ZQ(3,3), ZR(3,3), ZS(3,3)
```

Contents

AØTP	A*B*sin (THETA)/t for corner p
AØTQ	A*B*sin (THETA)/t for corner q
AØTR	A*B*sin (THETA)/t for corner r
AØTS	A*B*sin (THETA)/t for corner s
DP	D matrix for corner p
DQ	D matrix for corner q
DR	D matrix for corner r
DS .	D matrix for corner s
SP	Skew stress matrix for corner p
SQ	Skew stress matrix for corner q
SR	Skew stress matrix for corner r
SS	Skew stress matrix for corner s
ZP	Global translation matrix for corner p
zq	Global translation matrix for corner q
ZR	Global translation matrix for corner r
ZS	Global translation matrix for corner s

<u>Usage</u>

LPMAP, LPMKC, LPMPRT, LPMSZD, LPMS1, LPMS2

LABELED COMMON LPMEM

This common block is used to store membrane element output matrices.

Declaration

CØMMØN /LPMEM/ CBAR(9,9) , EBARTD(9) , EBØT(9) , EMASS(12,12), EPSSIG(3,3), FFBAR(16,9), KBAR(9,9) , KLPM(16,16), SFBAR(3,9) REAL KBAR, KLPM

Contents

CBAR Element damping matrix

EBARTD Unassembled element deformations due to unit temperature

change

EBOT Deformations due to the difference between element joint

temperature and the structural base temperature

EMASS Element mass matrix

EPSSIG Element strain matrix

FFBAR Unassembled to global transformation matrix

KBAR Element stiffness matrix

KLPM · Transformed element stiffness matrix

SFBAR Element stress matrix

Usage

LPMAP, LPMFFB, LPMEBT, LPMPRM, LPMSM, LPMSZD, LPMZM

LABELED COMMON LPMV

This common block is used to store membrane element geometry and vector data.

Declaration

```
COMMON /LPMV/ PQ(4) , RQ(4) , RS(4) , PS(4) , AB(4) , BB(4) , CB(4) , DB(4) , EB(4) , FK1 , FK2 , FK3 , FK4 , FK5 , THETAP , THETAQ , THETAR , THETAS
```

Contents

PQ	Edge vector components and magnitude
RQ	Edge vector components and magnitude
RS	Edge vector components and magnitude
PS	Edge vector components and magnitude
AB	Unit vector components
ВВ	Unit vector components
СВ	Unit vector components
DB .	Unit vector components
EB	Unit vector components
FK1	K factor
FK2	K factor
FK3	K factor
FK4	K factor
FK5	K factor
THETAP	Corner angle
THETAQ	Corner angle
THETAR	Corner angle
THETAS	Corner angle

Usage

LPMAP, LPMFFB, LPMEBT, LPMG, LPMPRT, LPMSM, LPMSZD

The to various one the not street. These dants of enemies

Temporary accesses the properties for a material

MIRDG), ACCERP, LEGSH, METUES, MILHED, 2902, RANGED

LABELED COMMON MTRL

This common block is used to store the material property tables in their entirety.

Declaration

CØMMØN /MTRL/ CØEFS(660), LENCØF, LENDES, LNGTHS(14,20), MPTR(240), MRDES(240), PRPVAL(13)

Contents

CØEFS Coefficients for all properties for all materials

Length of coefficients LENCOF

LENDES Length of MRDES

LNGTHS Number of coefficients for each property and number of

packed material description words for each material

MPTR Pointers to first coefficients for all properties of all

materials as stored in array COEFS, and pointers to the first packed material description word for all materials

as stored in array MRDES

MRDES Packed material description for all materials

PRPVAL Temporary storage for properties for a material

PRPVAL(1) Elastic modulas

PRPVAL(2) Secant modulas at point A,

Approximate yield point True stress at point A

PRPVAL(3) PRPVAL(4) PRPVAL(5) True stress at rupture

True strain at rupture

PRPVAL(6) PRPVAL(7) Poisson's ratio

Coefficient of thermal expansion

PRPVAL(8) PRPVAL(9) Mass density

Specific heat

PRPVAL(10) Damping/stiffness ratio PRPVAL(11) Ramberg-Osgood coefficient

PRPVAL(12) Slope tangent to Ramberg-Osgood curve at the

origin

PRPVAL(13) Elastic limit stress

Usage

BIRDGI, ACCPRP, LPBSM, LPCSM, MATDES, MTLMØD, PRØP, RAMØSG

LABELED COMMON WRK

This common block is used as scratch space by several routines.

Declaration

The largest extent declared for labeled common block WRK occurs in subroutine CNSTRN. The declaration in that routine is given here.

COMMON /WRK/ DIREC(3) , DIRTBL(50,3), DUM(600), ICON(600,3), OBLIQ(300,3)

Contents

The content of this common region varies between modules. Source code listings should be consulted for specific information regarding content.

Usage

CNSTRN, DUMPMT, LPCK, LPCKC, LPMAP

SUBROUTINE ACCJZE

This routine computes the difference of the X, Y and Z coordinates of two joints.

Algorithm

The coordinates of the two joints are accessed in the joint coordinate table, array $J\emptyset$, and the X, Y, Z coordinate differences, representing the components of a vector directed from the first joint to the second, are stored in array DIREC.

Input/Output

None

Argument List

JNTM An integer scalar defining the first joint number

JNTN An integer scalar defining the second joint number

DIREC A real array for the direction vector

Labeled Common

JØRT

Subroutines Called

None

Error Detection

None

SUBROUTINE ACCPRP

This routine computes properties for a material as a function of a given temperature and computes the Ramberg-Osgood coefficients.

Algorithm

The first 10 values of the PRPVAL array are computed using subrouting HØRNER. The last three are computed by routine RAMØSG. IF the IERRØR flag is set non-zero prior to entry to this routine, no material properties are computed.

Input/Output

Diagnostics are written on tape 6.

Argument List

MR An integer scalar defining the material reference number

NM An integer scalar defining the number of materials

TMPT A real scalar defining the temperature

Labeled Common

MTRL

Subroutines Called

HØRNER, RAMØSG

Error Detection

If a material reference number is greater than the maximum allowed, a diagnostic is printed, the IERRØR flag is set equal one, and a return is made to the calling routine.

SUBROUTINE CNSTRN

This routine reads the direction cosine data, Data Code 4, the constraint data, Data Code 5, from which tables are generated to indicate constrained degrees of freedom that are oblique as well as parallel to the global directions.

Algorithm

Data Code 4 is processed and the direction table is generated by calling subroutine DRCNUM.

Constraints, Data Code 5, are processed next one at a time. A data card is read and an ECHØ of the values are printed on tape 6. The data is checked for validity and if errors are found, the IERRØR flag is set and the program continues to check the remainder of the input. Subroutine ACCJZE is used to access the joint coordinate table and determine the direction cosines. The direction cosines are normalized and the direction vector checked for zero. The constraint number and the joint number are stored in the constraint table ICØN. Next the components are checked to see if the constraint is in the global directions. If so, the procedure is continued for the next constraint until all constraints are processed.

If the constraint is an oblique constraint, the direction cosines are stored into the oblique direction table ØBLIQ and the rest of constraints processed as above.

After all of the constraint data has been processed the constraint table is sorted using subroutine QKSØRT. A check is made for more than three entries per joint using routine ØVER3. The constraints and oblique table are written onto tape 16.

Input/Output

User input constraint data is read from tape 5, and the compiled constraint table is written onto tape 16. Tape 6 is used for the output of diagnostics.

Argument List

MAXJNT An integer scalar defining the maximum joint number in the structure

NCT An integer scalar defining the number of constraints

NØB An integer scalar defining the number of oblique reactions

LNPAGE An integer scalar defining the lines per page print limit

Labeled Common

MTRL

Subroutines Called

ACCJZE, DRCNUM, ØVER3, QKSØRT

Error Detection

Checks are made for any direction vectors equal to zero, invalid joint numbers, data out of sequence, invalid Data Code, number of constraints exceeding the program maximum limitation, constraint data missing, and the number of oblique constraints exceeding the maximum. A diagnostic is written for all errors, the IERRØR flag is set equal zero, and a return is made to the calling routine.

SUBROUTINE COCALC

This routine produces a column matrix of material properties coefficients.

Algorithm

The MVP temperature/value pairs stored in arrays TVPA and VPT are used in the following equation to compute material property coefficients.

$$AP = (TVPA^T * TVPA)^{-1} * (TVPA^T * VPT)$$

Input/Output

Diagnostics are written on tape 6.

Argument List

MVP

An integer scalar defining the number of temperature/value pairs

Labeled Common

COFCLC, IDEN, IERROR, LIMITS

Subroutines Called

LTRMLT, MLTMTR, SID

Error Detection

If $(TVPA^T * TVPA)^{-1}$ is singular, a diagnostic is printed, the IERRØR flag is set equal to zero, and a return is made to the calling routine.

SUBROUTINE DRCNUM

This routine reads the direction cosine data, Data Code 4, and builds the direction table.

Algorithm

Data Code 4 cards are read and checked for valid data entry. An echo of the input values is printed on tape 6.

Subroutine ACCJZE is used to access the joint coordinate table and determine the direction cosines. A check is made of the direction vector to see if it is zero. If it is zero, the IERRØR flag is set and the program continues to scan the input for errors. Next the direction cosines are normalized and stored into the direction table DIRTBL. This procedure is continued until all Data Code 4 input has been processed.

Input/Output

Direction cosine data are read from tape 5 and diagnostics are written onto tape 6.

Argument List

DIRTBL A real array for the direction table

MAXJNT An integer scalar defining the maximum joint number in the

structure

NDR An integer scalar defining the number of records in the

direction table

JERR4 An integer scalar error condition flag for the direction

table

Labeled Common

IERRØR.

Subroutines Called

ACCJZE

Error Detection

A check is made for all zero direction vectors, joint numbers out of range, direction cosine records not in sequence, invalid data code, and direction numbers exceeding the maximum allowable. For all errors a diagnostic is printed, the IERRØR flag is set to zero, and the input data scanned for further errors.

SUBROUTINE DUMPMT

This routine dumps all or part of the data on a standard FØRMAT tape.

Algorithm

The information contained on tape IN is read according to standard FØRMAT matrix data format and then printed on tape 6.

Input/Output

Data is read from tape IN and then printed on tape 6

Argument List

IN An integer scalar defining the logical unit number of the tape

IFLAG An integer scalar control flag which, when zero, specifies dump header records only and, when non-zero, specifies complete dump

Labeled Common

WRK

Subroutines Called

None

Error Detection

SUBROUTINE EDGDØF

This routine generates an insort table of unique edges and a table of edge degrees of freedom corresponding to the original order of the unsorted unique edge table.

Algorithm

If the IERROR flag is set non-zero prior to entry to this routine, it is not executed. An immediate return is made to the calling routine.

Tape 17 containing the pairs of joints defining each edge is rewound and read into array IEDG. The edges are sorted according to the first joint using routine QKSØRT. The edges are compared one to another for duplication and only the unique edges are saved in array IEDG. The degree of freedom number for the edge is saved in array IDØF. The final table of edges, array IEDG, is sorted then back into the original sequence.

Input/Output

Tape 6 is used to output diagnostics, and edge data is read from tape 17.

Argument List

NWRT	An	integer	scalar	defining	the	number	of	elements processed
NPRS	An	integer	scalar	defining	the	number	of	edges processed
IUNQ	An	integer	scalar	defining	the	number	of	unique edges

Labeled Common

EDØF, IEDGE, ISEQ

Subroutines Called

QKSØRT

Error Detection

If the number of edge pairs requested is not equal to the number of pairs read from tape, a diagnostic is printed, the IERRØR flag is set equal one, and a return is made to calling routine.

SUBROUTINE EDGES

This routine assembles the joint pairs that define the edges of an element.

Algorithm

The number of edges are determined according to the type of element. Each joint pair defining an edge is packed into a single word of array IEDGE according to the formula

IEDGE = J1 * 10000 + J2

where J1, the joint number of joint one, is less than J2, the joint number of joint two. When all edges for the element have been processed, they are written on tape 17 as one record for subsequent use by subroutine EDGDØF.

Input/Output

Tape 6 is used to output diagnostics. The edge data is output onto tape 16.

Argument List

ICODE An integer scalar defining the data code of the element

20 = Bar

30 = Membrane

40 = Cell

50 = Point Mass

JCN An integer array containing element joint numbers

NWRT An integer scalar defining the number of elements whose

edges have been processed

NPRS An integer scalar defining the number of joint pairs or

edges processed

Labeled Common

IERRØR

Subroutine Called

None

Error Detection

If an invalid Data Code number is detected, the IERRØR flag is set equal to one, a diagnostic printed, and a return is made to the calling routine.

SUBROUTINE ELEMNT

This routine reads and checks the validity of element definition data.

Algorithm

The user input defining the elements, Data Codes 20, 30, 40 and 50, is read and the data checked for validity. If an error is found, appropriate error flags are set. The run is aborted only after all the input data is scanned for errors.

Input/Output

Tape units 5 and 6 are used for card input data and output diagnostic messages, respectively. An echo of the input is also output on tape 6.

Argument List

ICODE

An integer scalar defining the Data Code number

NE

An integer scalar defining the element numbers

MAXJ

An integer scalar defining the number of joints

IEOD

An integer scalar flag set equal to one when the end of element data is encountered

LNPAGE An integer scalar defining the lines per page print limit

Labeled Common

LPEP, IERROR

Subroutines Called

Error Detection

0

A check is made for element numbers out of sequence, element type code out of sequence, zero area for bar elements, zero thickness for membrane elements, joint numbers out of range, and for joints not defined. For each error condition, a diagnostic is printed. The IERRØR flag is set equal to one but the scan of input data is allowed to continue.

SUBROUTINE HØRNER

This routine solves a monotonically increasing polynomial equation by Horner's method.

Algorithm

The polynomial is evaluated in the following manner:

$$V_1 = CØEF(INUM)*TMPT + CØEF(INUM-1)$$

$$VAL = \sum_{i=2}^{INUM-1} V_{i-1} TMPT + CØEF(INUM-i)$$

Input/Output

None

Argument List

CØEF A real array of coefficients describing the polynomial

INUM An integer scalar defining the number of coefficients

TMPT A real scalar defining the independent variable

VAL A real scalar defining the dependent variable

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE JTEMP

This routine reads joint temperature data, Data Code 3, and modifies the joint temperature table.

Algorithm

Temperature data is read and checked for validity, then the temperature table stored in array TEMP is updated accordingly.

Input/Output

User specified joint temperature data is read from tape 5 and diagnostics are written onto tape 6.

Argument List

None

Labeled Common

JØRT

Subroutines Called

None

Error Detection

Checks are made for input of a data code other than 3 and for the omission of the joint number if temperature data is present. If an error is detected, the IERRØR flag is set equal zero and a return is made to the calling routine.

SUBROUTINE JTPRT

This routine prints the contents of the joint coordinate table and the joint temperature table.

Algorithm

The contents of arrays JØ and TEMP in labeled common JZERØ are printed.

Input/Output

The joint coordinate and temperature data are written onto tape 6.

Argument List

LNPAGE An integer scalar defining the lines per page print limit

NJT An integer scalar defining the total number of joints

Labeled Common

JØRT

Subroutines Called

None

Error Detection

SUBROUTINE JZERØ

This routine reads user input joint coordinate and temperature data, Data Code 2, and forms the joint coordinate table and the temperature table.

Algorithm

Joint coordinate and temperature input data cards are read and checked for validity. The joint coordinate and the temperature tables are formed in arrays JØ and TEMP, respectively.

Input/Output

Joint coordinate and joint temperature data are read from tape 5 and diagnostics are written onto tape 6.

Argument List

None

Labeled Common

CØNST, IERRØR, JØRT

Subroutines Called

None

Error Detection

Checks are made for input of a data code other than 2 and for the omission of the joint number if coordinate data is present. If an error is detected, the IERRØR flag is set equal zero and a return is made to the calling routine.

SUBROUTINE LPBAR

This routine forms the matrices for lumped parameter bar elements.

Algorithm .

Using the element geometry, physical properties and material properties stored in labeled common, the following matrix equations are evaluated. Matrix size is given in parentheses at the left.

$$(3 \times 1)$$
 $\overline{a} = \overline{\frac{pq}{pq}}$

$$(2 \times 2) \qquad \overline{k} = \frac{2A}{C_k |pq|} \left[\frac{1.0}{1.0} \right]$$

$$(2 \times 2) \qquad \overline{c} = h \overline{k}$$

$$(7 \times 2) \qquad F_{\overline{F}} = \begin{bmatrix} -a_{x} \\ -a_{y} \\ -a_{z} \end{bmatrix}$$

$$\begin{bmatrix} a_{x} \\ a_{y} \\ a_{z} \\ \hline 1.0 & -1.0 \end{bmatrix}$$

$$(1 \times 2) \qquad \qquad \sigma_{\overline{F}} = \left[\frac{1}{2A} \mid \frac{1}{2A}\right]$$

$$(1 \times 1)$$
 $\varepsilon_{\sigma} = C_{k}$

(2 x 1)
$$\overline{e}_{T\Delta} = \frac{\alpha_T}{8} \left[\frac{4.0}{4.0}\right]$$

(2 x 1)
$$\delta \overline{e}_{T} = \frac{\alpha T |pq|}{8} \frac{3(T_{JP}^{-T}_{B}) + (T_{JQ}^{-TB})}{(T_{JP}^{-T}_{B}) + 3(T_{JP}^{-T}_{B})}$$

$$(1 \times 1) \qquad \qquad V = A |\overline{pq}|$$

$$(1 \times 1) \qquad \qquad m_{T} = \rho \ V$$

$$(7 \times 7) \qquad m = \frac{m_T}{6} \qquad \begin{bmatrix} 2 & & 1 & \\ & 2 & & 1 & \\ \hline & 1 & & 2 & \\ & & 1 & & 2 \end{bmatrix}$$

Input/Output

None

Argument List

TBASE A real scalar defining the base temperature of the structure


Labeled Common

JØRT, LPEP, LPBEM

Subroutines Called

LPBPRT, LPMK, VECT

Error Detection

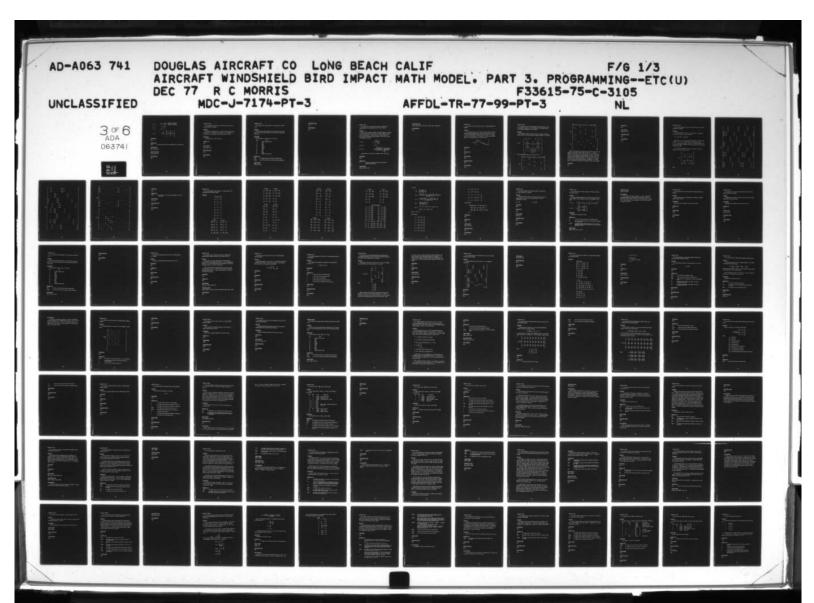

(2 x 1)
$$\delta \overline{e}_{T} = \frac{\alpha T |pq|}{8} \frac{3(T_{JP}^{-T}_{B}) + (T_{JQ}^{-TB})}{(T_{JP}^{-T}_{B}) + 3(T_{JP}^{-T}_{B})}$$

$$(1 \times 1) \qquad \qquad V = A |\overline{pq}|$$

$$(1 \times 1) \qquad \qquad m_{T} = \rho \ v$$

Input/Output

None

Argument List

TBASE A real scalar defining the base temperature of the structure

Labeled Common

JØRT, LPEP, LPBEM

Subroutines Called

LPBPRT, LPMK, VECT

Error Detection

SUBROUTINE LPBPRT

This routine prints the input and intermediate calculations for lumped parameter bar elements.

Algorithm

This routine is executed only in runs made for the purpose of program checkout. The intermediate calculations for the elements are printed as are the contents of labeled common LPEP and LPBEM.

Input/Output

Intermediate data is output on tape 6.

Argument List

None

Labeled Common

JØRT, LPBEM, LPEP

Subroutines Called

None

Error Detection.

SUBROUTINE LPBSM

This routine saves lumped parameter bar element data on external files.

Algorithm

The matrix partitions representing the contribution of this element to each of the output matrices are written onto the appropriate scratch tape.

Input/Output

The data output to scratch tapes is as follows:

Tape	Data
7	Element variable table
8	CBAR
9	EBØT
10	EMASS
11	EPSSIG
12	FFBAR
13	KBAR
14	KLPC
15	SFBAR
18	Element constant table

Argument List

NBAR An integer scalar defining the bar element number

TMPAVG A real scalar defining the element average temperature

Labeled Common

LPBEM, LPEP, MTRL

Subroutines Called

None

Error Detection

SUBROUTINE LPCAP

This routine acts as the executive routine for computing the lumped parameter cell (approximate parallel piped) matrices.

Algorithm

Routine LPCG is invoked to compute cell element geometry. Routines LPCKC, LPCK and LPCFFB are then called to compute element matrices \overline{k} , k and $F_{\overline{F}}$, respectively. Using data stored in labeled common, the following matrix equations are then evaluated. Matrix size is given in parentheses at the left.

(12 x 12)
$$\varepsilon_{\sigma} = \begin{bmatrix} c_{k_1} \\ c_{k_2} \end{bmatrix}$$

(36 x 36)
$$m = \frac{\rho V}{216} \frac{2m_{LPM}}{m_{LPM}} \frac{m_{LPM}}{m_{LPM}}$$
Note: See routine LPMM for definition of

Routine LPCEBT is then called to compute matrices $\delta \overline{e}_T$ and $\overline{e}_{T\Delta}$.

Input/Output

 (30×30)

None

Argument List

GC A real scalar defining the cell stiffness matrix suppression coefficient

Labeled Common

JØRT, LPCEM, LPCV, LPEP

Subroutines Called

LPCEBT, LPCFFB, LPCG, LPCK, LPCKC, LPCPRM, LPCPRT, LPCZM, LPMM

following maters sounties are then evaluated. Materia bize is given

THE PERMIT

SPRI, LPERM, LPCV, LPER

Error Detection

SUBROUTINE LPCC

This routine forms the compliance matrix for lumped parameter cell elements.

Algorithm

The compliance matrix for the upper and lower surfaces of the cell element are formed independently. These two matrices each of order 6×6 are then assembled as diagonal partitions of the 12×12 compliance matrix for the element. Each partition is formed as shown below where E is Young's Modulus and V is Poisson's Ratio.

$$C_{K} = \frac{1}{E} \begin{bmatrix} 1 & -V & -V \\ -V & 1 & -V \\ -V & -V & 1 \end{bmatrix}$$

$$2(1+V)$$

$$2(1+V)$$

Input/Output

None

Argument List

None

Labeled Common

LPEP

Subroutines Called

None

Error Detection

SUBROUTINE LPCEST

This routine calculates the unassembled element deformations due to unit temperature change at the joints defining a cell element and the initial thermal deformations for the element.

Algorithm

The theoretical definition of matrix $\overline{e}_{T\Delta}$ as a function of geometry, element K factors, and the coefficient of thermal expansion is as follows:

	po qo ro so	p ₁ q ₁ r ₁ s ₁					
ē _{TΔ} =	E ₁₁ (9 x 4)	E ₁₂ (9 x 4)					
	E ₂₁ (9 x 4)	E ₂₂ (9 x 4)					
	E ₃ (4 x 8)						
	E ₄	(8 x 8)					

where the partitions E_{12} , E_{21} , and E_{3} are null and

$$E_{22} = \begin{bmatrix} b_5 \cos \theta_5 & b_6 \cos \theta_6 & K_{3,7}b_7 \cos \theta_7 & K_{3,7}b_8 \cos \theta_8 \\ & a_6 & & & & \\ & a_5 & & & & & \\ & & a_7 & & & & \\ & & b_6 & & & & \\ & & b_7 & & & & \\ & & b_8 & & & \\ & & & t_2 & & & \\ & & & t_2 & & & \\ & & & t_3 & & & \\ & & & t_4 & & & \\ & & & & t_8 \end{bmatrix}$$

However, the matrices $\overline{e}_{T\Delta}$ and $\delta \overline{e}_{T}$ used by the code are single column matrices. Matrix $\delta \overline{e}_{T}$, initial thermal deformations, is formed by multiplying the terms in each column shown above by the initial thermal gradient of the referenced joints and summing the columns. Matrix $\overline{e}_{T\Delta}$ used by the code represents unassembled element deformations due to an average unit joint temperature change for the element. It is formed by simply summing the columns shown above. Subsequently, this column matrix is scaled by the average joint temperature change of the element.

Input/Output

Argument List

None

Labeled Common

LPCEM, LPCV, LPEP

Subroutines Called

None

Error Detection

SUBROUTINE LPCFFB

This routine generates the force transformation matrix for lumped parameter cell elements.

Algorithm

The transformation matrix F_F for a cell element is of dimension 36 x 30 and is given by the matrix equation

Matrices C_{F} , F_{F} , C_{Q} , Q_{F} , and F_{F} are functions of the unit edge vectors a, b, c, d, e, f, the thickness proportionality factors α , β , γ , and the panel K factors. Matrix F_{F} is assembled directly from this data as opposed to assembling these matrices and solving the matrix equation given above.

For the sake of presentation so that each element of $F_{\overline{F}}$ can be shown, we can partition $F_{\overline{F}}$ as follows

$$F_{\overline{F}} = \begin{bmatrix} F_{\overline{f}_{1}} & F_{\overline{f}_{2}} \\ (24 \times 15) & (24 \times 15) \\ \hline F_{\overline{f}_{3}} & F_{\overline{f}_{4}} \\ (12 \times 15) & (12 \times 15) \end{bmatrix}$$

where

	Г	-	o _x a					-d ₀ , a				-40,8			
	paque		oya					-doya				-40ys			
			, o, a					-doza				-402 s			
	eo, K10ª					b _{ox}					*0x*				box 8
	eoyK10ª	aoya				boy a					eoys				boy s
	eo_K10ª	*02°				boza				ans in	402 S				boz 8
				ح ₀ ٍ ه			-boxa						-40x8		
				-coya			-boya						-aoys		
				-c _{o2} a			-boza						-a _{0z} 8		
	fox 40ª				cox a				doa					cox 8	eav
	foyK40ª				coy a				doya					coy 8	
	fozK40ª				coza				doza					c 02 8	
FF1 =		•	al K					-d1 8				-41 x			
		100	alys					-d ₁ s				-alya			
	9	•	41 ₂ 8					-d128				-41za			roite
	eo_K118	*1 x				b1x8				e ₀ K ₁₁ a	$a_{1_X}^{\alpha}$				b1 a
	eo, K118					blys				eoy K11ª	alya				blya
	eoz K118	*12 *				blzs				eoz.K11ª	alza				b1,ª
				-c1 x				-b1x6					c1, a		
				-c1,5				-b1ys					clya		
				-c125				-b128					^د اړ ^۵		
	fox K415				clx8					foxK41ª				clx a	
	foy K418				cly8					foyK41ª				c 1ya	
	foz K418				c1z8				d ₁ z	foyK41a				c 1ya	

	_												
		-dox				x 15 Y d2							
		-doy8			- 0,	y K157 d2	y						
		-d ₀₂ s			-•,	2K15Y d2	z						
			box K121	•				-e _o x					
			boy K121					-e ₀ y					
			602 K121					-e ₀ ,					
	-box s			-c _{ox} K ₁₃)Y					b _{3x}			
	-boys			-c _{oy} k ₁₃						b ₃ y			
	-bozs			-c _{oz} ^K 13						b _{3z}			
	'	d _{ox} s		•	doy K147							-f _{ox}	
		doys			doy K14Y							-f.	
F _{F2} =		d _{oz} s			dozK14Y							-f ₀ _y	42
۲.	H	-d ₁ x	-d1 K427		2		da					-f ₀ z	
		-dya	-d1, K42Y				d ₂ _x						
		'y -d _{1z} a	-d1 _z K ₄₂ Y				d ₂ y						
		'z	1z 42.				d2z						
				a1 K43Y					e _{ox}				
				*1 _y ^K 43 ^Y					e _{oy}				
				*12 K43Y					e _{oz}				
		b1xª	-b1 K42 Y								- _p 3 ^x		
		blya	-b1 _y K42 ^Y								-b ₃ _y		
		blza	-61 K42 Y								-b3 ₂		
		d ₁ x			c1x	45 ^Y							fox
		d _{1,0} a			c1,								10y
		diza			c12 K								foz
													-

```
aK30
         aK50
FF3 =
         eK21
         8K<sub>31</sub>
FF4 =
                              -yK32
                                       YK33
                                                   aK35
```

Input/Output

None

Argument List

FFBAR

A real array for the output transformation matrix for the element

Labeled Common

LPCV, LPEP

Subroutines Called

None

Error Detection

SUBROUTINE LPCG

This routine computes vector geometry for lumped parameter cell (approximate parallelpiped) elements.

Algorithm

Thickness Vectors

$$\overline{t}_p = \overline{p}_1 - \overline{p}_0$$

$$\overline{t}_q = \overline{q}_1 - \overline{q}_0$$

$$\overline{t}_r = \overline{r}_1 - \overline{r}_0$$

$$\overline{t}_s = \overline{s}_1 - \overline{s}_0$$

$$\overline{t}_{pq} = \overline{t}_{q} - \overline{t}_{p}$$

$$\overline{t}_{rq} = \overline{t}_{q} - \overline{t}_{r}$$

$$\overline{t}_{rs} = \overline{t}_{s} - \overline{t}_{r}$$

$$\overline{t}_{ps} = \overline{t}_{s} - \overline{t}_{p}$$

Surface 0

Surface 1

$$\overline{pq}_0 = \overline{q}_0 - \overline{p}_0$$
 $\overline{pq}_1 = \overline{q}_1 - \overline{p}_1$

$$\overline{pq_1} = \overline{q_1} - \overline{p_1}$$

$$\overline{rq}_0 = \overline{q}_0 - \overline{r}_0 \qquad \overline{rq}_1 = \overline{q}_1 - \overline{r}_1$$

$$\overline{rq}_1 = \overline{q}_1 - \overline{r}_1$$

$$\overline{rs}_0 = \overline{s}_0 - \overline{r}_0$$
 $\overline{rs}_1 = \overline{s}_1 - \overline{r}_1$

$$\overline{rs}_1 = \overline{s}_1 - \overline{r}_1$$

$$\overline{ps_0} = \overline{s_0} - \overline{p_0}$$
 $\overline{ps_1} = \overline{s_1} - \overline{p_1}$

$$\overline{ps_1} = \overline{s_1} - \overline{p_1}$$

$$\overline{a_0} = \overline{pq_0} / |\overline{pq_0}| \overline{a_1} = \overline{pq_1} / |\overline{pq_1}|$$

$$\overline{b}_0 = \overline{rq}_0 / |\overline{rq}_0| \overline{b}_1 = \overline{rq}_1 / |\overline{rq}_1|$$

$$\overline{c}_0 = \overline{rs}_0 / |\overline{rs}_0|$$
 $\overline{c}_1 = \overline{rs}_1 / |\overline{rs}_1|$

$$\overline{d}_0 = \overline{ps}_0 / |\overline{ps}_0|$$
 $\overline{d}_1 = \overline{ps}_1 / |\overline{ps}_1|$

$$\overline{d}_1 = \overline{ps}_1 / |\overline{ps}_1|$$

$$\overline{e}_0 = \overline{t}_q / |\overline{t}_q| = \overline{e}_0$$

$$\overline{f}_0 = \overline{t}_s / |\overline{t}_s| \quad \overline{f}_1 = \overline{f}_0$$

$$\overline{f}_1 = \overline{f}_0$$

Surface 2

Surface 3

$$\overline{pq}_2 = \overline{pq}_0$$

$$\overline{pq}_3 = -\overline{rq}_0$$

$$\overline{rq}_2 = -\overline{t}_q$$

$$\overline{rq}_3 = -\overline{t}_r$$

$$\overline{ps}_2 = -\overline{t}_p$$

$$\overline{ps}_3 = \overline{t}_q$$

$$\bar{a}_2 = \bar{a}_0$$

$$\bar{a}_3 = -\bar{b}_0$$

$$\overline{b}_2 = -\overline{e}_0$$

$$\overline{b}_3 = \overline{t}_r / |\overline{t}_r|$$

$$\overline{d}_2 = \overline{t}_p / |\overline{t}_p| \qquad \overline{d}_3 = -\overline{e}_0$$

$$\overline{d}_3 = -\overline{e}_0$$

$$\overline{e}_2 = \overline{b}_0 \qquad \overline{e}_3 = -\overline{c}_0$$

$$\overline{f}_2 = -\overline{d}_1$$

Su	urface 4	Surface 5
pq ₄	• rs ₀	pq ₅ = -pr ₀
rq ₄	t _s	$\overline{rq}_5 = -\overline{t}_0$
rs ₄	= -rs ₁	rs ₅ = ps ₁
ps ₄	= t _r	$\overline{ps}_5 = \overline{t}_s$
<u>a</u> 4	= c 0	$\overline{a}_5 = -\overline{d}_0$
5 ₄	- -₹ ₀	δ ₅ = -ᾱ ₂
c 4	= - c 1	$\overline{c}_5 = \overline{d}_1$
ਰ ₄	= -F ₃	$\bar{d}_5 = -\bar{f}_0$
ē ₄	- व₀	$\overline{e}_5 = -\overline{a}_0$
· 7 ₄	5 _s	$\overline{f}_5 = \overline{c}_p$
Surface 6	F 45	Surface 7
$\overline{pq}_6 = \overline{pq}_0 +$		$\overline{pq}_7 = \overline{pq}_0 + \alpha t_{pq}$
$\overline{rq}_6 = \overline{rq}_0 +$	^{βt} rq	$\overline{rq}_7 = \overline{rq}_0 + \alpha t_{rq}$

 $\overline{rs}_6 = \overline{rs}_0 + \beta t_{rs}$ $\overline{rs}_7 = \overline{rs}_0 + \alpha t_{rs}$

Surface 6

$$\overline{b}_6 = \overline{rq}_6 / |\overline{rq}_6|$$

$$\overline{c}_6 = \overline{rs}_6 / |\overline{rs}_6|$$

$$\overline{d}_6 = \overline{ps}_6 / |\overline{ps}_6|$$

Surface 7

$$\overline{b}_7 = \overline{rq}_7 / |\overline{rq}_7|$$

$$\overline{d}_7 = \overline{ps}_7 / |\overline{ps}_7|$$

$$\overline{e}_7 = \overline{e}_0$$

Sub-element Geometry

K Factors

$$K_{1,i} = \frac{(\overline{a}_{1} \times \overline{rq}_{1}) \cdot \overline{c}_{1}}{(\overline{e}_{1} \times \overline{rq}_{1}) \cdot \overline{c}_{1}}$$

$$K_{2,i} = \frac{-(\overline{a}_{1} \times \overline{ps}_{1}) \cdot \overline{f}_{1} - K_{1,i} [\overline{e}_{1} \times (\overline{rs}_{1} - \overline{rs}_{1})] \cdot \overline{f}_{1}}{(\overline{b}_{1} \times \overline{rs}_{1}) \cdot \overline{f}_{1}}$$

$$K_{3,i} = \frac{-K_{1,i} (\overline{e}_{1} \times \overline{pq}_{1}) \cdot \overline{f}_{1} - K_{2,i} (\overline{b}_{1} \times \overline{pq}_{1}) \cdot \overline{f}_{1}}{(\overline{c}_{1} \times \overline{ps}_{1}) \cdot \overline{f}_{1}}$$

$$K_{4,i} = \frac{-K_{3,i} (\overline{c}_{1} \times \overline{ps}_{1}) \cdot \overline{a}_{1}}{(\overline{f}_{1} \times \overline{ps}_{1}) \cdot \overline{a}_{1}}$$

$$K_{5,i} = -(\overline{a}_{1} \cdot \overline{d}_{1}) - K_{1,i} (\overline{e}_{1} \cdot \overline{d}_{1}) - K_{2,i} (\overline{b}_{1} \cdot \overline{d}_{1})$$

$$-K_{3,i} (\overline{c}_{1} \cdot \overline{d}_{1}) - K_{4,i} (\overline{f}_{1} \cdot \overline{d}_{1})$$

where $i = 0, 1, 2, \dots, 7$

Corner Angles

$$\theta_1 = \cos^{-1}(-\overline{a}_6 \cdot \overline{d}_6)$$
 $\theta_2 = \cos^{-1}(\overline{a}_6 \cdot \overline{b}_6)$
 $\theta_3 = \cos^{-1}(-\overline{c}_6 \cdot \overline{b}_6)$
 $\theta_4 = \cos^{-1}(\overline{c}_6 \cdot \overline{d}_6)$
 $\theta_5 = \cos^{-1}(-\overline{a}_7 \cdot \overline{d}_7)$
 $\theta_6 = \cos^{-1}(\overline{a}_7 \cdot \overline{b}_7)$

$$\theta_7 = \cos^{-1}(-\overline{c}_7 \cdot \overline{b}_7)$$
 $\theta_8 = \cos^{-1}(\overline{c}_7 \cdot \overline{d}_7)$
 $\zeta_1 = \zeta_2 = \zeta_5 = \zeta_6 = \zeta_{pq}$
 $\zeta_3 = \zeta_4 = \zeta_{pq} = (\theta_1 = \theta_4)$
 $\zeta_5 = \zeta_6 = \zeta_{pq} = (\theta_5 = \theta_8)$

Volumn and Mass

$$V = \frac{1}{6} \left[(\overline{pq}_0 \times \overline{ps}_0) \cdot \overline{t}_p + (\overline{rs}_0 \times \overline{rq}_0) \cdot \overline{t}_r + (\overline{rq}_1 \times \overline{pq}_1) \cdot \overline{t}_q + (\overline{ps}_1 \times \overline{rs}_1) \cdot \overline{t}_s + (\overline{pq}_0 - \overline{ps}_0) \times (\overline{t}_s - \overline{rs}_1) \right] \cdot (\overline{t}_s - \overline{ps}_1)$$

$$M = \rho V$$

Input/Output

None

Argument List

None

Labeled Common

JØRT, LPCV, LPEP

Subroutines Called

VECT

Error Detection

SUBROUTINE LPCK

This routine computes the transformed element stiffness matrix for lumper parameter cell elements.

Algorithm

The following matrix equation is evaluated using data stored in labeled common. The size of the resulting matrix is given in parentheses on the left.

(36 x 36)

$$k = F_{\overline{F}} \overline{K} F_{\overline{F}}^{T}$$

Input/Output

None

Argument List

None

Labeled Common

LPCEM, WRK

Subroutines Called

None

Error Detection

SUBROUTINE LPCKC

This routine forms the lumped parameter cell element stiffness and stress matrices.

Algorithm

The following matrix equations are evaluated using data stored in labeled common. Matrix dimensions are given in parentheses at the left.

(30 x 30)
$$\overline{k} = \begin{bmatrix} 4 & (v_k \sigma_F^T C_{k1} \sigma_F) + \frac{8}{5} (v_k \sigma_F^T C_{k2} \sigma_F) \end{bmatrix}^{-1}$$

(12 x 30)
$$\sigma_{\overline{F}} = \begin{bmatrix} \begin{pmatrix} 4 & v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 4 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 4 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\ v_k & \sigma_{\overline{F}k} \end{pmatrix} / \begin{pmatrix} 8 & v_k \\$$

Input/Output

Diagnostics are written onto tape 6.

Argument List

KB A real array used to store the LPC stiffness matrix

GC An real scalar defining the cell stiffness matrix suppression coefficient

KCFLAG An integer scalar control flag which, if zero, signals generation of matrices KBAR and SPBAR, and if one, signals generation of CBAR

Labeled Common

IERRØR, LPCEM, LPCV, LPEP, WRK

Subroutines Called

LPCPRT, SID, WRMAT

Error Detection

If SID cannot invert KBAR, a diagnostic is printed, intermediate calculations dumped, and the IERRØR flag set equal one. Return is made to the calling routine. The loss of significant digits is checked and, if less than two, a warning diagnostic is printed and execution is allowed to continued.

SUBROUTINE LPCPRM

This routine prints the output matrices for lumped parameter cell elements.

Algorithm

Matrix partitions for cell elements and the contents of labeled common LPCEM are printed.

Input/Output

Matrix data for cell elements are written onto tape 6.

Argument List

None

Labeled Common

LPCEM

Error Detection

SUBROUTINE LPCPRT

This routine prints the input and intermediate calculations for lumped parameter cell elements.

Algorithm

Intermediate cell element calculations and the contents of labeled common LPEP and LPCV are printed.

Input/Output

Intermediate cell element data are written onto tape 6.

Argument List

None

Labeled Common

LPEP, LPCV, JØRT

Subroutines Called

None

Error Detection

SUBROUTINE LPCSM

This routine saves lumped parameter cell element data on external files.

Algorithm

The matrix partitions representing the contribution of this element to each of the output matrices are written onto the appropriate scratch tape.

Input/Output

The data output to scratch tapes is as follows:

Tape	Data
7	Element variable table
8	CBAR
9	EBØT
10	EMASS
11	EPSSIG
12	FFBAR
13	KBAR
14	KLPC
15	SFBAR
18	Element constant table

Argument List

NCELL An integer scalar defining the bar element number

TMPAVG A real scalar defining the element average temperature

Labeled Common

LPCEM, LPCV, LPEP, MTRL

Subroutines Called

None matte on attact described " Pas matters as a first I cover and was addition

Error Detection

None

The matrix partitions representing the contribution of this element to been of the output estrices are written and the eparaprises

SUBROUTINE LPCZM

This routine initializes the matrix arrays for lumped parameter cell elements.

Algorithm

All arrays in labeled common block LPCEM are set to zero.

Input/Output

None

Argument List

None

Labeled Common

LPCEM

Subroutines Called

None

Error Detection

SUBROUTINE LPMAP

This routine acts as the executive routine for computing the lumped parameter membrane (approxiate parallelogram) matrices.

Algorithm

Routine LPMG is called to compute membrane element geometry. Routine LPMSZD is then invoked to form the p, q, r, and s components of matrices S, Z and \widetilde{D} . Routines LPMKC, LPMK and LPMFFB are then called to assemble matrices \overline{k} , k and $F_{\overline{k}}$, respectively.

Using the compliance and stiffness matrices C_k and \overline{k} , the code forms the matrices ε_σ and \overline{c} . Routine LPMM is then called to compute the element mass matrix, m. Finally, routine LPMEBT is called to form matrices $\delta \overline{e}_T$ and \overline{e}_{TA} .

Input/Output

None

Argument List

None

Labeled Common

JØRT, LPEP, LPMDSZ, LPMEM, LPMV

Subroutines Called

LPMEBT, LPMFFB, LPMG, LPMK, LPMKC, LPMM, LPMPRM, LPMPRT, LPMSZD, LPMZM

Error Detection

SUBROUTINE LPMC

This routine forms the compliance matrix for lumped parameter membrane elements.

Algorithm

The compliance matrix C_k of order 3 x 3 is formed from the material properties of the element. Using Young's Modulus, E, and Poisson's Ratio, NU, matrix C_k is assembled as shown below.

$$C_{k} = \frac{1}{E} \begin{bmatrix} 1 & -NU \\ -NU & 1 \\ 2(1 + NU) \end{bmatrix}$$

Input/Output

None

Argument List

None

Labeled Common

LPEP

Subroutines Called

None

Error Detection

SUBROUTINE LPMD

This routine generates the $\widetilde{\mathbb{D}}$ matrices for lumped parameter parallelogram elements.

Algorithm

The following matrix equation is evaluated to form the matrix \overline{D} of order 3 x 3.

$$\tilde{\mathbf{D}} = \frac{\mathbf{A}}{\mathbf{t}} (\mathbf{S}^{\mathsf{T}} \mathbf{z}^{\mathsf{T}} \mathbf{c}_{k} \mathbf{z} \mathbf{S})$$

Input/Output

None

Argument List

AØT	A real scalar equal to A*B*SIN(THETA)/T
C	A real array for the compliance matrix
D	A real array for the \widetilde{D} matrix
S	A real array for the skew stress matrix
Z	A real array for the global translation matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE LPMEBT

This routine calculates unassembled element deformations due to unit temperature change at the joints defining a membrane element and the initial thermal deformations of the element.

Algorithm

The theoretical definition of matrix $\overline{e}_{T\Delta}$ as a function of geometry and the coefficient of thermal expansion is as follows:

where

$$L_2 = |\overline{pq}|$$

$$L_4 = |\overline{rs}|$$

$$L_6 = |\overline{rq}|$$

$$L_8 = |\overline{ps}|$$

However, matrices $\overline{e}_{T\Delta}$ and $\delta\overline{e}_{T}$ used by the code are single column matrices. Matrix $\delta\overline{e}_{T}$, initial thermal deformations, is formed by multiplying the terms in each column shown above by the initial thermal gradient at the referenced joints and summing the columns. Matrix

 $\overline{e}_{T\Delta}$ used by the code represents unassembled element deformations due to an average unit joint temperature change for the element. It is formed by simply summing the columns shown above. Subsequently, this column matrix is scaled by the average joint temperature change for the element.

Input/Output

None-

Argument List

None

Labeled Common

LPEP, LPMEM, LPMV

Subroutines, Called

None

Error Detection

SUBROUTINE LPMFFB

This routine generates the transformation matrix for the lumped parameter membrane element.

Algorithm

The transformation matrix $F_{\overline{F}}$ of order 16 \times 9 is assembled as shown below.

$$F_{\overline{F}} = \begin{bmatrix} -a_{\chi} & -d_{\chi} & -d_{\chi}$$

Input/Output

None

Argument List

Labeled Common

LPEP, LPMEM, LPMV

Subroutines Called

None

Error Detection

None

0

SUBROUTINE LPMG

This routine computes vector geometry for lumped parameter membrane parallelogram elements.

Algorithm

Edge Vectors

$$\overline{pq} = \overline{q} - \overline{p}$$
 and $\overline{qp} = -\overline{pq}$

$$\overline{rq} = \overline{q} - \overline{r}$$
 and $\overline{qr} = -\overline{rq}$

$$\overline{rs} = \overline{s} - \overline{r}$$
 and $\overline{sr} = -\overline{rs}$

$$\overline{ps} = \overline{s} - \overline{p}$$
 and $\overline{sp} = -\overline{ps}$

$$\overline{a} = \overline{pq} / |\overline{pq}|$$

$$\overline{d} = \overline{ps} / |\overline{ps}|$$

$$\overline{e} = \overline{ps} \times \overline{pq} / |\overline{ps} \times \overline{pq}|$$

K Factors

$$K_1 = -(\overline{a} \times \overline{qr}) \cdot \overline{c} / (\overline{e} \times \overline{qr}) \cdot \overline{c}$$

$$K_2 = -(\overline{a} \times \overline{ps}) \cdot \overline{e} / (\overline{b} \times \overline{rs}) \cdot \overline{e}$$

$$K_3 = -K_2 (\overline{b} \times \overline{qp}) \cdot \overline{e} / (\overline{c} \times \overline{sp}) \cdot \overline{e}$$

$$K_4 = -K_3 (\overline{c} \times \overline{sp}) \cdot \overline{a} / (\overline{e} \times \overline{sp}) \cdot \overline{a}$$

$$K_5 = -(\overline{a} \cdot \overline{d}) - K_2 (\overline{b} \cdot \overline{d}) - K_3 (\overline{c} \cdot \overline{d})$$

Corner Angles

$$\theta_{\rm p} = \cos^{-1} \left(-\overline{a} \cdot \overline{d} \right)$$

$$\theta_s = \cos^{-1} (\overline{c} \cdot \overline{d})$$

$$\theta_{\rm q} = \cos^{-1} \left(\overline{a} \cdot \overline{b} \right)$$

$$\theta_r = \cos^{-1}(-\overline{c} \cdot \overline{b})$$

Volumn and Mass

$$V = \frac{t}{2} (\overline{pq} \times \overline{rq} + \overline{rs} \times \overline{ps})$$

M = 0 V

Input/Output

None

Argument List

None

Labeled Common

JØRT, LPEP, LPMV

Subroutines Called

VECT

Error Detection

SUBROUTINE LPMK

This routine computes the transformed element stiffness matrix for lumped parameter membrane elements.

Algorithm

The following matrix equation is evaluated where k is of order 16 x 16.

Input/Output

None

Argument List

KLPM A real array for the element k matrix

KBAR . A real array for the element stiffness matrix

A real array for the unassembled to global transformation **FFBAR**

matrix

NK An integer scalar defining the number of rows and

columns of array KLPM

NKB An integer scalar defining the number of rows and

columns of array KBAR

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE LPMKC

This routine forms the lumped parameter membrane stiffness matrix.

Algorithm

The flexibility matrix, d, for the membrane element is first formed by evaluating the matrix equation

$$d = (T_p^{T_D^*} T_p + T_q^{T_D^*} T_q + T_r^{T_D^*} T_r + T_s^{T_D^*} T_s)$$

where the actual assembly of matrix d is done element by element knowing the configuration of the T and \widetilde{D} matrices.

After the assembly of matrix d, routine SID is called to obtain the inverse which is the element stiffness matrix \overline{k} .

Input/Output

Diagnostics are written onto tape 6.

Argument List

FK A real scalar defining the element

JMN An integer array containing membrane joint numbers JP, JQ, JR, JS

KBAR A real array for the LPM stiffness matrix

Labeled Common

LPMDSZ

Subroutines Called

LPMPRT, SID

Error Detection

If SID cannot invert KBAR, a diagnostic is printed, intermediate calculations dumped, and the IERRØR flag set equal one. Return is then made to the calling routine. The loss of significant digits is also checked, and, if less than 2, a warning diagnostic is printed and execution is allowed to continue.

SUBROUTINE LPMM

This routine forms the mass matrix for lumped parameter membrane elements.

Algorithm

The element mass matrix m of order 16 x 16 is assembles as shown below.

$$m = \frac{\rho V}{36} = \begin{bmatrix} 4 & 2 & 1 & 2 \\ 4 & 2 & 1 & 2 \\ 2 & 4 & 2 & 1 \\ 2 & 4 & 2 & 1 \\ 2 & 4 & 2 & 1 \\ 1 & 2 & 4 & 2 \\ 1 & 2 & 4 & 2 \\ 1 & 2 & 4 & 2 \\ 2 & 1 & 2 & 4 \\ 2 & 1 & 2 & 4 \\ 2 & 1 & 2 & 4 \\ 2 & 1 & 2 & 4 \end{bmatrix}$$

Input/Output

None

Argument List

EMASS A real array in which the mass matrix is to be generated

N An integer scalar defining the maximum dimensions of

the array EMASS

PV A real scalar defining the quantity pv Labeled Common

None

Subroutines Called

None

Error Detection

None

0

SUBROUTINE LPMPRM

This routine prints the output matrices for lumped parameter membrane elements.

Algorithm

Matrix partitions for membrane elements and the contents of labeled common LPMEM are printed.

Input/Output

Matrix data for membrane elements are printed on tape 6.

Argument List

None

Labeled Common

LPMEM

Subroutines Called

WRMAT

Error Detection

SUBROUTINE LPMPRT

This routine prints the input and intermediate calculations for lumped parameter membrane.

Algorithm

Intermediate membrane element calculations and the contents of labeled common LPEP, LPMV and LPMDSZ are printed.

Input/Output

Intermediate membrane element data are printed on tape 6.

Argument List

None

Labeled Common

JØRT, LPEP, LPMDSZ, LPMV

Subroutines Called

None

Error Detection

SUBROUTINE LPMSM

This routine saves lumped parameter membrane element data on external files.

Algorithm

The matrix partitions representing the contribution of this element to each of the output matrices are written onto the appropriate scratch tape.

Input/Output

The data output to scratch tapes is as follows:

Tape	Data
7	Element variable table
8	CBAR
9 .	EBØT
10	EMASS
11	EPSSIG
12	FFBAR
13	KBAR
14	KLPC
15	SFBAR
18	Element constant table

Argument List

NMEM	An integer scalar defining the membrane element number
TMPAVG	A real scalar defining the element average temperature

Labeled Common

LPEP, LPMEM, LPMV, MTRL

Subroutines Called

None

Error Detection

None

0

element camping, sciffness, and strain washings.

5) Call roughns CPME to dompate matter 1

SUBROUTINE LPMSZD

This routine computes the area matrices (Sp, Sq, Sr, Ss), the global transformation matrices (Zp, Zq, Zr, Zs), and the D-tilde matrices ($\tilde{D}p$, $\tilde{D}q$, $\tilde{D}r$, $\tilde{D}s$) used to compute the lumped parameter membrane element damping, stiffness, and strain matrices.

Algorithm

The corner angles, ep, eq, er, and es, are tested for equality which would indicate the element is a parallelogram. If they are not equal, the following six steps are executed for each of the four element sides using the corresponding edge vector and corner angle.

- 1) $a = \frac{1}{2} |\overline{ps}|$ (constant for all sides)
- 2) $b = \frac{1}{2} |\overline{pq}|$ (substituting \overline{rq} , \overline{rs} and \overline{ps})
- 3) $\frac{A}{t} = a b \sin \theta p$ (substituting θq , θr and θs)
- 4) Sp = $\begin{bmatrix} \frac{1}{b} & \frac{1}{a} \\ \frac{1}{a} & \frac{1}{a} \end{bmatrix}$
- 5) Call routine LPMZ to compute matrix Z
- 6) Call routine LPMD to compute matrix D

If the element is a parallelogram, the S, Z and \tilde{D} matrices corresponding to each side of the element are equal. In this case, the S, Z and \tilde{D} matrices are computed for the first side and copied for the other three sides.

After completing the above procedure, if the element is a parallelogram, routine LPMS1 is called to form matrix $\sigma_{\overline{F}}$. If the element is not a parallelogram, routine LPMS2 generates matrix $\sigma_{\overline{F}}$.

Input/Output

None

Argument List

CK A real array for the compliance matrix

T A real scalar defining the membrane thickness

ZETAPQ A real scalar defining the material or stress orientation angle

Labeled Common

LPMDSZ, LPMEM, LPMV

Subroutines Called

LPMD, LPMS1, LPMS2, LPMZ

Error Detection

SUBROUTINE LPMS1

This routine forms the lumped parameter membrane stress matrix for parallelogram elements.

Algorithm

The stress matrix of order 3×9 for a parallelogram membrane element is given by the matrix equation

$$\sigma_{\overline{F}} = \frac{ZS}{2t} (T_p + T_q + T_r + T_s)$$

or, more explicitly, in terms of the elements of matrix Z, the vector magnitudes a and b, the thickness t, and the element K factor is given by

$$\sigma_{F} = \frac{1}{2t} \begin{bmatrix} c_{1} & \frac{z_{11}}{b} & \frac{z_{11}}{b} & \frac{z_{11}}{b} & \frac{z_{11}}{b} & \frac{z_{12}}{a} & \frac{z_{12}}{a} & \frac{z_{12}}{a} & \frac{z_{12}}{a} \\ c_{2} & \frac{z_{21}}{b} & \frac{z_{21}}{b} & \frac{z_{21}}{b} & \frac{z_{21}}{b} & \frac{z_{22}}{a} & \frac{z_{22}}{a} & \frac{z_{22}}{a} & \frac{z_{22}}{a} \\ c_{3} & \frac{z_{31}}{b} & \frac{z_{31}}{b} & \frac{z_{31}}{b} & \frac{z_{31}}{b} & \frac{z_{31}}{a} & \frac{z_{32}}{a} & \frac{z_{32}}{a} & \frac{z_{32}}{a} \end{bmatrix}$$

where

$$c_1 = Z_{13} (1 + K)/a$$

 $c_2 = Z_{23} (1 + K)/a$
 $c_3 = Z_{33} (1 + K)/a$

Input/Output

None

Argument List

FK

A real scalar defining the K factor

SFBAR

A real array for the element stress matrix

THICK

A real scalar defining the membrane thickness

Labeled Common

LPMDSZ

Subroutines Called

None

Error Detection

SUBROUTINE LPMS2

This routine forms the lumped parameter membrane stress matrix for approximate parallelogram elements.

Algorithm

The stress matrix of order 3×9 for an approximate parallelogram element is given by the matrix equation

$$\sigma_{\overline{F}} = \frac{1}{4t} \left(Z_p S_p T_p + Z_q S_q T_q + Z_r S_r T_r + Z_s S_s T_s \right)$$

or, more explicitly, in terms of the elements of matrix Z for each edge, the vector magnitudes a and b for each edge, the thickness t, and the element K factor is given by:

$$\sigma_{F} = \frac{1}{4t} \begin{bmatrix} c_{1} & \frac{Z_{q11}}{b_{q}} & \frac{Z_{p11}}{b_{p}} & \frac{Z_{r11}}{b_{r}} & \frac{Z_{s11}}{b_{s}} & \frac{Z_{q12}}{a_{q}} & \frac{Z_{r12}}{a_{r}} & \frac{Z_{p12}}{a_{p}} & \frac{Z_{s12}}{a_{s}} \\ c_{2} & \frac{Z_{q21}}{b_{q}} & \frac{Z_{p21}}{b_{p}} & \frac{Z_{r21}}{b_{r}} & \frac{Z_{s21}}{b_{s}} & \frac{Z_{q22}}{a_{q}} & \frac{Z_{r22}}{a_{r}} & \frac{Z_{p22}}{a_{p}} & \frac{Z_{s22}}{a_{s}} \\ c_{3} & \frac{Z_{q31}}{b_{q}} & \frac{Z_{p31}}{b_{p}} & \frac{Z_{r31}}{b_{r}} & \frac{Z_{s31}}{b_{s}} & \frac{Z_{q32}}{a_{q}} & \frac{Z_{r32}}{a_{r}} & \frac{Z_{p32}}{a_{p}} & \frac{Z_{s32}}{a_{s}} \\ \end{bmatrix}$$

where

$$c_{1} = \frac{1}{2} \left[\frac{Z_{p13}}{a_{p}} + \frac{Z_{q13}}{a_{q}} + K \left(\frac{Z_{r13}}{a_{r}} + \frac{Z_{s13}}{a_{s}} \right) \right]$$

$$c_{2} = \frac{1}{2} \left[\frac{Z_{p23}}{a_{p}} + \frac{Z_{q23}}{a_{q}} + K \left(\frac{Z_{r23}}{a_{r}} + \frac{Z_{s23}}{a_{s}} \right) \right]$$

$$c_{3} = \frac{1}{2} \left[\frac{Z_{p33}}{a_{p}} + \frac{Z_{q33}}{a_{q}} + K \left(\frac{Z_{r33}}{a_{r}} + \frac{Z_{s33}}{a_{s}} \right) \right]$$

Input/Output

None

Argument List

FK A real scalar defining the K factor

SFBAR A real array for the element stress matrix

THICK A real scalar defining the membrane thickness

Labeled Common

LPMDSZ

Subroutines Called

None

Error Detection

SUBROUTINE LPMZ

This routine forms the lumped parameter membrane global translation matrix.

Algorithm

Matrix Z of order 3 x 3 is formed as shown below:

$$Z = \frac{1}{\sin(\text{THETA})} \begin{bmatrix} z_{11} & z_{12} & z_{13} \\ z_{21} & z_{22} & z_{23} \\ z & z & z_{31} \\ 31 & 32 & 33 \end{bmatrix}$$

where

 $z_{11} = \cos^2(ZETA)$

 $z_{21} = \sin^2(ZETA)$

 $z_{31} = -\sin(ZETA)\cos(ZETA)$

 $z_{12} = \cos^2(\text{THETA-ZETA})$

 $z_{22} = \sin^2(\text{THETA-ZETA})$

 $z_{32} = sin(THETA-ZETA) cos(THETA-ZETA)$

z₁₃ = 2 cos(THETA-ZETA) cos(ZETA)

z₂₃ = -2 sin(THETA-ZETA) sin(ZETA)

z₃₃ = sin(THETA-ZETA)cos(ZETA)-cos(THETA-ZETA)sin(ZETA)

Input/Output

None

Argument List

THETA A real scalar defining the corner angle

Z A real array for the global translation matrix

ZETA A real scalar defining the material orientation angle

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE LPMZM

This routine initializes the matrix arrays for lumped parameter membrane elements.

Algorithm

All arrays in labeled common block array LPMEM are set to zero.

Input/Output

None

Argument List

None

Labeled Common

LPMEM

Subroutines Called

None

Error Detection

SUBROUTINE LTRMLT

This routine performs a transpose multiply matrix operation.

Algorithm

The following matrix operation is performed:

C = AT B

Input/Output

None

Argument List

A	A real array for the matrix to be transposed
М	An integer scalar defining the number of rows of A
N	An integer scalar defining the number of columns of A
MAXRA	An integer scalar defining the max rows of A
MAXCA	An integer scalar defining the max columns of A
B troops	A real array for matrix B
I bielt mit	An integer scalar defining the number of columns of B
C	A real array for the product matrix C

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE MATDES

This routine processes the material description input data records for a particular material in the material property tables, Data Code 10.

Algorithm

The first card of the material description has been read by routine MTLMØD and is stored in array REC. The routine transfers information from REC to array MRDES until a full word of blanks is encountered. The routine reads, checks, processes and echos the input for continuation cards of the material description. When the description has been completely processed, the pointers pertaining to the beginning and ending of the description words stored in array MRDES are set.

Input/Output

Material descriptions are read from tape 5 and diagnostics are written on tape 6.

Argument List

REC An alphanumeric array containing the input data record

CØNT An alphanumeric scalar containing the continuation field of input record, any non-blank character will indicate a continuation

Labeled Common

IDEN, IERRØR, LIMITS, MRTL

Subroutines Called

None

Error Detection

Checks are made for material reference numbers being out of sequence, for invalid Data Code numbers, and for insufficient space allocated for

input. If an error is detected, IERRØR is set equal one, a diagnostic is printed, and a return is made to the calling routine.

A record, onelve words in langth, is written on tage TARING as

(madosnado 8) show window sor not verys obrewooders of

SUBROUTINE MATHD

This routine writes a FORMAT matrix header record.

Algorithm

A record, twelve words in length, is written on tape TAPENØ as shown below.

Word	Data	Type	Description
1	-1	integer	matrix header code
2	0	integer	compression code
3	9	integer	words remaining in record
4	X	BCD)	
5	X	BCD	
6	X	BCD (
7	X	BCD	matrix name (1 leading character with blank fill)
8	X	BCD	
9	x	BCD)	
10	MF	integer	matrix subscript
11	I	integer	number of rows
12	J	integer	number of columns

Input/Output

A matrix header record is written on tape TAPENØ.

Argument List

TAPENO	An integer scalar defining the logical tape number
NAME	An alphanumeric array for the matrix name (6 characters)
MF	An integer scalar defining the matrix subscript
I	An integer scalar defining the number of rows in the matrix
J	An integer scalar defining the number of columns in the matrix

Labeled Common

None

Subroutines Called

None

Error Detection

None

A matrix trailer record is written on tage TARDUS.

SUBROUTINE MATTR

This routine writes a FØRMAT matrix trailer record.

Algorithm

A record, four words in length, is written on tape TAPENØ as shown below.

Word	Data	Type	Description
1	-2	integer	matrix trailer code
2	0	integer	compression code
3	1	integer	words remaining in record
4	0	integer	dummy data

Input/Output

A matrix trailer record is written on tape TAPENØ.

Argument List

TAPENØ An integer scalar defining the logical tape number

Labeled Common

None

Subroutines Called

None

Error Detected

SUBROUTINE MLTMTR

This routine forms the product of two matrices.

Algorithm

(C) = (A) (B)

Input/Output

None

Argument List

A A real array for the first input matrix

An integer scalar defining the usable rows in matrix A

N An integer scalar defining the usable columns in matrix A

MAXR An integer scalar defining the dimensioned row size of

matrix A

MAXC An integer scalar defining the dimensioned row size of

matrix B

B . a real array for the second input matrix

I A integer scalar defining the usable columns of matrix B

C A real array for the output matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE MLTMOD

This is the executive routine for the module which reads and processes the material property table, Data Code 10.

Algorithm

First the lengths of the coefficient table and the materials description table are initialized.

A material property data card is read, checked for errors, and an echo of the data is printed. If the card is descriptive text for the material, subroutine MATDES is called to process it and any continuation cards. If the card defines a property of the material, subroutine PRØP is called to process the input. This procedure is repeated until all input for all materials is processed.

The necessary constants are saved in labeled common CONST and the assembled material property data is written to tape 1 in the form of a standard FØRMAT matrix. Finally, a report of the output coefficients is printed on tape 6.

Input/Output .

The material property table is input on tape 5. Material property coefficients and diagnostics are output on tape 6. The material property data also output on tape 1 for use by the analysis modules following the initial generator.

Argument List

None

Labeled Common

CONST, IDEN, IERROR, LIMITS, MTRL

Subroutines Called

MATDES, PROP

Error Detection

Checks are made for omissions in the input for a material, for a material reference number out of range for which space has been allocated, for invalid Data Code, and for material reference numbers out of sequence. If an error is detected, appropriate diagnostics are printed, the IERRØR flag is set equal one, and a return is made to the calling routine.

SUBROUTINE ØVER3

This routine searches the constraint table for more than three entries per joint.

Algorithm

It is required that the system of constraints at a joint for translation be statically determinate. Therefore, for translation, the table is searched to determine if there are more than three input constraints acting at a joint.

Input/Output

Diagnostics are written onto tape 6.

Argument List

ICON An integer array for the constraint table

NCT An integer scalar defining the number of records in the

constraint table

JERRS An integer scalar error condition flag for the constraint

table

Labeled Common

IERRØR

Subroutines Called

None

Error Detection

If more than three constraints are found at a joint, a diagnostic is printed, the IERRØR is set equal one, and a return is made to the calling routine.

SUBROUTINE PARTN

This routine partitions a file which is being sorted by routine QKSØRT.

Algorithm

Pointers are set to the top of the file and to the bottom of the file. A pointer is set to the pivot record, that is, the record that is to serve as the partitioning element. The purpose is to end up with all the larger records above the pivot element and all the smaller records below. The number of records in the file is calculated, then a comparison is made between the pivot record (which is initially at the bottom) and the highest record. If the pivot record is smaller, then the pointer to the highest record is moved down to the next record. If the pivot is not smaller, then a swap is made between the pivot record and the compared record. The pointer to the lowest record is moved up and comparisons begin between the pivot record and the records below it. The file is partitioned when the upper and lower pointers are adjacent.

Input/Output

Error messages, if any, are written to file 6.

Argument List

REC An integer array of records to be sorted

CHGSEQ An integer array to specify the original positions of the

sorted records

NREC An integer scalar specifying the number of records in array

REC

LENREC An integer scalar specifying the length of the records in

array REC

Labeled Common

ABC

Subroutines Called

SWAP

Error Detection

A check is made at the end of the partitioning to be sure that the file pointers are correct, that is, the ending low pointer should be immediately after the ending high pointer. If this is not true, then the low, high and pivot pointers are printed along with a diagnostic and the records of the file passed to PARTN for partitioning. Execution is then terminated.

SUBROUTINE PASSM

This is the driver routine for the module which assembles output matrices PRUPT, PRUF and ECT.

Algorithm

After initializing the intermediate error flag, NERR, and rewinding files 16, 17 and 18, routines PASSM1, PASSM2, PASSM4, and PASSM5 are called to assemble matrices ECT, PRUPT and PRUF. File 16 contains constraint description data, file 18 contains element joint numbers as well as other element constants, and file 17 is subsequently used as scratch.

Input/Output

None

Argument List

None

Labeled Common

CONST, EDOF, TEDGE, TERROR, ISEQ

Subroutines Called

PASSM1, PASSM2, PASSM4, PASSM5

Error Detection

If NERR is returned as non-zero by PASSM2, then IERROR is set equal one and a return is made to the calling routine.

SUBROUTINE PASSM1

This routine assembles and outputs matrix ECT and assembles intermediate matrix PFT.

Algorithm

After writing matrix headers on files 17 and 1 for matrices PTF and ECT, the bar data is processed followed by membranes and cells. The same procedure takes place in each case.

The element constants for the next element are read from file 18 into array IECT. Using the edge degree of freedom numbers stored in array IDØF, array IECT is augmented and output to file 1. Array NPF is then set to the degree of freedom numbers corresponding to each of the element forces and output to file 17.

In the case of point mass elements, no data is output to file 1 for matrix ECT. However, array NPF is assembled and output to file 17 in a similar manner as the other elements.

Input/Output

Matrix ECT is output to tape 1. Tape 17 is used as a scratch unit to hold the PTF matrix temporarily. ECT data from the routines LPBSM, LPCSM and LPMSM is input on tape 18. Tape 6 is used to output intermediate calculations if flagged.

Argument List

IEDGE	An integer array of joint pairs defining each edge DØF
IDØF	An integer array relating each edge element force to an edge DØF
IECT	An integer array of element constants
NPF	An integer array used to store a column of PFT

Labeled Common

CONST, IERROR

Subroutines Called

MATHD, MATTR

Error Detection

and placed out to the retaining room at the corresponding column.

Array IISE is used to flag conserained peorugs of treedon as zero

SUBROUTINE PASSM2

This routine assembles intermediate matrix PUPT.

Algorithm

After writing a matrix header on file 18 for matrix PUPT, constraint data is read from file 16 into arrays ICØN and ØBLIQ. The three columns of ICØN contain the constraint number, the joint at which the constraint acts, and the direction description. Values of 1, 2 and 3 for direction description indicate the global X, Y and Z directions, respectively. Values greater than 3 are pointers to array ØBLIQ which contains the direction cosines of oblique constraints.

Using arrays ICON and OBLIQ, matrix PUPT is assembled by omitting rows corresponding to global degrees of freedom which are constrained and placing unity in remaining rows at the corresponding column. In the case of oblique constraints, routine PASSM3 is called to transform global X, Y and Z unit vectors into contributions in the global and/or oblique unconstrained degrees of freedom.

Array IDØF is used to flag constrained degrees of freedom as zero, unconstrained degrees of freedom as one, and degrees of freedom with duplicate constraints as less than zero.

Input/Output

Constraint data is input from tape 16. Matrix PUPT is output to tape 18. Tape 6 is used for printing diagnostics and intermediate calculations if flaged.

Argument List

IEDGE An integer array of joint pairs defining each edge DØF

IDØF An integer array used to flag constrained TDØF and to count and detect duplicate global constraints

ICON An integer array defining each constraint created by the

constraint processor module and written to unit 16

ØBLIQ A real array of direction cosines of oblique constraints

also on unit 16

NERR An integer scalar used as an error flag

Labeled Common

CONST, IERROR

Subroutines Called

MATHD, MATTR, PASSM3

Error Detection

A test is made for duplicate constraints, and, if detected, the NERR flag is set equal one and a return is made to the calling routine. A diagnostic is printed on tape 6.

SUBROUTINE PASSM3

This routine assembles contributions to intermediate matrix PUPT for joints which have oblique reactions.

Algorithm

The equation $[A][B]^{-1} = [C]$ is solved to obtain the contributions to matrix PUPT for a joint with oblique constraints. [A] is an identity of order 3 and [B] contains the direction cosines of from 1 to 3 oblique constraints. Both [A] and [B] are stored in array PF. The code initializes the leading 3 x 3 partition of array PF as an identity.

After solving for [C], the rows corresponding to unconstrained degrees are assembled from each column in arrays P and IP in compressed form. Each column of matrix PUPT so obtained is then output to file 18.

Input/Output

Columns of matrix PUPT are output to tape 18. Tape 6 is used for printing intermediate calculations if flaged.

Argument List

IRF	An integer array which is the partition of array IDØF for the joint being processed
PF	A real array where columns 1 to 3 contain unit vectors in the X, Y, Z global directions and the remaining columns contain the components of reactions acting at this joint
NR	An integer scalar defining the number of reactions at this joint
NERR	An integer scalar used as an error flag
ICØL	An integer scalar defining the column location in PUPT of the last matrix element output
IRØW	An integer scalar defining the row location in PUPT of the last matrix element output

NPASSM An integer scalar used to signal printing of intermediate

Labeled Common

None

Subroutines Called

None

Error Detection

A test is made for duplicate constraints, and, if detected, the NERR flag is set equal one and a return is made to the calling routine.

budgestings and stored to 0,21 and 10021 twarms of bends one beatstance

UOUF you formats are ortated on race &

SUBROUTINE PASSM4

This routine determines the unconstrained degree of freedom (UDØF) row format, the reordered UDØF for SEQWF, prints these row formats, and outputs intermediate matrix PRP.

Algorithm |

Initially, array IEDGE contains pairs of joint numbers identifying each edge degree of freedom. Two joint numbers are stored in a single word by scaling the first joint number by 10000 and adding the second joint number.

Arrays IEDGE and ISEQ are restructured to contain the identification of each unconstrained degree of freedom. The identification for joint degrees of freedom consists of a joint number in array IEDGE and the integer 1, 2 or 3 in array ISEQ indicating global X, Y or Z degree of freedom, respectively. The identification for an edge degree of freedom consists of the first joint number in array IEDGE and the negative of the second joint number in array ISEQ.

The joint number pairs initially contained in array IEDGE are extracted and stored in arrays IEDGE and ISEQ at locations corresponding to their proper positions in the unconstrained degree of freedom row format. Then using the array IDØF containing flags identifying constrained and unconstrained joint degrees of freedom, the partition of arrays IEDGE and ISEQ are set to appropriate values.

Arrays IEDGE and ISEQ are then scanned to determine the reordered unconstrained degree of freedom format. The reordered position of entries in arrays IEDGE and ISEQ is stored in array IDØF.

Input/Output

Reports of the unconstrained degrees of freedom and the reordered UDØF row formats are printed on tape 6.

Argument List

IEDGE An integer array of joint pairs defining each edge DØF

An integer array of flags identifying joint constrained and unconstrained ${\tt DØF}$ IDØF

An integer array used for intermediate storage ISEQ

Labeled Common

CONST, IERROR

Subroutines Called

MATHD, MATTR, PASSM3

Error Detection

SUBROUTINE PASSM5

This routine assembles and outputs matrices PRUF and PRUPT from data stored in array IDØF and intermediate matrices PUPT and PTF which are on tape.

Algorithm

Array IEDGE is initialized as zero for a length equal to the total number of degrees of freedom. Matrix PUPT is then read from file 18 one column at a time. Using the reordered row positions stored in array IDGF, the reordered elements of matrix PRUPT are stored in arrays IEDGE and ISEQ. Array IEDGE contains a positive or negative integer at the row location corresponding to the column of matrix PUPT read from file 18. A positive integer indicates a single value of unity for that column of matrix PRUPT at the row position equal to the integer value. A negative integer indicates more than one value is present in the column. This occurs only at joints where oblique constraints are present. In this case, the absolute value of the integer points to a location in array ISEQ containing the number of values present in the column. Immediately following in array ISEQ, are pairs of values and reordered row locations of that column.

After sorting the value/location pairs for a column in array ISEQ, the column of matrix PRUPT is output to file I using the data contained in arrays IEDGE and ISEQ.

The coefficients in arrays ISEQ are then made negative for use in conjunction with the assembly of matrix PRUF. Matrix PFT is then read from file 17 one column at a time. Each column of matrix PTF contains the total degree of freedom number for each force for an element. Using these numbers as pointers into array IEDGE, the columns of matrix PRUF are assembled and output to file 1.

Input/Output

Matrices PRUPT and PRUF are output onto tape 1. Matrix PTF is input from tape 17 and matrix PUPT is input from tape 18. Intermediate calculations are printed on tape 6 if flaged.

Argument List

IEDGE An integer array containing the reordered row positions of each UDDF

IDØF An integer array used to store reordered row positions of each TDØF

ISEQ An integer array used to store values and positions of elements of matrix PUPT when a column contains other than a single value of unity

IPFT An integer array used to store columns of matrix PRP

Labeled Common

CONST, IERROR

Subroutines Called

MATHHD, MATTR, PASSM6

Error Detection

SUBROUTINE PASSM6

This routine sorts array ISEQ columnwise into ascending order based on the values in the second row of array ISEQ.

Algorithm

Array ISEQ contains matrix element values in the first row and matrix element row locations in the second row. The columns are sorted based on the values in the second row. Note that the number of columns in array ISEQ must be two or more.

Input/Output

None

Argument List

ISEQ An integer array used to store values and positions of elements

of matrix PUPT

KNUM An integer scalar defining the number of columns in ISEQ

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE PROP

This routine processes the material property value input data records for a particular material in the material property tables, Data Code 10.

Algorithm

The first material property card has been read by routine MTLMØD and is stored in array REC. The parameters in labeled common IDEN have also been initialized.

The next material property card is read, checked for correctness of input and to determine if it is a continuation card associated with the property. If coefficients are input, they are saved in array AP. If temperature-value pairs are input, the temperature-value arrays are set up to compute the coefficients. The coefficients are then computed by subroutine CQCALC.

The coefficients for this property are moved from array AP to array CØEFS, the pointers and counters updated, and the data for the next property is read and processed similarly.

Input/Output

Material property data is read from tape 5. Diagnostics are printed on tape 6.

Argument List

REC A real array containing the current input data record

Labeled Common

CØFCLC, IDEN, IERRØR, LIMITS, MTRL

Subroutines Called

CØCALC

Error Detection

Checks are made to insure that there is sufficient space allocated for the materials input, that the number of coefficients read is equal to the number requested, that the number of coefficients to be calculated is not greater than the number of values input, that the number of coefficients will not overflow the space allocated for all coefficients, that there are not more properties to be input than space is allocated for, that there is not more coefficients to be input than space is allocated for, that a wrong material reference number was input, or that a bad Data Code was input.

SUBROUTINE PRTCØN

This routine prints the contents of labeled common block CONST.

Algorithm

The contents of labeled common CØNST, consisting of model size data and problem constants, is printed.

Input/Output

Problem constants and sizing variables are printed on tape 6.

Labeled Common

CØNST, IERRØR

Subroutines Called

None

Error Detection

SUBROUTINE QKSØRT

This is the driver routine for the module that accomplishes file sorting by the infile Quick Sort technique (Reference 17).

Algorithm

The upper and lower records of the target file are identified. The file is partitioned into 2 subfiles relative to the key field of a specified record. The subfiles are identified by a stack of pointers. Subfiles are removed from the stack and partitioned until there are no subfiles remaining. If a subfile consists of only 2 records, then it is ordered and need not be stacked with the other subfiles. When no subfiles remain, then the file is sorted.

Input/Output

None

Argument List

REC	An integer array of records to be sorted
CHGSEQ	An integer array to specify the original positions of the sorted records
NREC	An integer scalar specifying the number of records in array REC
LENREC	An integer scalar specifying the length of each record in array REC
ITØP	An integer scalar pointing to the last record in array REC
IBØT	An integer scalar pointing to the first record in array REC
KYFLD	An integer scalar pointing to the record element containing the sort key

Labeled Common

ABC

Subroutines Called

PARTN, STACK, SWAP

Error Detection

None

Already and the thought of beated are tested to determine it the material

SUBROUTINE RAMOSG

This routine calculates the Ramberg-Osgood coefficient, the slope tangent to the Ramberg-Osgood curve at the origin, and the elastic limit stress.

Algorithm

First, the input properties are tested to determine if the material has a plastic range. If $E_A = E$, $\sigma_A = \sigma_r$ and $\varepsilon_r = \frac{\overline{\sigma r}}{E}$, the material is assumed to be totally elastic. The program sets n = 1, $\overline{E} = E$, and $\overline{\sigma_1} = \overline{\sigma_r}$ and returns to the calling routine.

If the material has a plastic range, the Ramberg-Osgood coefficient, n, the initial slope of the stress/strain curve, \overline{E} , and the elastic limit stress, $\overline{\sigma}_{L}$, are solved for using an iterative approach. Initializing

$$r = \frac{E_A}{E}$$
and $n_0 = 50.0$

the following equations are evaluated in an iterative manner until n has converged or the iterative count, k, reaches 50.

CALC1 =
$$1.0 - r^{n_{k-1}-1}$$

$$R_{k-1} = \frac{E_A}{E} - r^{n_{k-1}-1}$$

$$CALC2 = \varepsilon_r - R_{k-1} = \frac{\overline{\sigma}_r}{E_A}$$

$$CALC4 = \frac{\overline{\sigma}_A}{E_A}$$

$$CALC5 = \frac{\overline{\sigma}_r}{\overline{\sigma}_A}$$

$$n_k = \frac{\ln (CALC2) - \ln (1-R_{k-1}) - \ln (CALC4)}{\ln (CALC5)}$$

When n has converged, processing is completed by evaluating the following equations:

$$R = \frac{\frac{E_A}{E} - r^{n-1}}{1 - r^{n-1}}$$

$$E = \frac{E_A}{R}$$

$$\sigma_1 = r \overline{\sigma}_A$$

If convergence does not take place, a fatal error condition occurs causing subsequent failure of the run.

Input/Output

Diagnostics are written on tape 6.

Argument List

MR

An integer scalar defining the material reference number

Labeled Common

IERRØR, MTRL

Subroutines Called

None

Error Detection

Checks are made to detect various denominators being equal to zero, non-convergence, and an attempt to extract the logorithm of zero. The

errors associated with each of the potential errors codes printed in the diagnostic message are listed below:

Error Code	Er	ror
1	E	= 0.0
2	EA	= 0.0
3	$\overline{\sigma}_{A}$	= 0.0
4	no con	vergence
5	CALC1	= 0.0
6	R	= 1.0
7	CALC2	= 0.2
9	CALC4	= 0.0
10	CALC5	= 0.0

SUBROUTINE SID

This routine inverts a real non-singular square matrix (A), and if desired, will also solve linear system(s) of simultaneous equations, (A)(X) = (B) where (B) may have any number of columns. Every column of (B) must have at least one non-zero element.

Algorithm

The numerical method is basically the Gauss-Jordan elimination with selection of maximum pivotal elements (full pivoting). Special procedures are present to improve accuracy and also minimize the frequency of over-flow and underflow when the magnitudes of any of the elements in the (A) or (B) matrices are large or small.

Input/Output

None

Argument List

Argument L	ist was K
A	A two-dimensional real array which contains (A). (A) will be replaced by inverse (A) during the execution of SID.
N	An integer which denotes the number of rows in (A)
NDRØW	An integer scalar which denotes the maximum number rows which may be stored in the A array. Note that the matrix (A) may have fewer rows and/or columns than the array A which contains it.
NDCØLA .	An integer scalar which denotes the maximum number of columns which may be stored in the A array
В	A real array which contains (B). If (B) is present, the B array must have exactly NDRØW rows. (B) will be replaced by (X) during the execution of SID. If no (B) is present, B may be any variable or constant of any type.

An integer scalar which denotes the number of columns in (B). If there is no (B), use M = 0.

NDCØLB An integer which denotes the maximum number of columns

which may be stored in the B array. If no (B) is

present, NDCDLB may have any value.

SIGDIG A real scalar which will be set equal to an estimate of the number of significant digits in the elements in the inverse. This estimate is based on the assumption that the elements of

(A) are all accurate to eight significant digits.

IERRØR An integer scalar used to flag errors. IERRØR = -1 indicates

both of the following:

1) neither (A)⁻¹ nor (X) could be computed
2) (A) was singular or nearly so.

IERROR = 1 indicates no errors were detected. Division by zero cannot occur in this routine. No test is made for

floating point overflow.

PIVØT A real array containing at lease 3*N elements

INDEX An integer array containing at least 3*N elements

SCALEB A real array containing at least M elements

Labeled Common

None

Subroutines Called

None

Error Detection

See IERRØR and SIGDIG under Argument List above.

SUBROUTINE SKDATA

This routine skips over Data Codes in the card input tables which are not used by the initial generator.

Algorithm

The input file is read and each card is checked to determine if it is the end card for the Data Code to be skipped over. When the end card is encountered, a return is made to the calling routine. If a Data Code is encountered which is less than the Data Code to be skipped over, an error exit occurs. If the Data Code is larger, the input pointer is backed up and a normal exit is made.

Input/Output

Input is read from tape 5 and error diagnostics are written on tape 6.

Argument List

ICODE An integer scalar defining the Data Code number to be read over

Labeled Common

None

Subroutines Called

None

Error Detection

If the data cards are out of sequence, the IERRØR flag is set equal one and control is returned to the calling routine.

SUBROUTINE STACK

This subroutine stacks pointers to subfiles of a file that is being sorted by routine QKSØRT.

Algorithm

The lengths of the lower and upper subfiles are calculated. The largest subfile is stacked first. If they are of equal length, then the upper file is stacked first. Subfiles of 2 records are not stacked.

Input/Output

None

Argument List

REC An integer array of records to be sorted

NREC An integer scalar specifying the number of records in array

REC

LENREC An integer scalar specifying the length of the records in

array REC

Labeled Common

ABC

Subroutines Called

None

Error Detection

SUBROUTINE SWAP

This routine switches the positions of two records in a table that is being sorted by routine QKSØRT.

Algorithm

Two rows of length LENREC in array REC are interchanged as are two entrys in array CHGSEQ. The counter ISWAP is incremented for each interchange made in array REC.

Input/Output

None

Argument List

I	An integer scalar defining the first row of array REC
J	An integer scalar defining the second row of array REC
CHGSEQ	An integer array of original row positions of array REC
NREC	An integer scalar defining the number of rows in array REC
LENREC	An integer scalar defining the number of columns in array REC
REC	An integer array for the table to be sorted

Labeled Common

ABC

Subroutines Called

None

Error Detection

SUBROUTINE TAPEHD

This routine writes a FORMAT tape header record.

Algorithm

A record ten words in length is written on tape TAPENØ as shown below.

Word			- 1	Da	ta			Туре	Description
1				-	10			integer	tape header code
2					0			integer	compression code
3					7			integer	words remaining in record
4	X							BCD	
5	X							BCD	tape name
6	X							BCD	(1 leading character
7	X							BCD	with blank fill)
8	X							BCD	
9	X							BCD	
10				M	OD			integer	tape modifier

Input/Output

A tape header is written on tape TAPENØ.

Argument List

TAPENØ	An integer scalar defining the logical tape number
NAME	An alphanumeric array for the tape (6 characters)
MØD	An integer scalar defining the tape modifier

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE TAPETR

This routine writes a FØRMAT tape trailer record.

Algorithm

A record of four words in length is written on tape TAPENØ as shown below.

Word	Data	Type	Description
1	-20	integer	tape trailer code
2	0	integer	compression code
3	1	integer	words remaining in record
4	0	integer	dummy data

Input/Output

Writes a tape trailer on tape TAPENØ.

Argument List

TAPENØ An integer scalar defining the logical tape number

Labeled Common.

None

Subroutines Called

None

Error Detection

SUBROUTINE VECT

This routine performs vector operations.

Algorithm

The following vector operation is performed according to the value of N.

- N Operation
- $\overline{c} = \overline{B} \overline{A}$
- $\overline{c} = \overline{B} \times \overline{A}$
- $\overline{c} = \overline{B} \cdot \overline{A}$
- $4 \quad \overline{c} = \overline{B} + \overline{A}$

The magnitude of the resultant vector \overline{c} is then computed and stored in T. If normalization is requested, the components of the resultant vector \overline{c} are divided by T for N equal to 1, 2, or 4.


Input/Output

None

Argument List

- N An integer scalar specifying which vector operation to perform
- A A real array for the first impact vector
- B A real array for the second impact vector
- C A real array for the resultant vector
- T A real scalar for the resultant vector magnitude
- I An integer scalar controlling normalization of the resultant vector

Labeled Common

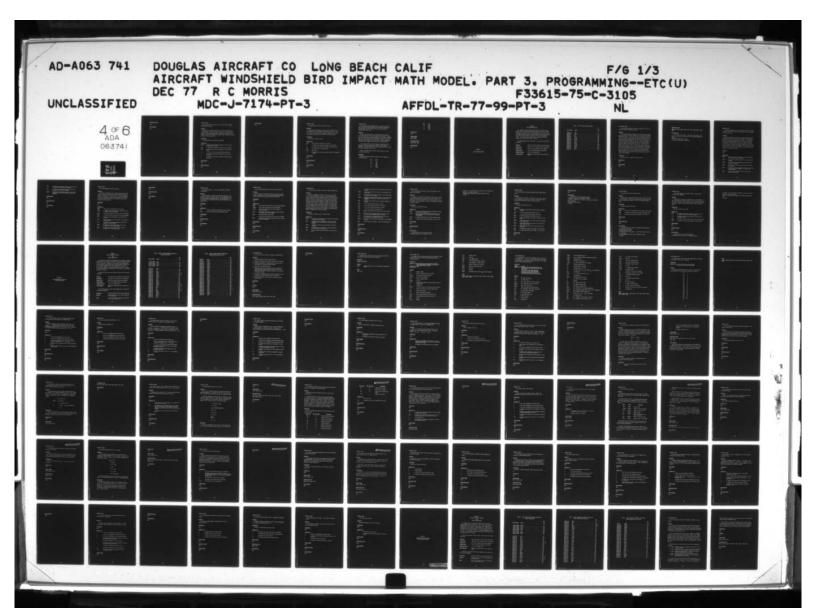

Subroutines Called

None

Error Detection

None

and to serviced conjectives and under market bee 1889) was as at whaten

Algorithm.

. 50007

SUBROUTINE WPART

This routine writes a partition of a matrix onto tape in standard FØRMAT matrix data format.

Algorithm

Each column of the matrix partition A is written onto tape in the compressed mode. The origin of matrix partition A in the overall output matrix is at row IRØW and column ICØL. The row/column indices of the element of array A are incremented by IRØW and ICØL to obtain their proper location in the overall matrix.

Input/Output

A matrix partition is written onto tape TAPENØ.

Argument List

TAPENØ	An integer scalar defining the number of the last column output logical tape number
IRØW	An integer scalar defining the number of last row output
ICØL	An integer scalar defining the number of the last column output
Α	A real array for the core resident matrix partition A
М	An integer scalar defining the number of rows of matrix partition A
N	An integer scalar defining the number of columns of matrix partition ${\sf A}$

Labeled Common

None

Subroutines Called

Error Detection

SUBROUTINE WRMAT

This routine prints a matrix residing in the core.

Algorithm

The maximum column dimension of the matrix to be printed is 50. If MAP is equal to zero, the elements of the matrix are printed. If MAP is not zero, a map of the non-zero elements of the matrix is printed. This routine is executed only in runs made for program checkout.

Input/Output

Matrix data is printed on tape 6.

Argument List

AMAT A real array for the matrix to be printed

M An integer scalar defining the number of rows in AMAT

N An integer scalar defining the number of columns of AMAT

MAP An integer scalar print control flag

LABEL Matrix label

An integer scalar defining the number of words (10 char/word) in LABEL

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE WTAPET

This routine reads the element partitions for matrices KEL, MEL, KBAR, CBAR, FFBAR, SIGFB, EPSIG, DEBT, EVT, and CØNST, assembles the partitions into the final matrices, and outputs the matrices as standard FØRMAT matrix data.

Algorithm

The order in which the first nine output matrices are processed is KEL, MEL, KBAR, CBAR, FFBAR, SIGFB, DPSIG, DEBT, and EVT. In each case, the element data is read and processed in the order bars, membranes, and cells. The only matrix having contributions from point mass elements, which are processed last, is matrix MEL. However, trailing null partitions are also present in matrix KEL for point mass elements.

In all of these matrices with the exception of DEBT and EVT, the element partitions are positioned as diagonal or psuedo diagonal partitions. In matrices DEBT and EVT, each element partition is a single column each beginning in the first row.

Finally, array CONST which contains problem constants is output as a single column matrix.

Input/Output

Matrix data is read from tapes 7 through 15 and all output data is written to tape 1.

Tape	Matrix
14	KEL
10	MEL
13	KBAR
8	CBAR
12	FFBAR

Tape	Matrix
15	SIGFB
11	EPSIG
9	DEBT
7	EVT

partitions. In retrices 0207 and fu

Argument List

None

Labeled Common

CØNST, IERRØR

Subroutines Called

MATHD, MATTR, WPART

Error Detection

APPENDIX C

LOADS GENERATOR ROUTINES

routine, only functional duplication is implied.

APPENDIX C LOADS GENERATOR ROUTINES

This appendix contains detailed descriptions of all routines in this program. Table C gives either page number references within this document or references to other documents for documentation of each routine. Some page number references may be to preceding appendices where the documentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm verbal flow chart of routine logic and data flow

Input/Output description of all external data set input/output

Argument List name, type, and description of each argument

Labeled Common list of all labeled common blocks declared

Subroutines Called list of all routines called

description of tests made for errors and action taken

Error Detection

TABLE C. INDEX TO LOADS GENERATOR ROUTINES

															Page	
MAIN PROGRAM	LØDGEN		•	•	•			•	•			•	•		294	
SUBROUTINE	CRØSS				•		•								121	
SUBROUTINE	DELTA														296	
FUNCTION	DØT .														122	
SUBROUTINE	GENAB														298	
SUBROUTINE	INVERT			•											300	
SUBROUTINE	MATMUL														301	
SUBROUTINE	ØUTPUT														302	
SUBROUTINE	READB														304	
SUBROUTINE	READCN														306	
SUBROUTINE	READCØ														308	
SUBROUTINE	READJ												,.		309	
SUBROUTINE .	SQUEEZ														Ref.	5
SUBROUTINE	UVEC .					•									134	

MAIN PRØGRAM LØDGEN

The main program allocates core and calls subroutines to read, calculate, and output incremental loads data.

Algorithm

The subroutines READCØ and READCN are called and the average impact force is calculated. The load increment loop is then entered and READB and READJ are called. The current total load on the model and the location of the center of its footprint for this load increment are calculated, the largest component of the centroidal vector is determined, and the subroutines GENAB and MATMUL are called. If the load increment number is greater than one and less than or equal to the total number of load increments, subroutine DELTA is called. If the increment number is one, there is no need to calculate the change in loads from the preceding increment to this, since this change is the current load, and if the load increment number is equal to the number of increments plus one, the change in load is the negative of the preceding load. Subroutine ØUTPUT is then called and the current loads and the joints of their applications are stored at the end of the A array for use in the next load increment.

Input/Output

There is no input; all output is printed on file 6.

Argument List

None

Labeled Common

Subroutines Called

CRØSS, DØT, MATMUL, READB, READCØ, UVEC, DELTA, GENAB, ØUTPUT, READCN, READJ

Error Detection

If, in either of the checks on utilization of the A array, it is found that the available storage in the A array has been exceeded, the message

'INSUFFICIENT STORAGE nnnnn VS nnnnn' is printed and the program is terminated.

SUBROUTINE DELTA

This routine compares the joint loads of the current load increment to the joint loads of the previous load increment and finds the change in load at each joint.

Algorithm .

Since only non-zero joint loads for the current and previous load increments are stored in order of the joint numbers, there are three basic possibilities for each change in joint load. (1) The joint is loaded in the current increment, but not in the previous increment; (2) the joint is loaded in both the current and previous increments; or (3) the joint was loaded in the previous increment but not in the current increment. In any case the change in load on the joints loaded currently or in the previous load increments, are found and stored in order of the numbers of the joints.

Input/Out ·

None

Argument List

JØINTØ	An integer array of the numbers of joints that received load in the previous load increment
PHIØLD	A real array of loads on the joints in the previous load increment
JØINTN	An integer array of the numbers of joints that receive load in this increment
PHINEW	A real array of the loads on the joints in the current load increment
JTDEL	An integer array of the numbers of joints that were loaded in the previous load increment or are loaded in the current increment
DELPHI	A real array of the changes in joint loads from the previous load increment

NJTØ An integer scalar defining the number of joints that re-

ceived load in the previous load increment

NJTN An integer scalar defining the number of joints that receive load in the current increment

An integer scalar defining the number of joints that receive load in either the current or previous load NDELPH

increments

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE GENAB.

This routine generates the A and B matrices.

Algorithm

The B matrix's three members are calculated first from the cross product of the vector to the current footprint location and the unit vector in the direction of load application. The A array (dimension 3X NJTN) is created second, using the cross products of the vectors to the joints that are to receive load and the unit vector in the direction of load application.

Input/Output

None

Argument List

CØØRJ	A real array of coordinates of all the joints
JØINTN	An integer array defining numbers of joints that are to be loaded in this load increment
ABETA	A real array defining the A array for this load increment
BBETA .	A real array defining the B array for this load increment
CBETA	A real array of the coordinates of the center of the footprint
UVAPP	A real array defining the unit vector in the direction of load application $% \left(1\right) =\left(1\right) \left(1\right) +\left(1\right) \left(1\right) \left(1\right) +\left(1\right) \left(1$
NJTN	An integer scalar defining the number of joints to be loaded in this load increment
IRØW2	An integer scalar defining the number of one of the principal axes in the reference plane
IRØW3	An integer scalar defining the number of the other principal axis in the reference plane

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE INVERT

This routine inverts a 3×3 matrix by the method of successive transformations.

Algorithm

An identity matrix is set up first, then, while the matrix to be inverted is turned into an identity matrix, the row operations to do so are also performed on the identity matrix. When the input matrix is an identity matrix, the identity matrix has been transformed into the inverse matrix.

Input/Output

None

Argument List

AAT

A real array defining the input matrix to be inverted

AATIN

A real array defining the inverted output matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE MATMUL

This routine performs the matrix multiplication $A^{T}(AA^{T})^{-1}BF$.

Algorithm

The first step is to obtain AA^T , then the matrix multiplication $A^T(AA^T)^{-1}$ is performed. The final two steps are the matrix multiplication $A^T(AA^T)^{-1}B$ and the scalar multiplication $A^T(AA^T)^{-1}BF$.

Input/Output

None

Argument List

ABETA A real array defining the A matrix for this load increment

PREPRØ A real array of storage area for the pre-product

PHINEW A real array defining the final matrix product of

loads on the joints

JØINT An integer array defining the numbers of joints that are

to be loaded in this load increment

BBETA A real array defining the B matrix

F A real scalar defining the total load for this increment

NJTN An integer scalar defining the number of joints to receive

load in this increment

Labeled Common

None

Subroutines Called

INVERT

Error Detection

SUBROUTINE ØUTPUT

This routine prints, punches and writes (on tape) the output data.

Algorithm

The output is produced in two forms. The first form is for the user to use for checking the input data. The constant data (mass velocity, duration of impact, average impact force, and the load application unit vector) are printed first, then the current load and the change in load that occurred between the preceding and current load increments for each joint that undergoes a change in load are printed. The second form of output is printed for the benefit of the user and written on tape for analysis programs downstream. The format used is that for a FØRMAT matrix whose rows are the degree of freedom numbers and whose columns are the load increment numbers. The change in load between the previous and current load increments are divided along the degrees of freedom and are written accordingly.

Input/Output

The output is written on files 6, JTAPE and KTAPE.

Argument List

DELPHI	A real array of the change in joint loads from the previous to the current load increment
JØINT	An integer array of the numbers of joints that undergo changes in load from the previous to the current load increment
PHINEW	A real array of the loads on the joints in the current increment
JØINTN	An integer array of the numbers of joints that receive load in the current load increment
IBETA	An integer scalar defining the number of the load incre-

F A real scalar defining the total load applied in the current increment

UVAPP A real array defining a unit vector in the direction of the applied load

NJTN An integer scalar defining the number of joints that received load in the current increment

NDELPH An integer scalar defining the number of joints that undergo changes in load between the current and preceding load increments

NDØF An integer scalar defining the total number of degrees of freedom

AMASS A real scalar defining the mass of the bird

VEL A real scalar defining the velocity of the bird

TIME A real scalar defining the duration of impact

FAVG A real scalar defining the average load

UVEL A real array defining a unit vector of the velocity of the bird

JTAPE An integer scalar defining the number of the output file that will contain the FØRMAT matrix card images

KTAPE An integer scalar defining the number of the output file that corresponds to the FØRMAT tape output

NBETAP An integer scalar defining the total number of load increments plus one

COLM A real array used to assemble a column of the output matrix

Labeled Common

None

Subroutines Called

SQUEEZ

Error Detection

SUBROUTINE READB

This routine reads the footprint travel and load factor for the current load increment.

Algorithm

The input file is read until a Data Code II card is read. The Data Code II cards are read until a card with a flag of 6 is found. The cards with a flag of 6 are read until the card with the current increment number is read and the data is stored. The subroutine then returns to the main program.

Input/Output

The input is read from file ITAPE.

Argument List

DBETA		fining the distance	the	footprint	travels
	from the initial	impact point			

FACTOR A real scalar defining the current position portion of the average impact load to be applied for the current load increment

IBETA An integer scalar defining the current increment number ITAPE An integer scalar defining the number of the input file

Labeled Common

None

Subroutines Called

None

Error Detection

If no Data Code 11 cards are read the message 'NO CONSTANTS (DATA CODE 11) ENCOUNTERED IN INPUT'

is printed. If the card with data corresponding to the current load increment is not read the message 'INCREMENT (BETA) NUMBER nnn NOT FOUND IN DATA CODE 11 DATA' is printed.

SUBROUTINE READON

This routine reads the constants associated with the impact distribution.

Algorithm

The input file is read until a Data Code II card is read. The input file is backspaced one record and five cards are read and their data stored before the subroutine returns to the main program.

Input/Output

The input is read from file ITAPE.

Argument List

NDØF	An integer scalar defining the total number of degrees of freedom
AMASS	A real scalar defining the mass of the bird
VEL	A real scalar defining the velocity of the bird
ALENG	A real scalar defining the length of the bird
UVEL	$\mbox{\sc A}$ real array defining a unit vector in direction of bird motion
UNØRM	A real array defining a unit vector normal to the surface at the impact point
UFØØT	A real array defining a unit vector in the direction of impact footprint travel
CØØRI	A real array defining a vector from the origin to the impact point
NBETA	An integer scalar defining the number of load increments
ITAPE	An integer scalar defining the number of the input file

Labeled Common

Subroutines Called

None

Error Detection

If no Data Code 11 cards are read the message
'NO CONSTANTS (DATA CODE 11) ENCOUNTERED IN INPUT'
is printed. If there are not at least five consecutive Data Code 11
cards, the message
'MISSING DATA IN DATA CODE 11'
is printed.

This remains deads the joint commission

SUBROUTINE READCO

This routine reads the joint coordinate data.

Algorithm

The input file is read until a Data Code 2 card is found. The input file is backspaced one record and the coordinate data is read and stored until the data code is no longer 2 or until a joint number of 9999 is read.

Input/Output

The input is read from file ITAPE.

Argument List

CØØRJ	A real array of coordinates of joints stored by joint number
NJTØT	An integer scalar defining the largest joint number input

ITAPE An integer scalar defining the number of the input file

Labeled Common

None

Subroutines Called

None

Error Detection

If the end of Data Code 2 data is encountered without encountering joint number 9999 the message

'A 29999 CARD WAS NOT FOUND'

is printed but execution continues. If no Data Code 2 data is found at all, the message

'NO JOINT COORDINATE DATA (DATE CODE 2) ENCOUNTERED IN INPUT' is printed.

SUBROUTINE READJ

This routine reads the joint numbers that will receive load in the current load increment.

Algorithm .

The input file is read until a Data Code 12 card is encountered. The file is backspaced one record and the data is read, checking the increment number. When the current increment number is read the joint numbers are read and stored for as many cards as have the current increment number.

Input/Output

The input is read from file ITAPE.

Argument List

JØINT	An integer array defining the numbers of joints that are to receive load during the current increment
NJTN	An integer scalar defining the number of joints that are contained in JØINT
IBETA	An integer scalar defining the current load increment number
ITAPE	An integer scalar defining the number of the input file

Labeled Common

None

Subroutines Called

None

Error Detection

If no Data Code 12 cards are read the message 'NO LOADED JOINTS DATA (DATA CODE 12) ENCOUNTERED IN INPUT'

is printed. If a card with data corresponding to the current load increment is not read the message

'JOINTS FOR INCREMENT (BETA) NUMBER nnnn NOT FOUND IN DATA CODE 12 DATA'

is printed.

APPENDIX D

LINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

0

APPENDIX D LINEAR INCREMENTAL ROUTIMES AND LABELED COMMON BLOCKS

This appendix contains detailed descriptions of all routines and labeled common blocks in this program. Table D gives either page number references within this document or references to other documents for documentation of each routine or labeled common block. Some page number references may be to preceding appendices where the documentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm verbal flow chart of routine logic and data flow

Input/Output description all external data set input/output

Argument List name, type, and description of each argument

Labeled Common list of all labeled common blocks declared

<u>Subroutines Called</u> list of all routines called

Error Detection description of tests made for errors and action

taken

The detailed description of each labeled common block is divided into the following subheadings:

<u>Declaration</u> verbatum declaration of the labeled common block

Contents name and description of each variable appearing

in the declaration

Usage list of all routines which contain declarations

for the labeled common block

TABLE D. INDEX TO LINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

																						Page	
MAIN PROGRAM	RESPNS		•	•	•			•					•	•	•	•	•					315	
LABELED COMMON	CLØCK		•		•																•	317	
LABELED COMMON	LIMITS	•	•	•	•	•	•	•	•				•						•			318	
LABELED COMMON	NDICES	•	•	•				•				•									•	320	
LABELED COMMON	TAPES		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	323	
SUBROUTINE	ABSYM																					325	
SUBROUTINE	ADD .							•														326	
SUBROUTINE	ASYMB																					327	
SUBROUTINE	BALANC																					Ref. 16	
SUBROUTINE	BALBAK																					Ref. 16	
SUBROUTINE .	CCMULT																					329	
SUBROUTINE	CHGSGN																					331	
SUBROUTINE	CHLSKY																					332	
SUBROUTINE	CØPY .																					333	
SUBROUTINE	CRMULT																					334	
SUBROUTINE	EIGSØL																					336	
SUBROUTINE	ELMHES																					Ref. 16	
SUBROUTINE	ELTRAN																					Ref. 16	
SUBROUTINE	EUTL9																					Ref. 6	
SUBROUTINE	HALT .																					338	
SUBROUTINE	HQR .																					Ref. 16	
SUBROUTINE	HQR2 .																					Ref. 16	
SUBROUTINE	IMBAL																					339	
SUBROUTINE	JØRDAN																					341	
SUBROUTINE	LINEAR																					342	
SUBROUTINE	MATIN																					344	
SUBROUTINE	MBAR .																					346	

TABLE D. INDEX TO LINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS (Continued)

																					Page	
SUBROUTINE	MU	LT .																		•	348	
FUNCTION	ND	XSET	•									•									349	
SUBROUTINE	NI	TIAL			•																350	
SUBROUTINE	ØU	TPUT																			352	
SUBROUTINE	PB	ARUF																			353	
SUBROUTINE	PR	EEIG																			354	
SUBROUTINE	PR	INTR				•															356	
SUBROUTINE	PT	MASS					•		•												358	
SUBROUTINE	RE	ADA																		•	Ref.	5
SUBROUTINE	RE	ADK																			359	
SUBROUTINE	RE	ADM																			360	
SUBROUTINE	RG	EIG																•.			Ref.	16
SEBROUTINE .	SE	TRCT					•								•						361	
SUBROUTINE	SI	GFBR											•								362	
SUBROUTINE	SM	IULT					•														363	
SUBROUTINE	SC	UEEZ						•				•									Ref.	5
SUBROUTINE	SY	MABT						•					•			•	•				364	
SUBROUTINE	SY	MFIL						•		•							•				365	
SUBROUTINE	SY	MSØL						•			•								•		366	
SUBROUTINE	TI	MEQ								•											Ref.	6
SUBROUTINE	TN	ULT						•	•	•	•		•	•							368	
SUBROUTINE	TS	ETQ									•	•			•						Ref.	6
SUBROUTINE	VE	MULT								•								•			370	
SUBROUTINE	WF	RITE																			Ref.	5
SUBROUTINE	WF	RITEM				•		•									•				371	
SUBROUTINE	XF	PINNT																•		6	372	
SUBROUTINE	ZE	RØ .																		•41	373	

MAIN PROGRAM RESPNS

This is the driver of the Linear Incrementa! Solution program.

Algorithm

The driver functions of this program consist of:

- 1) Defining 23 data sets used for input, output and scratch storage.
- 2) Delimiting the extents of 4 common blocks, the first of which, blank common, will be used for working storage.
- 3) Initializing via subroutine NITIAL.
- 4) Setting the stage for an incremental analysis by invoking subroutine PREEIG to generate matrices \overline{M} , \overline{K} and \overline{C} which are the components of the eigenvalue problem statement set up and solved via subroutine EIGSOL.
- 5) Performing the incremental analysis through the sequence of calls to subroutines LINEAR and IMBAL for each time interval.
- 6) Clocking the execution of each module and displaying elapsed time on output.

Input/Output.

None

Arguments

None

Labeled Common

NDICES, TAPES, LIMITS

Subroutines Called

NITIAL, PREEIG, EIGSØL, LINEAR, IMBAL, TSETO, TIMEQ

Error Detection

None

0

to subsections Linkly and UKRAL for each time fatured.

LABELED COMMON CLØCK

This common block is used to store timing information to obtain CPU time required for major modules within the program.

Declaration

CØMMØN /CLØCK/ ØRGTIM

Contents

ØRGTIM

CPU time remaining for the run obtained by system routine

Usage

TIMEQ, TSETQ

LABELED COMMON LIMITS

This common block is used to store problem size information, problem constants, option flags, and other program parameters used by all principle routines.

Declaration

CØMMØN /LIMITS/NG,NK,NELEMS,NTRVLS,BETA,BETBAR,HEAT,NM,IØRGN,JX
, KØLX,NF,MØREK,MØREC,NG2,NG2SQ,NJTS,AHAT,DEBCL,TBM1
, TAU,NS,NØWRK,NSUPD,NFAIL,NØPBPU
LOGICAL BETBAR,NØBPU
INTEGER BETA

Contents

NG Number of modes NK Number of lumped forces for an element NELEMS Total number of physical elements NTRVLS Number of time increments BETA Current increment number BETBAR Not used HEAT Option flag for element dissipated damping energy converted to heat NM (NG*NG+NG)/2IØRGN Pointer to unused trailing partition of blank common Pointer to a location in labelled common NDICES JX KØLX Matrix column counter NF Number of forces for an element MØREK Flag designating additional partitions of k MØREC Flag designating additional partitions of c NG2 NG+NG NG2SQ NG2*NG2

NJTS Number of joints

AHAT Not used

DEBCL Total damping energy

TBM1 Time increment of previous interval

TAU Time increment of current interval

NS Number of stresses for an element

NWØRK Extent of blank common region

NSUPD Not used

NFAIL Not used

NØPBPU Flag indicating the input $\delta \bar{P}_{(\phi)U}$ has been exhausted

Usage

RESPNS, EIGSØL, IMBAL, LINEAR, NDXSET, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR

LABELED COMMON NDICES

This common block is used to store pointers to partitions within blank common array A. All values in this common block are initialized in routine NITIAL. Partitions for elements are sized for cells which have the largest storage requirements.

Declaration

COMMON	A(8000)
COMMON	/NDICES/IVBDB, IVBB, IVBX, IDPBPU, IPBMUB, IDPPUB, IDBL, IVBL
	IPBAR, IPBPHU, IKB, ICB, IMBAR, IMBARL, IDEBCL, ICØNST
,	ITIME, ISIGSS
,	IKBL, IZ, ICA, IQ, IVAL, IFTAU, IVEC, IEGSYS
,	IU, LU, IECT, IEVT, IMPT, IDEBO, IDFBKO, IDSEB
,	IFK, IFBK, IDEL, IDEDL, IFSFB, IFSFBB. IPBCU
,	IPBKU, ISIGFB, ISIGBH, IEPSIG, IPSLON, ID, IDK
•	ISKB, ISKBB, ISCB, ISCBB, IPBUF, ISK, ITK, ICIB, IMEL

Contents

IVBDB .	\overline{v}_{β} , modal accelerations
IVB8	\overline{v}_{β} , modal velocity
IVBX	$\overline{v}_{\beta-1}$, modal velocity of previous increment
IDPBPU	$\delta \overline{P}_U$, incremental modal force imbalance
IPBMUB	P _{(M)U} , modal inertia force
IDPPUB	$\delta \bar{P}_{(\phi)U}$, incremental modal applied load
IDBL	$\delta \tilde{\Delta}_{L}$, incremental linear modal displacement
IVBL	\bar{v}_L , linear modal displacement
IPBAR	P, total modal forces
IPBPHU	$\bar{P}_{(\phi)U}$, modal applied load
IKB	K, modal stiffness
ICB	C, modal damping
IMBAR	M, modal mass

0

IMBARL Cholesky decomposition of M

IDEBCL $\delta \hat{E}_{CL}$, incremental element dissipated damping energy

ICONST Problem constants

ITIME Incremental time history

ISIGSS $\sigma_{S\sigma}$, stress transform for cell elements

IKBL Cholesky decomposition of K

IZ The modal matrix $Z = \bar{K}_{\beta-1}^{-1} \bar{P}_{\beta}$

ICA The modal matrix $C_a = H^{-1}$ yo

IQ The modal matrix $Q = C_{a_D} F(\tau)$ where C_{a_D} is C_a diagonalized

IVAL λ , eigenvalues

IFTAU $F(\tau)$, a modal column matrix of $e^{\lambda \tau}$

IVEC H, eigenvectors

IEGSYS Eigenvalue problem work array

IU U_o, original joint coordinates

LU Not used

IECT ECT, element constant table

IEVT EVT, element variable table

IMPT MPT, material property tables

IDEBO 6e, incremental initial element deformations

IDFBKO $\sigma \bar{F}_{K_a}$, incremental element forces due to initial deformations

IDSEB 6e, incremental element deformations

IFK The matrix FK = $F_{K_{g-1}}$ + δF_{K_0} for an element

IFBK \bar{F}_K , element forces

IDEL 6e, incremental linear element displacement

IDEDL 6e, incremental linear element velocity

IFSFB	FF,	element	force	transform	

IFSFBB Not used

IPBCU $\tilde{P}_{(C)U}$, modal damping forces

IPBKU P(K)U, modal stiffness forces

ISIGFB σ_{F} , element stress transform

ISIGBH Not used

IEPSIG ε_{σ} , element strain transform

IPSLØN ε , element strains

ID The matrix $D = P_{UF} F_F$ for an element

IDK The matrix DK = P_{UF} F_F \bar{k} for an element

ISKB k, unassembled element stiffness

ISKBB Not used

ISCB c, unassembled element damping

ISCBB Not used

IPBUF P_{IIF}, modal transform

ISK s_k, modal fictitious forces

ITK t_k, modal fictitious deformations

ICIB The matrix $\overline{CI} = \overline{P}_{UF} F_F \overline{c} F_F^T \overline{P}_{UF}^T$ for an element

IMEL m, element mass

Usage

RESPNS, EIGSØL, IMBAL, LINEAR, NDXSET, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR

LABELED COMMON TAPES

This common block is used to store the FORTRAN logical unit numbers of the external files used by the program.

<u>Declaration</u>

COMMON /TAPES /N1 ,N2 ,N3 ,N4 ,N5 ,N6 ,N7 ,N8 ,N9 ,N10 ,N11,N12,N13,N14,N15,N16,N17,N18,N19,N20

Contents

The values in the common block are initialized in routine NITIAL. The FORTRAN logical unit designations assigned are given here.

N1	1
N2	2
N3	3
N4	4
N5	8
N6	9
N7	10
N8	11
N9	12
N10	13
ווא	14
N12	15
N13	16
N14	17
N15	18
N16	19
N17	20
N18	21
N19	22
N20	23

Usage

RESPNS, EIGSØL, IMBAL, LINEAR, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR

SUBROUTINE ABSYM

This routine performs a matrix cross-product wherein the postmultiplier matrix is the upper half of a symmetric matrix.

Algorithm

The mode of storage of the post-multiplier matrix is b_{11} , b_{12} ... b_{1n} , b_{22} When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix sum $C = C + A \cdot B$.

Input/Output

None

Argument List

С	A real array accommodating the product matrix
A	· A real array accommodating the pre-multiplier matrix
В	A real array accommodating the post-multiplier matrix in the mode of storage $b_{11},\ b_{12},\ \cdots,\ b_{1n},\ b_{22}$
М	An integer scalar defining the order of the pre-multiplier matrix
N	An integer scalar defining the order of the post-multiplier symmetric matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ADD

This routine performs vector addition; C = A + B.

Algorithm

Vectors A and B are summed into C.

Input/Output

None

Argument List

C A real array accommodating the resulting vector

A A real array accommodating the first input vector

B A real array accommodating the second input vector

N An integer scalar defining the order of the vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ASYMB

This routine performs a matrix cross-product wherein the premultiplier matrix is the upper half of a symmetric matrix.

Algorithm

The mode of storage of the symmetric pre-multiplier matrix is a_{11} , a_{12} , a_{1n} , a_{22} When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix sum $C = C + A \cdot B$.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
A	A real array accommodating the pre-multiplier matrix in the mode of storage a ₁₁ , a ₁₂ ,, a _{1n} , a ₂₂
В	A real array accommodating the post-multiplier matrix
М	An integer scalar defining the order of the symmetric pre-multiplier matrix
Р	An integer scalar defining the column order of the pre-multiplier matrix
SUM	A logical scalar which if true, $C = C + A \cdot B$; otherwise $C = A \cdot B$

Labeled Common

None

Subroutines Called

Error Detection

None

the commence accompanies of the pre-military factor of the feet of

arguments and To toping and pulletteb halfage happaint ha

xinaga nation funero

SHOT

0

SUBROUTINE CCMULT

This routine computes the specified leading rows of the product of two complex matrices.

Algorithm

When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix product and summation C = C + A*B.

Input/Output

None

Argument List

C	A complex array accommodating the product matrix
A	A complex array accommodating the pre-multiplier matrix
В	A complex array accommodating the post-multiplier matrix
М	An integer scalar defining the row dimension of arrays C and A
N	An integer scalar defining the column dimension of array A, and the row dimension of array B $$
P	An integer scalar defining the column dimension of arrays B and ${\bf C}$
ML	An integer scalar defining the computations concerning ML rows of C
SUM	A logical scalar which if true, $C = C + A*B$; otherwise $C = A*B$

Labeled Common

Subroutines Called

None

Error Detection

SUBROUTINE CHGSGN

This routine changes the algebraic sign of a vector.

Algorithm

The sign of the vector is reversed by being set to minus.

Input/Output

None

Argument List

A real array accommodating the vector whose sign is to be reversed

N An integer scalar defining the order of the vector

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE CHLSKY

This routine performs an in situ Cholesky decomposition, where the symmetric matrix is given in its triangular half.

Algorithm

Where $A = LL^T$, given the positive definite matrix A in its symmetric half, this routine transforms it to L. The mode of storage is a_{11} , a_{12} , a_{1n} , a_{22} , a_{2n} , etc.

Input/Output

None

Argument List

A A

A real array accommodating the symmetric half of the positive definite matrix on input, and its square root

decomposition on output

N An integer scalar defining the order of the problem

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE COPY

This routine copies an array from core to core.

Algorithm

Array A is copied into array B.

Input/Output

None

Argument List

A A real array to be copied

B A real array into which the copy is made

N An integer scalar defining the order of the arrays

Labeled Common

None

Subroutined Called

None

Error Detection

SUBROUTINE CRMULT

This routine computes the specified leading rows of a matrix product wherein the pre-multiplier matrix is complex.

Algorithm

When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix product and summation C = C + A*B.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
Α .	A real complex array accommodating the pre-multiplier matrix
В	A real array accommodating the post-multiplier matrix
М	An integer scalar defining the row dimension of arrays C and A
N	An integer scalar defining the column dimension of array A and the row dimension of array B
P	An integer scalar defining the column dimension of arrays B and ${\bf C}$
ML	An integer scalar defining the computations concerning ML rows of ${\bf C}$
SUM	A logical scalar which if true, $C = C + A*B$; otherwise, $C = A*B$

Labeled Common

None

0

Subroutines Called

None

Error Detection

SUBROUTINE EIGSOL

This routine sets up, executes and disposes of the eigen problem.

Algorithm

The upper quadrants of array A are filled with the negative of symmetric modal damping and mass matrices, \bar{C} and \bar{M} , reconstructed in their full forms. The lower left quadrant is set to the identity. Subroutine SYMSOL is then invoked, with the Cholesky decomposition of modal stiffness matrix \bar{K} as argument, to arrive at:

$$\begin{bmatrix} -\bar{K}^{-1}\bar{C} & -\bar{K}^{-1}\bar{M} \\ I & 0 \end{bmatrix}$$

Subroutine RGEIG now performs the complete eigenvalue problem solution. The eigenvalues are reciprocated. In this process, equal eigenvalues corresponding to equal eigenvectors are recognized as being part of a singular system. An attempt to remedy this condition is made by scalar multiplying matrix $\bar{\mathbb{C}}$ with 1.0001 and going through the complete procedure anew. Should this instability persist, the printing of an appropriate statement is followed by a call to subroutine HALT. Otherwise, the writing of the matrix of eigenvectors onto data set N8 is followed by their inversion through subroutine JØRDAN. The inverse is also output onto data set N8.

Input/Output

To conserve core space, the matrix of eigenvectors and its inverse are stored on data set N8.

Argument List

B A real array accommodating the eigenvalue problem statement

X A real array accommodating the matrix of eigenvectors

An integer which defines the order of the eigenvalue problem

N An integer whose value is M/2

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

CHLSKY, COPY, HALT, JORDAN, RGEIG, SMULT, SYMFIL, SYMSOL, WRITE, ZERO

Error Detection

Equal complex eigenvectors with corresponding equal eigenvalues are detected as singular. An attempt to remedy this condition is made by scalar multiplying matrix \overline{C} with 1.0001. Should the unstable condition persist, the printing of an appropriate message is followed by the call to subroutine HALT.

SUBROUTINE HALT

This routine performs termination processing as necessary in the event of a fatal error.

Algorithm

In anticipation of certain processing requirements before job termination initiated by the detection of a fatal error, this routine and appropriate calls were provided. Subsequently, however, it was determined that no processing of this nature was necessary.

Input/Output

A job termination message is output to unit 6.

Argument List

None

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE IMBAL

For each physical element within each type of element, this routine computes the force, stress and strain matrices, \overline{F}_K , σ and ϵ , and writes them onto the output data set.

Algorithm

The output matrices concern bar elements, membrane elements and cell elements. Their respective FØRMAT matrix names are BARS, MEMBRN and CELLS. Each physical element is represented by a column whose contents are vectors \overline{F}_K , σ and ε . These quantities are computed as follows:

$$F_{K} = \delta F_{K_{0}} - DK^{T} \Delta$$
where
$$DK = P_{UF} F_{F} K$$

$$\sigma = \sigma_{S\sigma} \sigma_{F} F_{K} \text{ for cells}$$
or
$$\sigma = \sigma_{F} F_{K} \text{ for bars and membranes}$$

$$\varepsilon = \varepsilon_{\sigma} \sigma$$

Input/Output'

Tape 2 is the output data set. For each physical element, matrix $\sigma_{\overline{F}}$ is read from data set N14; the matrix quantity \overline{P}_{UF} $F_{\overline{K}}$ is read from data set N7; $\delta \overline{F}_{KO}$ is read from N15; and $\epsilon \sigma$ is read from N16.

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

ADD, ASYMB, MULT, ØUTPUT, READA, READM, SBTRCT, TMULT, ZERØ

Error Detection

SUBROUTINE JORDAN

This routine inverts in situ a complex matrix by pivoting on the available row of largest magnitude within the next available column.

Algorithm

The method used is Gauss-Jordan. The array KØL is used to record the order of rows which have been selected for pivoting.

Input/Output

None

Argument List

A A real matrix which is transformed to its inverse prior to exit from this routine

An integer work array of dimension 2*N. Prior to exit from this routine, the first N locations contain the order in which rows have been selected for pivoting. The second N locations contain the values of the pivoting elements.

An integer scalar defining the order and dimension of matrix

Labeled Common

None

N

Subroutines Called

None

Error Detection

SUBROUTINE LINEAR

This routine computes vectors \overline{P} , $\delta \overline{\Delta}$, \overline{v} and $\dot{\overline{v}}$.

Algorithm

Data set N8 is already positioned at the origin of the matrix of inverse eigenvectors. It is rewound as soon as this matrix has been read. The next read then brings in the matrix of eigenvectors proper.

 $\delta\overline{\Delta}$ and \overline{v} are computed in the complex mode and transferred to their final blank common destinations in the real mode. Through abstraction like CALL statements to utility routines, the matrix equations to compute \overline{P} , $\delta\overline{\Delta}$, \overline{v} , and $\dot{\overline{v}}$ are solved in the following manner:

$$\overline{P} = \overline{P} + \overline{P}_{(M)U} + \delta \overline{P}_{(\phi)U}$$

$$Z = -\overline{K}^{-1} \overline{P}$$

$$C_{aD} = H^{-1} \begin{bmatrix} -\frac{Z}{V} \end{bmatrix} \text{ diagonalized}$$

$$F(\tau) = e^{\lambda \tau}$$

$$Q = C_{ad} F(\tau)$$

$$\overline{V} = H_{V} \lambda_{D} Q$$

$$\begin{bmatrix} \underline{\delta \Delta} \\ \overline{V} \end{bmatrix} = HQ$$

$$\delta \overline{\Delta} \quad \delta \overline{\Delta} - Z$$

Input/Output

The matrix of eigenvectors and its inverse are read from data set N8. The incremental applied load matrix $\delta \overline{P}_{(\varphi)_U}$ is from data set N18.

THIS PAGE IS BEST QUALITY PRACTICABLE FROM COPY FURNISHED TO DDG

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

ADD, CCMULT, CHGSGN, CØPY, CRMULT, EUTL9, PRINTR, READA, SYMSØL, VDMULT, XPØNNT, ZERØ

Error Detection

SUBROUTINE MATIN

This routine routes FØRMAT Program input matrices and arrays from tape 20 to the intended, or interim, data sets.

Algorithm

Reading over the data set header positions it at the origin of its first matrix.

The following takes place with each item sandwiched between a matrix header and trailer. The data set designation, onto which the next matrix in sequence is to be written, is taken from the list NT and rewound. The matrix header is read and ignored. Each record thereafter is transcribed. Additionally, the third matrix is also written on data set 14. This process continues as long as the first word of the records thus processed is a positive integer. Except in the case of matrix $\overline{P}_{\rm HF}$, the output data set is then rewound.

Input/Output

The list of throughput matrices and the data set onto which they are output follows:

Matrix Name	Data Set Number	Description
PUF	14	Modal element force transform
MPT	3	Material property table
u _o	8, 14	Original joint coordinates
ECT	15	Element constant table
MEL	13	Element mass matrix
k	11	Element stiffness matrix
c	17	Element damping matrix
FF	4	Element force transform

THIS PAGE IS BEST QUALITY PRACTICABLE

Matrix Name	Data Set Number	Description
of.	2x80,60715) 7/64 180	Element stress transform
εσ	22	Element strain transform
6 e T	10	Initial thermal element deformations
EVT	9	Element variable table

Argument List

A A real work array

NUM An integer scalar used as a dimensioning variable

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE MBAR

This routine fetches the upper half of the next uncoupled partition from a tape resident symmetric quasi-diagonal matrix.

Algorithm

The end product of this routine consists of a triangular matrix of order NF in expanded format wherein the rows begin from their diagonal elements. As each column (KØLX + 1) through (KØLX + NF) is read in the compressed format, its elements preceding the diagonal are discarded. The row designations of the elements retained are reduced by the quantity KOLX - NF*(I-1), where I represents the sequence of these columns from 1 through NF. One call to subroutine EUTL9 expands this triangular matrix in its desired form.

Input/Output

None

Argument List

NF	An integer scalar defining the number of rows and columns in desired matrix partition
KØLX	An integer scalar defining the designation of the last column read on previous entry into this routine
A	A real storage array
NT	An integer scalar defining the designation of the data

set containing the matrix

Labeled Common

None

Subroutines Called

EUTL9, READA, ZERØ

FROM COPY FURNISHED TO DDC

Error Detection

None

An interest social delining the new Chenslon of marrides.

SUBROUTINE MULT

This routine performs a matrix product.

Algorithm

The matrix product A*B is added to matrix C. Matrix C is initialized to zero only when the logical variable SUM is false.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
A	A real array accommodating the pre-multiplier matrix
В	A real array accommodating the post-multiplier matrix
М	An integer scalar defining the row dimension of matrices C and A
N	An integer scalar defining the row dimension of matrix B and the column dimension of matrix ${\sf A}$
P	An integer scalar defining the row dimension of matrices ${\sf C}$ and ${\sf B}$
SUM	A logical scalar which if false, array C is initialized as zero

Labeled Common

None

Subroutines Called

None

Error Detection

FUNCTION NOXSET

This routine defines the elements of a vector used to segment the working core.

Algori thm

The variable IØRGN contains the relative location from which the work array is available for segmentation. The following takes place for each of the N apportionments: 1) the value of JX, the indexing pointer used with vector NOEX, is incremented; 2) IØRGN is stored into NOEX(JX); 3) IØRGN is increased by INC, the extent of core being allocated each origin.

Input/Output

None

Argument List

INC

An integer scalar defining the extent of core to be allocated with each origin NDEX(I)

N

Number of origins to be defined

Labeled Common

LIMITS, NDICES

Subroutines Called

None

Error Detection

Hone

SUBROUTINE NITIAL

This is the intializing routine.

Algorithm

The variables N1 through N2O, which are contained within labeled common TAPES, are sequencially set to represent tapes 1 through 4, and 8 through 23.

The input matrices are read in their FØRMAT generated mode and written onto their interim, or intended, data sets via subroutine MATIN. The following delimiting parameters are read from the first input card.

<u>Item</u>	Type	Description
BETA	INTEGER	Starting time
NELEMS	INTEGER	Number of structural elements
NTRVLS	INTEGER	Number of time intervals
NG	INTEGER	Number of modes
HEAT .	LOGICAL	"TRUE" indicates presence of thermal conditions
NJTS	INTEGER	Number of structural joints
NWORK	INTEGER	Number of words in blank common

Blank common array A is apportioned to the various matrices and arrays through the designation of their respective origins by the index from labeled common NDICES.

The NTRVLS values concerning the time array are read into the space beginning with A(ITIME) and checked for their being in ascending order. Execution is halted with an appropriate statement when this check fails.

The constant matrix $\sigma_{S\sigma}$ for cell elements is generated and stored at A(ISIGSS).

Overlay within array A is effected by assigning IX3L and IU the same value. The first of these subscripts represent the origin of space used by subroutine EIGSØL only; the second is the leading subscript of non-conversant space used by other modules.

Subroutine READK is invoked to merge selected matrices residing on interim data sets. The arrays which are to accommodate the following vectors are initialized with zeroes: \overrightarrow{v} , \overrightarrow{v} , \overrightarrow{v}_{s-1} , $s\overrightarrow{P}_{U}$, $s\overrightarrow{P}_{(M)U}$, $s\overrightarrow{P}_{(C)U}$, $s\overrightarrow{P}_{(s)U}$, and $s\overrightarrow{E}_{CL}$.

Inout/Output

All card input takes place in this routine. In addition, the following input matrices are written onto the post-processing data set, tape 2: the array of constants under its input FØRMAT program matrix name; the array of time intervals under the matrix name TIME; the array of joint coordinates under the matrix name UZERØ; vectors $\overline{P}_{(\frac{1}{2})U}$ and \overline{P}_{UPT} under their input names.

Arcument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

ASYMB, CHGSGN, MATIN, NOXSET, READA, READK, SIGFBR, SORT, WRITE, ZERO

Error Detection

Gene

SUBROUTINE OUTPUT

This routine stores output onto the output data set in the mode of the FØRMAT program.

Algorithm

Vectors $\overline{\Delta}$, $\delta\overline{\Delta}$, \overline{v} , $\dot{\overline{v}}$, $\delta\overline{P}_U$, and $\overline{P}_{(\phi)U}$ are written onto data set 2 as a single column FØRMAT matrix with the name RESPNS.

Input/Output

Matrix RESPNS is output to data set 2.

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

WRITE

Error Detection

SUBROUTINE PEARUF

This routine reads a partition of matrix $F_{\overline{F}}$ and the corresponding partition of matrix \overline{F}_{UF} .

Algorithm

Data set N13 contains matrix $F_{\overline{F}}$ in the form of one partition per record. Reading one such record provides the information necessary to determine the columns bounding the desired partition of $\overline{F}_{\rm HF}$.

Inout/Output

Matrix $F_{\overline{F}}$ is read from data set N13. Matrix \overline{P}_{UF} is read from data set N11.

Argument List

Hone

Labeled Common

LIMITS, NDICES, TAPES

Subroutine Called

READA, EUTL9

Error Detection

SUBROUTINE PREEIG

This routine generates matrices \overline{M} , \overline{K} , \overline{C} and $\delta \overline{P}_{KO}$.

Algorithm

For each element, the matrix operations are performed through abstraction like CALL statements to utility routines. Having initialized matrices \overline{K} , \overline{C} , \overline{M} , \overline{P} , and $\overline{P}_{(M)U}$ as zero, the matrix operations performed are as follows:

$$\delta \overline{F}_{KO} = -\overline{K} \delta \overline{e}_{T}$$

$$D = \overline{P}_{UF} F_{\overline{F}}$$

$$\overline{P} = \overline{P} + D \delta \overline{F}_{KO}$$

$$DK = D\overline{K}$$

$$\overline{K} = \overline{K} + DK D^{T}$$

$$\overline{C} = C + D\overline{C} D^{T}$$

$$\overline{M} = \overline{M} + \overline{P}_{UF} \stackrel{m}{\overline{P}}_{UF}^{T}$$

If point mass elements exist, their contribution to the modal mass matrix, \overline{M} , is computed and added by a single call to subroutine PTMASS.

Input/Output

For each physical element, a partition of the matrices \overline{k} , \overline{c} and $\delta_{\overline{e_T}}$ is read in that sequence from data set N1. Similar partitions of matrices $\overline{P_{UF}}$, $F_{\overline{F}}$, and m are read from data sets N11, N13 and N10, respectively. The contribution of each physical element to matrix DK is written onto data set N7 and, similarly, the contribution to δF_{KO} is written onto N15.

Argument List

None

THIS PAGE IS BEST QUALITY PRACTICABLE FROM COPY FURNISHED TO DDC

Labeled Common

LIMITS, NDICES, TAPES

Subroutine Called

ABSYM, ADD, ASYM8, CHGSGN, MBAR, MULT, PBARUF, PTMASS, READA, SYMABT, WRITEM, ZERØ

Error Detection

SUBROUTINE PRINTR

This routine prints a core resident matrix.

Algorithm

Groups of not more than 8 columns across each page are written for partitions of not more than 55 rows. Each page is headed with the title. The column designations appear under the title. The row designations precede each row. Only the most significant aspect of double precision matrices is written. Two calls to this routine are required to print a complex matrix.

Input/Output

None

Argument List

A A real array accommodating the matrix to be printed

K An integer scalar used as a dimensioning variable. K = 1 for real and single precision arrays. K = 2 for compressed or double precision arrays. K = 4 for double precision complex arrays.

M An integer scalar defining the row dimension

An integer scalar defining the column dimension

TITLE An alphanumeric scalar for header data

Labeled Common

None

Subroutines Called

THIS PAGE IS BEST QUALITY PRACTICABLE
PROM COPY FURNISHED TO DDQ

Error Detection

SUBROUTINE PTMASS

This routine concludes the computations of $\overline{\mathbf{M}}$ with the contributions of the point-mass elements.

Algorithm

The computations concern the triple product \overline{P}_{UF} M_{EL} \overline{P}_{UF} involving point mass elements. M_{EL} consists of one element. The columns of these matrices are read and the computations are exercised upon matching the column designations.

Input/Output

Matrix M_{EL} is read from data set N10. Matrix \overline{P}_{UF} is read from data set N11.

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

READA, EUTL9, ABSYM, SYMABT

Error Detection

SUBROUTINE READK

This routine transcribes FØRMAT program generated matrices from interim data sets to their intended data sets.

Algorithm

The symmetric quasi-diagonal matrices \overline{k} , e_{σ} and \overline{c} are read in their full forms. They are retained only in their symmetric halves prior to being written as single compressed records.

Matrix se_T is simply copied from its input to its output tape. The quasi-diagonal matrix $F_{\overline{F}}$ is output in records of sub-matrix partitions.

Inout/Outout

Matrices \overline{k} , e_{σ} , \overline{c} , $\delta \overline{e_{T}}$, and $\overline{F_{F}}$ are respectively read from data sets N8, N19, N14, N10, and N4; matrices e_{σ} and $\overline{F_{F}}$ are written onto data sets N16 and N13. Matrices \overline{k} , \overline{c} and $\delta \overline{e_{T}}$ are written onto data set N1 in the sequence $\overline{k_{1}}$, $\overline{c_{1}}$, $\delta \overline{e_{1}}$, $\overline{k_{2}}$, $\overline{c_{2}}$, $\delta \overline{e_{T_{2}}}$, ..., etc.

Argument List

None

Labeled Common

LIMITS, NOICES, TAPES

Subroutines Called

EUTL9, MBAR, READA, WRITE

Error Detection

Hone

SUBROUTINE READM

This routine reads a matrix which was written on a scratch data set via subroutine WRITEM.

Algorithm

The matrix is read via subroutine READA. Should it be compressed, subroutine EUTL9 expands it.

Input/Output

The matrix is read from data set NT.

Argument List

M A dummy argument

N A dummy argument

A . A real array into which the matrix is read

NT An integer scalar defining the input data set

Labeled Common

None

Subroutine Called

None

Error Detection

SUBROUTINE SBTRCT

This routine computes the arithmetic difference between two vectors.

Algorithm

The algebraic difference between vectors A and B is stored in vector C.

Input/Output

None

Argument List

C	A real array for the resulting vector
A	A real array for the vector being subtracted
В	. A real array for the subtracting vector
N	An integer scalar defining the order of vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SIGFBR

This routine partitions a quasi-diagonal matrix and outputs its partitions in single compressed records.

Algorithm

The columns of each partition are read and stored consecutively in their compressed format. In the process, the row designations are replaced by the location of the elements relative to the current submatrix. A single call to subroutine EUTL9 expands the partition which is then output by subroutine WRITEM.

Input/Output

The matrix is read from data set N14 and written onto data set N12.

Argument List

None

Labeled Common

TAPES, LIMITS, NDICES

Subroutines Called

EUTL9, READA, WRITEM

Error Detection

SUBROUTINE SMULT

This routine scales a matrix.

Algorithm.

Each element of array A is multiplied by the scalar S, and the product is stored in array C.

Input/Output

None

Argument List

C	A real array accommodating the output matrix
S	A real scalar coefficient
A	A real array accommodating the matrix to be scaled
м .	An integer scalar defining the row dimension
N	An integer scalar defining the column dimension

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SYMABT

This routine computes the triangular half of a symmetric matrix where the post-multiplier is transposed.

Algorithm

The mode of storage of the product matrix is $c_{11}\cdots c_{1n}$, $c_{22}\cdots c_{2n}$, etc. When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero.

Input/Output

None

Argument List

C	A real array for the triangular product matrix
Α	A real array for the pre-multiplier matrix
В	A real array for the transposed post-multiplier matrix
М	An integer scalar defining the row dimension of all matrices
N	An integer scalar defining the column dimension of A and B matrices
SUM	A logical scalar when false, causes the resulting matrix to be initialized as zero

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SYMFIL

This routine stores a symmetric half matrix into the partition of an array while reversing the sign.

Algorithm .

The mode of storage of the symmetric half-matrix is a_{11} , \cdots a_{1n} , a_{22} \cdots . When K = 1, the receiving matrix is real. When K = 2, it is complex. Note that in this case, the imaginary components are left untouched.

Input/Output

None

Argument List

A	A real array for the symmetric half-matrix
В	A real or complex array for the output matrix
K	An integer scalar where $K = 1$ for real B array, $K = 2$ for complex B array
M	An integer scalar defining the row dimension of B array
N	An integer scalar defining the order of symmetric matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SYMSØL

Given matrices L and B in the expression $LL^{T}X = B$; this routine transforms B into X.

Algorithm

The mode of storage for matrix L is l_{11} , ..., l_{n1} , l_{22} ... X is computed by way of Y where LY = B. Then, L^TX = Y. The array storing matrices B and X may be real or complex. When the integer K is 1, the array is real; when K is 2, the array is complex.

Input/Output

None

Argument List

Α .	A real array accommodating matrix L in the mode of storage 1111, 122
В	A real or complex array accommodating matrices B, Y and X
K	An integer scalar where array B is real when $K = 1$, and complex when $K = 2$
М	An integer scalar defining the row dimension of array B
N	An integer scalar defining the order of equation
P	An integer scalar defining the number of columns in matrices B, Y and X

Labeled Common

None

Subroutines Called

Error Detection

SUBROUTINE TMULT

This routine performs a matrix cross product wherein the premultiplier matrix is transposed.

Algorithm

The matrix product transpose A^TB is added to matrix C. Matrix C is initialized to zero only when the logical variable SUM is false.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
A	A real array accommodating the pre-multiplier matrix
В .	A real array accommodating the post-multiplier matrix
М	An integer scalar defining the row dimension of matrix C and column dimension of matrix \boldsymbol{A}
	An integer row dimension of matrices A and B
N	An integer scalar defining the row dimension of matrix C and column dimension of matrix \boldsymbol{A}
	An integer row dimension of matrices A and B
Ρ .	An integer column dimension of matrices B and C
SUM	A logical scalar when false causes array C to be initialized as zero

Labeled Common

Subroutines Called

None

Error Detection

SUBROUTINE VDMULT

This routine performs the element by element product of two complex vectors.

Algorithm

The element by element product of complex vectors A and B is stored in vector C.

Input/Output

None

Argument List

C	A complex array for the output vector C
Α	A complex array for the input vector A
В	A complex array for the input vector B
N	An integer scalar defining the order of the vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE WRITEM

This routine writes a one-record matrix, compressed (as required).

Algorithm

Following an attempt to compress the matrix via subroutine SQUEEZ, it is written onto the output data set NT.

Input/Output

The matrix is written onto the output data set.

Argument List

М	An integer scalar defining the matrix row dimension
N	An integer scalar defining the matrix column dimension
Α	A real array for the input matrix
NT	An integer scalar defining the output data set

Labeled Common

None

Subroutines Called

SQUEEZ, WRITE

Error Detection

SUBROUTINE XPONNT

Given complex vector D and vector T, this routine finds vector $A = e^{D*T}$.

Algorithm

All computations take place in the real mode as vectors A and D are doubly dimensioned arrays.

Input/Output

None

Argument List

A A real array accommodating the output vector

D A real array for the complex input vector treated in the

real mode

T A real array for the input vector

N An integer scalar defining the order of vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ZERØ

This routine zeros an array.

Algorithm .

The specified extent of array A is set to zero.

Input/Output

None

Argument List

A A real array to be set to zero

N An integer scalar defining the extent of A to be set to zero

Labeled Common

None

Subroutines Called

None

Error Detection

APPENDIX E

NONLINEAR INCREMENTAL ROUTINES
AND LABELED COMMON BLOCKS

0

APPENDIX E NONLINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

This appendix contains detailed descriptions of all routines and labeled common blocks in this program. Table E gives either page number references within this document or references to other documents for documentation of each routine or labeled common block. Some page number references may be to preceding appendices where the documentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm	verba	1 flow	chart	of	routine	logic	and	data	flow
				•		3 . 0	4,14		

Input/Output description of all external data set input/output

Argument List name, type, and description of each argument

<u>Labeled Common</u> list of all labeled common blocks declared

Subroutines Called list of all routines called

Error Detection description of tests made for errors and action

taken

The detailed description of each labeled common block is divided into the following subheadings:

Declaration verbatum declaration of the labeled common block

Contents name and description of each variable appearing

in the declaration

Usage list of all routines which contain declarations

for the labeled common block

TABLE E. INDEX TO NONLINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

																							Page	
MAIN PROGRAM	RESPNS	•	•	•	•	•				•		•	•	•	•	٠	•		•	•		•	380	
LABELED COMMON	CRRAYS	•																					382	
LABELED COMMON	FICNDX					•				•										•			383	
LABELED COMMON	GEØMS				•	•														•			385	
LABELED COMMON	LIMITS					•																	386	
LABELED COMMON	LPEM			•						•													388	
LABELED COMMON	NDICES																						393	
LABELED COMMON	TAPES	•			•	•	•	•	•	•	•		•	•	•	•				•	A. 100	•	397	
SUBROUTINE	ABSYM			•														•					325	
SUBROUTINE	ADD .																						326	
SUBROUTINE .	ASYMB																						327	
SUBROUTINE	AVRAGE																						399	
SUBROUTINE	BALANC																						Ref.	16
SUBROUTINE	BALBAK																						Ref.	16
SUBROUTINE .	CCMULT											•	•										329	
SUBROUTINE	CHGSGN													•									331	
SUBROUTINE	CHKØUT																						400	
SUBROUTINE	CHKPNT				•																		401	
SUBROUTINE	CHLSKY												•										332	
SUBROUTINE	CØPY .																			•			333	
SUBROUTINE	CRMULT																						334	
SUBROUTINE	EDGUNV																	•					402	
SUBROUTINE	EIGSØL																	•					404	
SUBROUTINE	ELMHES																						Ref.	16
SUBROUTINE	ELTRAN																						Ref.	16
SUBROUTINE	EUTL9																						Ref.	6
SUBROUTINE	FIFDEF																						406	
SUBROUTINE	FØRMAT																						409	

TABLE E. INDEX TO NONLINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS (Continued)

		Page
SUBROUTINE	GEØM	410
SUBROUTINE	HALT	338
SUBROUTINE	HQR	Ref. 16
SUBROUTINE	HQR2	Ref. 16
SUBROUTINE	IMBAL	411
SUBROUTINE	JØRDAN	341
SUBROUTINE	LPBFIC	414
SUBROUTINE	LPBG	415
SUBROUTINE	LPCFFB	417
SUBROUTINE	LPCFIC	418
SUBROUTINE	LPCG	419
SUBROUTINE	LPCSFB	420
SUBROUTINE	LPMFFB	421
SUBROUTINE .	LPMFIC	422
SUBROUTINE	LPMG	423
SUBROUTINE	LPMSZD	. 424
SUBROUTINE	LPMS1	425
SUBROUTINE	LPMS2	426
SUBROUTINE	LPMZ	. 242
SUBROUTINE	MATIN	• 344
SUBROUTINE	MATPRT	427
SUBROUTINE	MBAR	346
SUBROUTINE	MLTMAT	428
SUBROUTINE	MULT	348
FUNCTION	NDXSET	349
SUBROUTINE	NEWKC	429
SUBROUTINE	NITIAL	431
SUBROUTINE	NKRK	434
SUBROUTINE	ØUTPUT	435
SUBROUTINE	PBARUF	• 353
SUBROUTINE	PLØP	437

TABLE E. INDEX TO NONLINEAR INCRMENTAL ROUTINES AND LABELED COMMON BLOCKS (Continued)

															Page	
FUNCTION	PØLSØL														438	
SUBROUTINE	PREBAL							•							440	
SUBROUTINE	PREBGM														443	
SUBROUTINE	PREBGU														444	
SUBROUTINE	PREBLL														446	
SUBROUTINE	PREBST														447	
SUBROUTINE	PREEIG														448	
SUBROUTINE	PTMASS		•				•					•			358	
SUBROUTINE	READA							•							Ref.	5
SUBROUTINE	READK								•	•					359	
SUBROUTINE	READM														360	
SUBROUTINE	RGEIG														Ref.	16
SUBROUTINE .	SBTRCT							•					•		361	
SUBROUTINE	SMULT														363	
SUBROUTINE	SQUEEZ														Ref.	5
SUBROUTINE	SYMABT		•				•								364	
SUBROUTINE .	SYMFIL														365	
SUBROUTINE	SYMSØL				•										366	
SUBROUTINE	TMULT														368	
SUBROUTINE	TRNMLT														451	
SUBROUTINE	VDMULT														370	
SUBROUTINE	VECT .														284	
SUBROUTINE	WRITE												•		Ref.	5
SUBROUTINE	WRITEM														371	
SUBROUTINE	XPØNNT														372	
SUBROUTINE	ZERØ .														373	
															R	

MAIN PRØGRAM RESPNS

This is the executive routine for the Nonlinear Incremental Solution program.

Algorithm

This routine controls the incremental solution process including the iterations necessary to determine the modal response. Routine NITIAL is called first to establish partitions of array A in blank common as required by problem size. Routine ØUTPUT is then called to transcribe certain master input data to the master output file.

A loop is then entered the index of which is the number of increments defined in the card input data. Routines PREEIG, EIGSØL, FIFDEF, PREBAL, and IMBAL are the executive routines for the modules which make up the incremental solution. These modules are called in sequence for each increment within which routines EIGSØL and FIFDEF are iterated through 5 times. The variable controlling the number of iterations is NFFMAX which is initialized as 5.

The basic functions of each routine called during the incremental solution are

- PREEIG compute M in the first increment and compute K, C, and P in every increment
- 2) EIGSØL assemble the A matrix, solve for all eigenvalues and eigenvectors, and compute the modal response, $\delta \bar{\Delta}$, \bar{v} , and \bar{v}
- 3) FIFDEF temporarily update geometry and compute the fictitious force and deformation effects, s_k and t_k
- PREBAL permanently update geometry and regenerate F_ξ and σ_ξ
- 5) IMBAL compute element forces, stresses, and strains from the modal response and new geometry

Array DBLL is used to store the cumulative modal displacements, $\bar{\Delta}$, and is of length NG, the number of modes. This array is currently declared in a DIMENSION statement and is of length 75. A partition of length NG for

storing $\bar{\Delta}$ should be allocated in the blank common array A by routine NITIAL rather than using a dimensioned array.

Array A (IVBX) is used to store the modal loads, \bar{P} , which are acting at the beginning of the increment. Arrays A(ISK) and A(ITK) are used to store the equivalent modal loads due to fictitious force and deformation effects, respectively, which at computed by FIFDEF for each iteration.

Input/Output

None

Arguments

None


Labeled Common

NDICES, LIMITS, TAPES

Subroutines Called

COPY, EIGSOL, FIFDEF, IMBAL, NITIAL, OUTPUT, PREBAL, PREEIG, ZERO

Error Detection

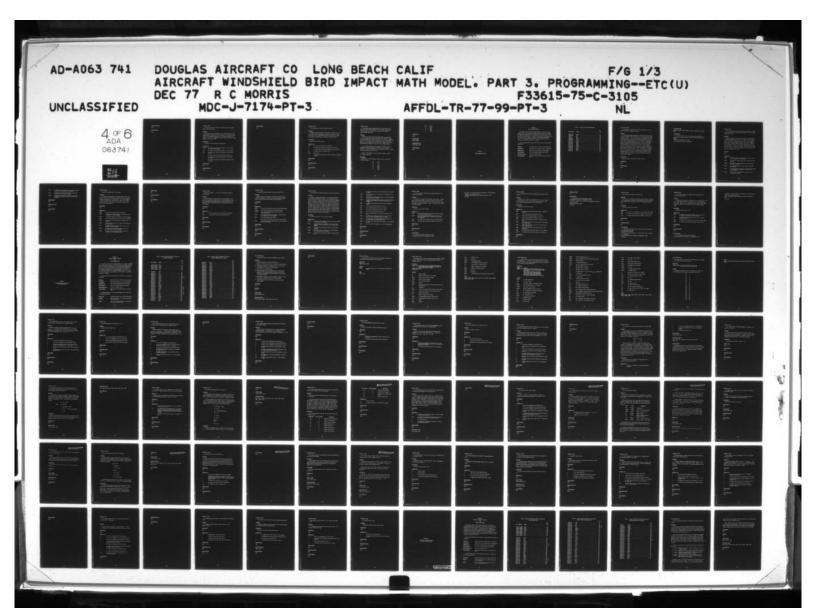

Subroutines Called

None

Error Detection

None

matrix is at row 1899 and colors 1001. The residential indices of the

and inpolA

. snoil

location in the overall matrix.

SUBROUTINE WPART

This routine writes a partition of a matrix onto tape in standard FØRMAT matrix data format.

Algorithm

Each column of the matrix partition A is written onto tape in the compressed mode. The origin of matrix partition A in the overall output matrix is at row IRØW and column ICØL. The row/column indices of the element of array A are incremented by IRØW and ICØL to obtain their proper location in the overall matrix.

Input/Output

A matrix partition is written onto tape TAPENØ.

Argument List

TAPENØ	An integer scalar defining the number of the last column output logical tape number
IRØW	An integer scalar defining the number of last row output
ICØL	An integer scalar defining the number of the last column output
A	A real array for the core resident matrix partition A
М	An integer scalar defining the number of rows of matrix partition A
N	An integer scalar defining the number of columns of matrix partition ${\bf A}$

Labeled Common

None

Subroutines Called

Error Detection

None

An integer scalar defining the number of words (in chargeord) in CAREC

SUBROUTINE WRMAT

This routine prints a matrix residing in the core.

Algorithm

The maximum column dimension of the matrix to be printed is 50. If MAP is equal to zero, the elements of the matrix are printed. If MAP is not zero, a map of the non-zero elements of the matrix is printed. This routine is executed only in runs made for program checkout.

Input/Output

Matrix data is printed on tape 6.

Argument List

AMAT A real array for the matrix to be printed

M An integer scalar defining the number of rows in AMAT

N An integer scalar defining the number of columns of AMAT

MAP An integer scalar print control flag

LABEL Matrix label

An integer scalar defining the number of words (10 char/word)

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE WTAPET

This routine reads the element partitions for matrices KEL, MEL, KBAR, CBAR, FFBAR, SIGFB, EPSIG, DEBT, EVT, and CØNST, assembles the partitions into the final matrices, and outputs the matrices as standard FØRMAT matrix data.

Algorithm

The order in which the first nine output matrices are processed is KEL, MEL, KBAR, CBAR, FFBAR, SIGFB, DPSIG, DEBT, and EVT. In each case, the element data is read and processed in the order bars, membranes, and cells. The only matrix having contributions from point mass elements, which are processed last, is matrix MEL. However, trailing null partitions are also present in matrix KEL for point mass elements.

In all of these matrices with the exception of DEBT and EVT, the element partitions are positioned as diagonal or psuedo diagonal partitions. In matrices DEBT and EVT, each element partition is a single column each beginning in the first row.

Finally, array CONST which contains problem constants is output as a single column matrix.

Input/Output

Matrix data is read from tapes 7 through 15 and all output data is written to tape 1.

Tape	Matrix
14	KEL
10	MEL
13	KBAR
8	CBAR
12	FFBAR

Tape	Matrix
15	SIGFB
11	EPSIG
9	DEBT
7	EVT

Argument List

None

Labeled Common

CØNST, IERRØR

Subroutines Called

MATHD, MATTR, WPART

Error Detection

APPENDIX C

notice of tests made for errors and soliton

LOADS GENERATOR ROUTINES

nation of macrones evolved at a trailing

APPENDIX C LOADS GENERATOR ROUTINES

This appendix contains detailed descriptions of all routines in this program. Table C gives either page number references within this document or references to other documents for documentation of each routine. Some page number references may be to preceding appendices where the documentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm verbal flow chart of routine logic and data flow

Input/Output description of all external data set input/output

Argument List name, type, and description of each argument

Labeled Common list of all labeled common blocks declared

Subroutines Called list of all routines called

Error Detection description of tests made for errors and action taken

TABLE C. INDEX TO LOADS GENERATOR ROUTINES

																		Page	
MAIN PROGRAM	LØDGEN	•	•	•	•	•	•	•	•	•	•		•	•		•	•	294	
SUBROUTINE	CRØSS			•														121	
SUBROUTINE	DELTA																	296	
FUNCTION	DØT .																	122	
SUBROUTINE	GENAB																	298	
SUBROUTINE	INVERT																	300	
SUBROUTINE	MATMUL									•								301	
SUBROUTINE	ØUTPUT																	302	
SUBROUTINE	READB																	304	
SUBROUTINE	READCN																	306	
SUBROUTINE	READCØ																	308	
SUBROUTINE	READJ																	309	
SUBROUTINE .	SQUEEZ																	Ref.	5
SUBROUTINE	UVEC .																	134	

MAIN PRØGRAM LØDGEN

The main program allocates core and calls subroutines to read, calculate, and output incremental loads data.

Algorithm

The subroutines READCØ and READCN are called and the average impact force is calculated. The load increment loop is then entered and READB and READJ are called. The current total load on the model and the location of the center of its footprint for this load increment are calculated, the largest component of the centroidal vector is determined, and the subroutines GENAB and MATMUL are called. If the load increment number is greater than one and less than or equal to the total number of load increments, subroutine DELTA is called. If the increment number is one, there is no need to calculate the change in loads from the preceding increment to this, since this change is the current load, and if the load increment number is equal to the number of increments plus one, the change in load is the negative of the preceding load. Subroutine ØUTPUT is then called and the current loads and the joints of their applications are stored at the end of the A array for use in the next load increment.

Input/Output

There is no input; all output is printed on file 6.

Argument List

None

Labeled Common

Subroutines Called

CRØSS, DØT, MATMUL, READB, READCØ, UVEC, DELTA, GENAB, ØUTPUT, READCN, READJ

Error Detection

If, in either of the checks on utilization of the A array, it is found that the available storage in the A array has been exceeded, the message

'INSUFFICIENT STORAGE nnnnn VS nnnnn' is printed and the program is terminated.

SUBROUTINE DELTA

This routine compares the joint loads of the current load increment to the joint loads of the previous load increment and finds the change in load at each joint.

Algorithm .

Since only non-zero joint loads for the current and previous load increments are stored in order of the joint numbers, there are three basic possibilities for each change in joint load. (1) The joint is loaded in the current increment, but not in the previous increment; (2) the joint is loaded in both the current and previous increments; or (3) the joint was loaded in the previous increment but not in the current increment. In any case the change in load on the joints loaded currently or in the previous load increments, are found and stored in order of the numbers of the joints.

Input/Out ·

None

Argument List

JØINTØ	An integer array of the numbers of joints that received load in the previous load increment
PHIØLD	A real array of loads on the joints in the previous load increment
JØINTN	An integer array of the numbers of joints that receive load in this increment
PHINEW	A real array of the loads on the joints in the current load increment
JTDEL	An integer array of the numbers of joints that were loaded in the previous load increment or are loaded in the current increment
DELPHI	A real array of the changes in joint loads from the previous load increment

NJTØ

An integer scalar defining the number of joints that received load in the previous load increment

NJTN

An integer scalar defining the number of joints that

receive load in the current increment

NDELPH

An integer scalar defining the number of joints that receive load in either the current or previous load

increments

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE GENAB.

This routine generates the A and B matrices.

Algorithm

The B matrix's three members are calculated first from the cross product of the vector to the current footprint location and the unit vector in the direction of load application. The A array (dimension 3X NJTN) is created second, using the cross products of the vectors to the joints that are to receive load and the unit vector in the direction of load application.

Input/Output

None

Argument List

CØØRJ	A real array of coordinates of all the joints
JØINTN	An integer array defining numbers of joints that are to be loaded in this load increment
ABETA	A real array defining the A array for this load increment
BBETA	· A real array defining the B array for this load increment
CBETA	A real array of the coordinates of the center of the footprint
UVAPP	A real array defining the unit vector in the direction of load application
NTU	An integer scalar defining the number of joints to be loaded in this load increment
IRØW2	An integer scalar defining the number of one of the principal axes in the reference plane
IRØW3	An integer scalar defining the number of the other principal axis in the reference plane

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE INVERT

This routine inverts a 3 \times 3 matrix by the method of successive transformations.

Algorithm

An identity matrix is set up first, then, while the matrix to be inverted is turned into an identity matrix, the row operations to do so are also performed on the identity matrix. When the input matrix is an identity matrix, the identity matrix has been transformed into the inverse matrix.

Input/Output

None

AAT

Argument List

A real array defining the input matrix to be inverted

AATIN A real array defining the inverted output matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE MATMUL

This routine performs the matrix multiplication $A^{T}(AA^{T})^{-1}BF$.

Algorithm

The first step is to obtain AA^T , then the matrix multiplication $A^T(AA^T)^{-1}$ is performed. The final two steps are the matrix multiplication $A^T(AA^T)^{-1}B$ and the scalar multiplication $A^T(AA^T)^{-1}BF$.

Input/Output

None

Argument List

ABETA A real array defining the A matrix for this load increment

PREPRØ A real array of storage area for the pre-product

PHINEW A real array defining the final matrix product of

loads on the joints

JØINT An integer array defining the numbers of joints that are

to be loaded in this load increment

BBETA A real array defining the B matrix

F A real scalar defining the total load for this increment

NJTN An integer scalar defining the number of joints to receive

load in this increment

Labeled Common

None

Subroutines Called

INVERT

Error Detection

SUBROUTINE ØUTPUT

This routine prints, punches and writes (on tape) the output data.

Algorithm

The output is produced in two forms. The first form is for the user to use for checking the input data. The constant data (mass velocity, duration of impact, average impact force, and the load application unit vector) are printed first, then the current load and the change in load that occurred between the preceding and current load increments for each joint that undergoes a change in load are printed. The second form of output is printed for the benefit of the user and written on tape for analysis programs downstream. The format used is that for a FØRMAT matrix whose rows are the degree of freedom numbers and whose columns are the load increment numbers. The change in load between the previous and current load increments are divided along the degrees of freedom and are written accordingly.

Input/Output

The output is written on files 6, JTAPE and KTAPE.

Argument List

DELPHI	A real array of the change in joint loads from the previous to the current load increment
JØINT	An integer array of the numbers of joints that undergo changes in load from the previous to the current load increment

PHINEW	A real array of	the	loads	on	the	joints	in	the	current
	increment								

F A real scalar defining the total load applied in the current increment

UVAPP A real array defining a unit vector in the direction of the applied load

NJTN An integer scalar defining the number of joints that received load in the current increment

NDELPH An integer scalar defining the number of joints that undergo changes in load between the current and preceding load increments

NDØF An integer scalar defining the total number of degrees of freedom

AMASS A real scalar defining the mass of the bird

VEL A real scalar defining the velocity of the bird

TIME A real scalar defining the duration of impact

FAVG A real scalar defining the average load

UVEL A real array defining a unit vector of the velocity of the bird

JTAPE An integer scalar defining the number of the output file that will contain the FØRMAT matrix card images

KTAPE An integer scalar defining the number of the output file that corresponds to the FØRMAT tape output

NBETAP An integer scalar defining the total number of load increments plus one

COLM A real array used to assemble a column of the output matrix

Labeled Common

None

Subroutines Called

SQUEEZ

Error Detection

SUBROUTINE READB

This routine reads the footprint travel and load factor for the current load increment.

Algorithm

The input file is read until a Data Code 11 card is read. The Data Code 11 cards are read until a card with a flag of 6 is found. The cards with a flag of 6 are read until the card with the current increment number is read and the data is stored. The subroutine then returns to the main program.

Input/Output

The input is read from file ITAPE.

Argument List

DBETA	A real scalar defining the distance the footprint travels	
	from the initial impact point	

FACTOR A real scalar defining the current position portion of

the average impact load to be applied for the current

load increment

IBETA An integer scalar defining the current increment number

ITAPE An integer scalar defining the number of the input file

Labeled Common

None

Subroutines Called

None

Error Detection

If no Data Code 11 cards are read the message 'NO CONSTANTS (DATA CODE 11) ENCOUNTERED IN INPUT'

is printed. If the card with data corresponding to the current load increment is not read the message 'INCREMENT (BETA) NUMBER nnn NOT FOUND IN DATA CODE 11 DATA' is printed.

SUBROUTINE READON

This routine reads the constants associated with the impact distribution.

Algorithm

The input file is read until a Data Code II card is read. The input file is backspaced one record and five cards are read and their data stored before the subroutine returns to the main program.

Input/Output

The input is read from file ITAPE.

Argument List

NDØF	An integer scalar defining the total number of degrees of freedom
AMASS	A real scalar defining the mass of the bird
VEL	A real scalar defining the velocity of the bird
ALENG	A real scalar defining the length of the bird
UVEL	A real array defining a unit vector in direction of bird motion
UNØRM	A real array defining a unit vector normal to the surface at the impact point
UFØØT	A real array defining a unit vector in the direction of impact footprint travel
CØØRI	A real array defining a vector from the origin to the impact point
NBETA	An integer scalar defining the number of load increments
ITAPE	An integer scalar defining the number of the input file

Labeled Common

Subroutines Called

None

Error Detection

If no Data Code 11 cards are read the message
'NO CONSTANTS (DATA CODE 11) ENCOUNTERED IN INPUT'
is printed. If there are not at least five consecutive Data Code 11
cards, the message
'MISSING DATA IN DATA CODE 11'
is printed.

This woutled raude the foliationersiness date.

SUBROUTINE READCO

This routine reads the joint coordinate data.

Algorithm

The input file is read until a Data Code 2 card is found. The input file is backspaced one record and the coordinate data is read and stored until the data code is no longer 2 or until a joint number of 9999 is read.

Input/Output

The input is read from file ITAPE.

Argument List

CØØRJ	A real array of coordinates of joints stored by joint number
NJTØT	An integer scalar defining the largest joint number input
ITAPE	An integer scalar defining the number of the input file

Labeled Common

None

Subroutines Called

None

Error Detection

If the end of Data Code 2 data is encountered without encountering joint number 9999 the message

'A 29999 CARD WAS NOT FOUND'

is printed but execution continues. If no Data Code $\hat{\mathbf{Z}}$ data is found at all, the message

'NO JOINT COORDINATE DATA (DATE CODE 2) ENCOUNTERED IN INPUT'

SUBROUTINE READJ

This routine reads the joint numbers that will receive load in the current load increment.

Algorithm

The input file is read until a Data Code 12 card is encountered. The file is backspaced one record and the data is read, checking the increment number. When the current increment number is read the joint numbers are read and stored for as many cards as have the current increment number.

Input/Output

The input is read from file ITAPE.

Argument List

JØINT	An integer array defining the numbers of joints that are to receive load during the current increment
NJTN	An integer scalar defining the number of joints that are contained in JØINT
IBETA	An integer scalar defining the current load increment number
ITAPE	An integer scalar defining the number of the input file

Labeled Common

None

Subroutines Called

None

Error Detection

If no Data Code 12 cards are read the message 'NO LOADED JOINTS DATA (DATA CODE 12) ENCOUNTERED IN INPUT'

is printed. If a card with data corresponding to the current load increment is not read the message
'JOINTS FOR INCREMENT (BETA) NUMBER nnnn NOT FOUND IN DATA CODE 12
DATA'

is printed.

APPENDIX D

LINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

APPENDIX D LINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

This appendix contains detailed descriptions of all routines and labeled common blocks in this program. Table D gives either page number references within this document or references to other documents for documentation of each routine or labeled common block. Some page number references may be to preceding appendices where the documentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm	verbal flow chart of routine logic and data flow
Input/Output	description all external data set input/output

Argument List name, type, and description of each argument

<u>Labeled Common</u> list of all labeled common blocks declared

Subroutines Called list of all routines called

Error Detection description of tests made for errors and action taken

The detailed description of each labeled common block is divided into the following subheadings:

Declaration verbatum declaration of the labeled common block

Contents name and description of each variable appearing

in the declaration

Usage list of all routines which contain declarations

for the labeled common block

TABLE D. INDEX TO LINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

																							Page	
MAIN PROGRAM	RESPNS	•	٠	•	•		•	•	•				•	•	•	Ċ		•	•	•	•	ė	315	
LABELED COMMON	CLØCK																						317	
LABELED COMMON	LIMITS				•					•			•						•	•			318	
LABELED COMMON	NDICES								•									•	•				320	
LABELED COMMON	TAPES	•		•	•	•	•	•		•			•	•	٠	•		•	•	•	٠	٠	323	
SUBROUTINE	ABSYM																				•		325	
SUBROUTINE	ADD .	•	•	•			•	•		•													326	
SUBROUTINE	ASYMB	•	•				•		•	•		•											327	
SUBROUTINE	BALANC		•				•			•													Ref.	16
SUBROUTINE	BALBAK	•	•	•	•	•				•	•	•	•								•		Ref.	16
SUBROUTINE .	CCMULT	•	•						•	•													329	
SUBROUTINE	CHGSGN	•			•					•									•				331	
SUBROUTINE	CHLSKY	•		•				•															332	
SUBROUTINE	CØPY .	•	•					•															333	
SUBROUTINE	CRMULT	•	•	•	•	•		•	•	•		•	•										334	
SUBROUTINE	EIGSØL		•	•	•	•	•	•		•		•						•					336	
SUBROUTINE	ELMHES	•	•	•				•	•	•		•	•								•		Ref.	16
SUBROUTINE	ELTRAN	•		•	•	•			•	•	•											•	Ref.	16
SUBROUTINE	EUTL9			•		•	•	•	•	•	•							•					Ref.	6 .
SUBROUTINE	HALT .	•	•		•		•	•	•	•								•					338	
SUBROUTINE	HQR .	•	•		•			•	•	•								•					Ref. 1	16
SUBROUTINE	HQR2 .		•	•	•	•		•	•	•			•		•			•	•			•	Ref. 1	16
SUBROUTINE	IMBAL		•	•	•			•		•	•	•		•									339	
SUBROUTINE	JØRDAN	•		•				•	•	•	•			•				•			•	•	341	
SUBROUTINE	LINEAR						•				•				•		•	•			•		342	
SUBROUTINE	MATIN												•	•				•					344	
SUBROUTINE	MBAR .							•								•						•	346	

TABLE D. INDEX TO LINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS (Continued)

	Page
SUBROUTINE	MULT
FUNCTION	NDXSET
SUBROUTINE	NITIAL
SUBROUTINE	ØUTPUT
SUBROUTINE	PBARUF
SUBROUTINE	PREEIG
SUBROUTINE	PRINTR
SUBROUTINE	PTMASS
SUBROUTINE	READA
SUBROUTINE	READK 359
SUBROUTINE	READM
SUBROUTINE	RGEIG
SUBROUTINE .	SBTRCT
SUBROUTINE	SIGFBR
SUBROUTINE	SMULT
SUBROUTINE	SQUEEZ
SUBROUTINE	SYMABT
SUBROUTINE	SYMFIL
SUBROUTINE	SYMSØL
SUBROUTINE	TIMEQ Ref. 6
SUBROUTINE	TMULT
SUBROUTINE	TSETQ
SUBROUTINE	VDMULT
SUBROUTINE	WRITE
SUBROUTINE	WRITEM
SUBROUTINE	XPØNNT
SUBROUTINE	ZERØ

MAIN PROGRAM RESPNS

This is the driver of the Linear Incremental Solution program.

Algorithm |

The driver functions of this program consist of:

- 1) Defining 23 data sets used for input, output and scratch storage.
- 2) Delimiting the extents of 4 common blocks, the first of which, blank common, will be used for working storage.
- 3) Initializing via subroutine NITIAL.
- 4) Setting the stage for an incremental analysis by invoking subroutine PREEIG to generate matrices \overline{M} , \overline{K} and \overline{C} which are the components of the eigenvalue problem statement set up and solved via subroutine EIGSOL.
- 5) Performing the incremental analysis through the sequence of calls to subroutines LINEAR and IMBAL for each time interval.
- 6) Clocking the execution of each module and displaying elapsed time on output.

Input/Output.

None

Arguments

None

Labeled Common

NDICES, TAPES, LIMITS

Subroutines Called

NITIAL, PREEIG, EIGSØL, LINEAR, IMBAL, TSETQ, TIMEQ

Error Detection

None

0

15 Certaing 22 data sets used for input, catgue and sorebob steerage.

to subsections illust and inches for each time interval.

LABELED COMMON CLØCK

This common block is used to store timing information to obtain CPU time required for major modules within the program.

Declaration

COMMON /CLOCK/ ORGTIM

Contents

ØRGTIM

CPU time remaining for the run obtained by system routine

Usage

TIMEQ, TSETQ

LABELED COMMON LIMITS

This common block is used to store problem size information, problem constants, option flags, and other program parameters used by all principle routines.

Declaration

CØMMØN /LIMITS/NG,NK,NELEMS,NTRVLS,BETA,BETBAR,HEAT,NM,IØRGN,JX
, KØLX,NF,MØREK,MØREC,NG2,NG2SQ,NJTS,AHAT,DEBCL,TBM1
, TAU,NS,NØWRK,NSUPD,NFAIL,NØPBPU
LOGICAL BETBAR,NØBPU
INTEGER BETA

Contents

NG Number of modes

NK Number of lumped forces for an element

NELEMS Total number of physical elements

NTRVLS · Number of time increments

BETA Current increment number

BETBAR Not used

HEAT . Option flag for element dissipated damping energy con-

verted to heat

NM (NG*NG+NG)/2

IØRGN Pointer to unused trailing partition of blank common

JX Pointer to a location in labelled common NDICES

KØLX Matrix column counter

NF Number of forces for an element

MØREK Flag designating additional partitions of k

MØREC Flag designating additional partitions of c

NG2 NG+NG

NG2SQ NG2*NG2

NJTS Number of joints

AHAT Not used

DEBCL Total damping energy

TBM1 Time increment of previous interval

TAU Time increment of current interval

NS Number of stresses for an element

NWØRK Extent of blank common region

NSUPD Not used

NFAIL Not used

NØPBPU Flag indicating the input $\delta \bar{P}_{(\phi)U}$ has been exhausted

Usage

RESPNS, EIGSØL, IMBAL, LINEAR, NDXSET, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR

LABELED COMMON NDICES

This common block is used to store pointers to partitions within blank common array A. All values in this common block are initialized in routine NITIAL. Partitions for elements are sized for cells which have the largest storage requirements.

Declaration

COMMON	A(8000)
COMMON	/NDICES/IVBDB, IVBB, IVBX, IDPBPU, IPBMUB, IDPPUB, IDBL, IVBL
	IPBAR, IPBPHU, IKB, ICB, IMBAR, IMBARL, IDEBCL, ICONST
,	ITIME, ISIGSS
,	IKBL, IZ, ICA, IQ, IVAL, IFTAU, IVEC, IEGSYS
	IU, LU, IECT, IEVT, IMPT, IDEBO, IDFBKO, IDSEB
	IFK, IFBK, IDEL, IDEDL, IFSFB, IFSFBB, IPBCU
,	IPBKU, ISIGFB, ISIGBH, IEPSIG, IPSLØN, ID, IDK
•	ISKB, ISKBB, ISCB, ISCBB, IPBUF, ISK, ITK, ICIB, IMEL

Contents

	그 마르크 가는 사람들이 얼마나 나는 사람들은 사람들이 모든 이번에 어려워진다. 그리고 생각하셨다면 하나 사람들이 하면 하면 있는데 되었다면 하는데 되었다.
IVBDB .	$\frac{\cdot}{v_{\beta}}$, modal accelerations
IVB8	\overline{v}_{β} , modal velocity
IVBX	$\overline{v}_{\beta-1}$, modal velocity of previous increment
IDPBPU	$\delta \overline{P}_U$, incremental modal force imbalance
IPBMUB	P _{(M)U} , modal inertia force
IDPPUB	$\delta \bar{P}_{(\phi)U}$, incremental modal applied load
IDBL	$\delta \bar{\Delta}_{L}$, incremental linear modal displacement
IVBL	v _L , linear modal displacement
IPBAR	P, total modal forces
IPBPHU	$\bar{P}_{(\phi)U}$, modal applied load
IKB	K, modal stiffness
ICB	C, modal damping
IMBAR	M, modal mass

0

IMBARL Cholesky decomposition of M

IDEBCL $\delta \bar{E}_{CL}$, incremental element dissipated damping energy

ICONST Problem constants

ITIME Incremental time history

ISIGSS $\sigma_{S\sigma}$, stress transform for cell elements

IKBL Cholesky decomposition of K

IZ The modal matrix $Z = \bar{K}_{\beta-1}^{-1} \bar{P}_{\beta}$

ICA The modal matrix $C_a = H^{-1}$ yo

IQ The modal matrix $Q = C_{a_D} F(\tau)$ where C_{a_D} is C_a diagonalized

IVAL λ , eigenvalues

IFTAU $F(\tau)$, a modal column matrix of $e^{\lambda \tau}$

IVEC H, eigenvectors

IEGSYS Eigenvalue problem work array

IU U_o, original joint coordinates

LU Not used

IECT ECT, element constant table

IEVT EVT, element variable table

IMPT MPT, material property tables

IDEBO 6e, incremental initial element deformations

IDFBKO $\sigma \bar{F}_{K_a}$, incremental element forces due to initial deformations

IDSEB 6e, incremental element deformations

IFK The matrix $FK = \overline{F}_{K_{\beta-1}} + \delta \overline{F}_{K_0}$ for an element

IFBK F_K, element forces

IDEL 6e, incremental linear element displacement

IDEDL 6e, incremental linear element velocity

IFSFB	F _F , element force transform
IFSFBB	Not used
IPBCU	P(C)U, modal damping forces
IPBKU	P(K)U, modal stiffness forces
ISIGFB	σ̄F, element stress transform
ISIGBH	Not used
IEPSIG	ε_{σ} , element strain transform
IPSLØN	ε, element strains
ID	The matrix $D = P_{UF} F_{F}$ for an element
IDK	The matrix DK = P_{UF} F_F \bar{k} for an element
ISKB	k, unassembled element stiffness
ISKBB	Not used
ISCB	c, unassembled element damping
ISCBB	Not used
IPBUF	P _{UF} , modal transform
ISK	s _k , modal fictitious forces
ITK	t _k , modal fictitious deformations
ICIB	The matrix $\overline{CI} = \overline{P}_{UF} F_F \overline{c} F_F^T \overline{P}_{UF}^T$ for an element
IMEL	m, element mass

<u>Usage</u>

RESPNS, EIGSØL, IMBAL, LINEAR, NDXSET, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR

LABELED COMMON TAPES

This common block is used to store the FORTRAN logical unit numbers of the external files used by the program.

Declaration

COMMON /TAPES /N1 ,N2 ,N3 ,N4 ,N5 ,N6 ,N7 ,N8 ,N9 ,N10 ,N11,N12,N13,N14,N15,N16,N17,N18,N19,N20

Contents

The values in the common block are initialized in routine NITIAL. The FORTRAN logical unit designations assigned are given here.

N1	1
N2	2
N3	3
N4	4
N5	8
N6	9
N7	10
N8	11
N9	12
NIO	13
111	14
N12	15
N13	16
N14	17
N15	18
N16	19
N17	20
N18	21
N19	22
N20	23

Usage

RESPNS, EIGSØL, IMBAL, LINEAR, NITIAL, ØUTPUT, PBARUF, PREEIG, PTMASS, READK, SIGFBR

SUBROUTINE ABSYM

This routine performs a matrix cross-product wherein the postmultiplier matrix is the upper half of a symmetric matrix.

Algorithm

The mode of storage of the post-multiplier matrix is b_{11} , b_{12} ... b_{1n} , b_{22} When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix sum $C = C + A \cdot B$.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
A	· A real array accommodating the pre-multiplier matrix
B	A real array accommodating the post-multiplier matrix in the mode of storage $b_{11},\ b_{12},\ \cdots,\ b_{1n},\ b_{22}$
М	An integer scalar defining the order of the pre-multiplier matrix
N	An integer scalar defining the order of the post-multiplier symmetric matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ADD

This routine performs vector addition; C = A + B.

Algorithm .

Vectors A and B are summed into C.

Input/Output

None

Argument List

A real array accommodating the resulting vector

A real array accommodating the first input vector

B A real array accommodating the second input vector

N An integer scalar defining the order of the vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ASYMB

This routine performs a matrix cross-product wherein the premultiplier matrix is the upper half of a symmetric matrix.

Algorithm

The mode of storage of the symmetric pre-multiplier matrix is a_{11} , a_{12} , a_{1n} , a_{22} When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix sum $C = C + A \cdot B$.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
Α .	A real array accommodating the pre-multiplier matrix in the mode of storage all, ale,, aln, ale
В	A real array accommodating the post-multiplier matrix
М	An integer scalar defining the order of the symmetric pre-multiplier matrix
P	An integer scalar defining the column order of the pre-multiplier matrix
SUM	A logical scalar which if true, $C = C + A \cdot B$; otherwise $C = A \cdot B$

Labeled Common

None

Subroutines Called

Error Detection

None

0

ni sindan heriottium-eno ent prilibbornossa verna ises i

in integer scaler defining the order of the symmetric

SUBROUTINE CCMULT

This routine computes the specified leading rows of the product of two complex matrices.

Algorithm

When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix product and summation C = C + A*B.

Input/Output

None

Argument List

C	A complex array accommodating the product matrix
A	A complex array accommodating the pre-multiplier matrix
В	A complex array accommodating the post-multiplier matrix
М	An integer scalar defining the row dimension of arrays C and A
N	An integer scalar defining the column dimension of array A, and the row dimension of array B
P	An integer scalar defining the column dimension of arrays B and ${\bf C}$
ML	An integer scalar defining the computations concerning ML rows of C
SUM	A logical scalar which if true, $C = C + A*B$; otherwise $C = A*B$

Labeled Common

Subroutines Called

None

Error Detection

SUBROUTINE CHGSGN

This routine changes the algebraic sign of a vector.

Algorithm

The sign of the vector is reversed by being set to minus.

Input/Output

None

Argument List

A A real array accommodating the vector whose sign is to be reversed

N An integer scalar defining the order of the vector

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE CHLSKY

This routine performs an in situ Cholesky decomposition, where the symmetric matrix is given in its triangular half.

Algorithm

Where $A = LL^T$, given the positive definite matrix A in its symmetric half, this routine transforms it to L. The mode of storage is a_{11} , a_{12} , a_{1n} , a_{22} a_{2n} , etc.

Input/Output

None

Argument List

A A real array accommodating the symmetric half of the positive definite matrix on input, and its square root decomposition on output

N An integer scalar defining the order of the problem

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE COPY

This routine copies an array from core to core.

Algorithm

Array A is copied into array B.

Input/Output

None

Argument List

A A real array to be copied

B A real array into which the copy is made

N An integer scalar defining the order of the arrays

Labeled Common

None

Subroutined Called

None

Error Detection

SUBROUTINE CRMULT

This routine computes the specified leading rows of a matrix product wherein the pre-multiplier matrix is complex.

Algorithm

When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero. Otherwise, it is simply incremented to yield the matrix product and summation C = C + A*B.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
Α .	A real complex array accommodating the pre-multiplier matrix
В	A real array accommodating the post-multiplier matrix
М	An integer scalar defining the row dimension of arrays C and A
N	An integer scalar defining the column dimension of array A and the row dimension of array B
P	An integer scalar defining the column dimension of arrays B and ${\bf C}$
ML	An integer scalar defining the computations concerning ML rows of ${\bf C}$
SUM	A logical scalar which if true, $C = C + A*B$; otherwise, $C = A*B$

Labeled Common

Subroutines Called

None

Error Detection

SUBROUTINE EIGSOL

This routine sets up, executes and disposes of the eigen problem.

Algorithm

The upper quadrants of array A are filled with the negative of symmetric modal damping and mass matrices, \bar{C} and \bar{M} , reconstructed in their full forms. The lower left quadrant is set to the identity. Subroutine SYMSOL is then invoked, with the Cholesky decomposition of modal stiffness matrix \bar{K} as argument, to arrive at:

$$\begin{bmatrix} -\bar{K}^{-1}\bar{C} & -\bar{K}^{-1}\bar{M} \\ I & 0 \end{bmatrix}$$

Subroutine RGEIG now performs the complete eigenvalue problem solution. The eigenvalues are reciprocated. In this process, equal eigenvalues corresponding to equal eigenvectors are recognized as being part of a singular system. An attempt to remedy this condition is made by scalar multiplying matrix $\bar{\mathbb{C}}$ with 1.0001 and going through the complete procedure anew. Should this instability persist, the printing of an appropriate statement is followed by a call to subroutine HALT. Otherwise, the writing of the matrix of eigenvectors onto data set N8 is followed by their inversion through subroutine JØRDAN. The inverse is also output onto data set N8.

Input/Output

To conserve core space, the matrix of eigenvectors and its inverse are stored on data set N8.

Argument List

B A real array accommodating the eigenvalue problem statement

X A real array accommodating the matrix of eigenvectors

An integer which defines the order of the eigenvalue problem

N An integer whose value is M/2

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

CHLSKY, COPY, HALT, JORDAN, RGEIG, SMULT, SYMFIL, SYMSOL, WRITE, ZERO

Error Detection

Equal complex eigenvectors with corresponding equal eigenvalues are detected as singular. An attempt to remedy this condition is made by scalar multiplying matrix \overline{C} with 1.0001. Should the unstable condition persist, the printing of an appropriate message is followed by the call to subroutine HALT.

SUBROUTINE HALT

This routine performs termination processing as necessary in the event of a fatal error.

Algorithm

In anticipation of certain processing requirements before job termination initiated by the detection of a fatal error, this routine and appropriate calls were provided. Subsequently, however, it was determined that no processing of this nature was necessary.

Input/Output

A job termination message is output to unit 6.

Argument List

None

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE IMBAL

For each physical element within each type of element, this routine computes the force, stress and strain matrices, \overline{F}_K , σ and ϵ , and writes them onto the output data set.

Algorithm

The output matrices concern bar elements, membrane elements and cell elements. Their respective FØRMAT matrix names are BARS, MEMBRN and CELLS. Each physical element is represented by a column whose contents are vectors \overline{F}_K , σ and ε . These quantities are computed as follows:

$$F_{K} = \delta F_{K_{0}} - DK^{T} \Delta$$
where
$$DK = P_{UF} F_{F} K$$

$$\sigma = \sigma_{S\sigma} \sigma_{F} F_{K} \text{ for cells}$$
or
$$\sigma = \sigma_{F} F_{K} \text{ for bars and membranes}$$

$$\varepsilon = \varepsilon_{\sigma} \sigma$$

Input/Output .

Tape 2 is the output data set. For each physical element, matrix $\sigma_{\overline{F}}$ is read from data set N14; the matrix quantity \overline{P}_{UF} $F_{\overline{F}K}$ is read from data set N7; $\delta \overline{F}_{KO}$ is read from N15; and $\epsilon \sigma$ is read from N16.

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

ADD, ASYMB, MULT, ØUTPUT, READA, READM, SBTRCT, TMULT, ZERØ

Error Detection

SUBROUTINE JØRDAN

This routine inverts in situ a complex matrix by pivoting on the available row of largest magnitude within the next available column.

Algorithm

The method used is Gauss-Jordan. The array KØL is used to record the order of rows which have been selected for pivoting.

Input/Output

None

Argument List

A A real matrix which is transformed to its inverse prior to exit from this routine

An integer work array of dimension 2*N. Prior to exit from this routine, the first N locations contain the order in which rows have been selected for pivoting. The second N locations contain the values of the pivoting elements.

An integer scalar defining the order and dimension of matrix

Labeled Common

None

N

Subroutines Called

None

Error Detection

SUBROUTINE LINEAR

This routine computes vectors \overline{P} , $\delta \overline{\Delta}$, \overline{v} and $\dot{\overline{v}}$.

Algorithm

Data set N8 is already positioned at the origin of the matrix of inverse eigenvectors. It is rewound as soon as this matrix has been read. The next read then brings in the matrix of eigenvectors proper.

 $\delta \overline{\Delta}$ and \overline{v} are computed in the complex mode and transferred to their final blank common destinations in the real mode. Through abstraction like CALL statements to utility routines, the matrix equations to compute \overline{P} , $\delta \overline{\Delta}$, \overline{v} , and $\dot{\overline{v}}$ are solved in the following manner:

$$\overline{P} = \overline{P} + \overline{P}_{(M)U} + \delta \overline{P}_{(\phi)U}$$

$$Z = -\overline{K}^{-1} \overline{P}$$

$$C_{aD} = H^{-1} \begin{bmatrix} Z \\ \overline{v} \end{bmatrix} \text{ diagonalized}$$

$$F(\tau) = e^{\lambda \tau}$$

$$Q = C_{ad} F(\tau)$$

$$\dot{\overline{v}} = H_{v} \lambda_{D} Q$$

$$\begin{bmatrix} \underline{\delta \Delta} \\ \overline{v} \end{bmatrix} = HQ$$

$$\delta \overline{\Delta} \quad \delta \overline{\Delta} - Z$$

Input/Output

The matrix of eigenvectors and its inverse are read from data set N18. The incremental applied load matrix $\delta \overline{P}_{(\varphi)_U}$ is from data set N18.

THIS PAGE IS BEST QUALITY PRACTICABLE FROM COPY FURNISHED TO DDQ

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

ADD, CCMULT, CHGSGN, CØPY, CRMULT, EUTL9, PRINTR, READA, SYMSØL, VDMULT, XPØNNT, ZERØ

Error Detection

SUBROUTINE MATIN

This routine routes FØRMAT Program input matrices and arrays from tape 20 to the intended, or interim, data sets.

Algorithm

Reading over the data set header positions it at the origin of its first matrix.

The following takes place with each item sandwiched between a matrix header and trailer. The data set designation, onto which the next matrix in sequence is to be written, is taken from the list NT and rewound. The matrix header is read and ignored. Each record thereafter is transcribed. Additionally, the third matrix is also written on data set 14. This process continues as long as the first word of the records thus processed is a positive integer. Except in the case of matrix $\overline{P}_{\rm HF}$, the output data set is then rewound.

Input/Output

The list of throughput matrices and the data set onto which they are output follows:

Matrix Name	Data Set Number	Description
PUF	14	Modal element force transform
MPT	3	Material property table
Uo	8, 14	Original joint coordinates
ECT	15	Element constant table
MEL	13	Element mass matrix
F	11	Element stiffness matrix
ē	17	Element damping matrix
FF	4	Element force transform

THIS PAGE IS BEST QUALITY PRACTICABLE

Matrix Name	Data Set Number	Description
of Contract	dien solls West to	Element stress transform
ε _σ	22	Element strain transform
⁶ Ē _T	10	Initial thermal element deformations
EVT	9	Element variable table

Argument List

A A real work array

NUM An integer scalar used as a dimensioning variable

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE MBAR

This routine fetches the upper half of the next uncoupled partition from a tape resident symmetric quasi-diagonal matrix.

Algorithm

The end product of this routine consists of a triangular matrix of order NF in expanded format wherein the rows begin from their diagonal elements. As each column (KØLX + 1) through (KØLX + NF) is read in the compressed format, its elements preceding the diagonal are discarded. The row designations of the elements retained are reduced by the quantity KØLX - NF*(I-1), where I represents the sequence of these columns from 1 through NF. One call to subroutine EUTL9 expands this triangular matrix in its desired form.

Input/Output

None

Argument List

NF An integer scalar defining the number of rows and columns in desired matrix partition

KØLX An integer scalar defining the designation of the last column read on previous entry into this routine

A A real storage array

NT An integer scalar defining the designation of the data set containing the matrix

Labeled Common

None

Subroutines Called

EUTL9, READA, ZERØ

Error Detection

None

An integer scalar defining the row diseasion of marrices,

SUBROUTINE MULT

This routine performs a matrix product.

Algorithm

The matrix product A*B is added to matrix C. Matrix C is initialized to zero only when the logical variable SUM is false.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
A	A real array accommodating the pre-multiplier matrix
В	A real array accommodating the post-multiplier matrix
M	An integer scalar defining the row dimension of matrices ${\bf C}$ and ${\bf A}$
N	An integer scalar defining the row dimension of matrix B and the column dimension of matrix ${\sf A}$
P	An integer scalar defining the row dimension of matrices ${\tt C}$ and ${\tt B}$
SUM	A logical scalar which if false, array C is initialized as zero

Labeled Common

None

Subroutines Called

None

Error Detection

FUNCTION NOXSET

This routine defines the elements of a vector used to segment the working core.

Algori thm

The variable IØRGN contains the relative location from which the work array is available for segmentation. The following takes place for each of the N apportionments: 1) the value of JX, the indexing pointer used with vector NDEX, is incremented; 2) IØRGN is stored into NDEX(JX); 3) IØRGN is increased by INC, the extent of core being allocated each origin.

Input/Output

None

Argument List

INC

An integer scalar defining the extent of core to be allocated with each origin NDEX(I)

N

Number of origins to be defined

Labeled Common

LIMITS, NDICES

Subroutines Called

None

Error Detection

Hone

SUBROUTINE NITIAL

This is the intializing routine.

Algorithm

The variables N1 through N2O, which are contained within labeled common TAPES, are sequencially set to represent tapes 1 through 4, and 8 through 23.

The input matrices are read in their FØRMAT generated mode and written onto their interim, or intended, data sets via subroutine MATIN. The following delimiting parameters are read from the first input card.

<u>Item</u>	Type	Description
BETA	INTEGER	Starting time
NELEMS	INTEGER	Number of structural elements
NTRVLS	INTEGER	Number of time intervals
NG	INTEGER	Number of modes
HEAT .	LOGICAL	"TRUE" indicates presence of thermal conditions
NJTS	INTEGER	Number of structural joints
NWØRK	INTEGER	Number of words in blank common

Blank common array A is apportioned to the various matrices and arrays through the designation of their respective origins by the index from labeled common NDICES.

The NTRVLS values concerning the time array are read into the space beginning with A(ITIME) and checked for their being in ascending order. Execution is halted with an appropriate statement when this check fails.

The constant matrix σ_{SG} for cell elements is generated and stored at A(ISIGSS).

Overlay within array A is effected by assigning IX3L and IU the same value. The first of these subscripts represent the origin of space used by subroutine EIGSØL only; the second is the leading subscript of non-conversant space used by other modules.

Subroutine READK is invoked to merge selected matrices residing on interim data sets. The arrays which are to accommodate the following vectors are initialized with zeroes: \overline{v} , \overline{v} , \overline{v}_{s-1} , \overline{sP}_{U} , $\overline{sP}_{(M)U}$, $\overline{sP}_{(a)U}$, and \overline{sE}_{CL} .

Input/Output

All card input takes place in this routine. In addition, the following input matrices are written onto the post-processing data set, tape 2: the array of constants under its input FØRMAT program matrix name; the array of time intervals under the matrix name TIME; the array of joint coordinates under the matrix name UZERØ; vectors $\overline{\mathcal{F}}_{(\frac{1}{2})U}$ and $\overline{\mathcal{F}}_{UPT}$ under their input names.

Arcument List

None

Labeled Common

LIMITS, NOICES, TAPES

Subroutines Called

ASYMB, CHGSGN, MATIN, MOXSET, READA, READK, SIGFBR, SQRT, WRITE, ZERO

Error Detection

'icne

SUBROUTINE OUTPUT

This routine stores output onto the output data set in the mode of the FØRMAT program.

Algorithm

Vectors $\overline{\Delta}$, $\delta\overline{\Delta}$, \overline{v} , $\dot{\overline{v}}$, $\delta\overline{P}_U$, and $\overline{P}_{(\phi)U}$ are written onto data set 2 as a single column FØRMAT matrix with the name RESPNS.

Input/Output

Matrix RESPNS is output to data set 2.

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

WRITE

Error Detection

SUBROUTINE PBARUF

This routine reads a partition of matrix $F_{\overline{F}}$ and the corresponding partition of matrix \overline{P}_{UF} .

Algorithm

Data set N13 contains matrix F_F in the form of one partition per record. Reading one such record provides the information necessary to determine the columns bounding the desired partition of $F_{\rm UF}$.

Inout/Output

Matrix $F_{\overline{F}}$ is read from data set N13. Matrix \overline{P}_{UF} is read from data set N11.

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutine Called

READA, EUTL9

Error Detection

SUBROUTINE PREEIG

This routine generates matrices \overline{M} , \overline{K} , \overline{C} and $\delta \overline{P}_{KO}$.

Algorithm

For each element, the matrix operations are performed through abstraction like CALL statements to utility routines. Having initialized matrices \overline{K} , \overline{C} , \overline{M} , \overline{P} , and $\overline{P}_{(M)U}$ as zero, the matrix operations performed are as follows:

$$\delta \overline{F}_{KO} = -\overline{K} \delta \overline{e}_{T}$$

$$D = \overline{P}_{UF} F_{F}$$

$$\overline{P} = \overline{P} + D \delta \overline{F}_{KO}$$

$$DK = D\overline{K}$$

$$\overline{K} = \overline{K} + DK D^{T}$$

$$\overline{C} = C + D\overline{C} D^{T}$$

$$\overline{M} = \overline{M} + \overline{P}_{UF} \stackrel{\overline{M}}{\overline{P}_{UF}} \overline{F}_{UF}$$

If point mass elements exist, their contribution to the modal mass matrix, \overline{M} , is computed and added by a single call to subroutine PTMASS.

Input/Output

For each physical element, a partition of the matrices \overline{k} , \overline{c} and $\delta \overline{e}_{\overline{l}}$ is read in that sequence from data set N1. Similar partitions of matrices \overline{P}_{UF} , $F_{\overline{F}}$, and m are read from data sets N11, N13 and N10, respectively. The contribution of each physical element to matrix DK is written onto data set N7 and, similarly, the contribution to δF_{KO} is written onto N15.

Argument List

None

THIS PAGE IS BEST QUALITY PRACTICABLE FROM COPY FURNISHED TO DDC

Labeled Common

LIMITS, NDICES, TAPES

Subroutine Called

ABSYM, ADD, ASYMS, CHGSGN, MBAR, MULT, PBARUF, PTMASS, READA, SYMABT, WRITEM, ZERØ

Error Detection

SUBROUTINE PRINTR

This routine prints a core resident matrix.

Algorithm

Groups of not more than 8 columns across each page are written for partitions of not more than 55 rows. Each page is headed with the title. The column designations appear under the title. The row designations precede each row. Only the most significant aspect of double precision matrices is written. Two calls to this routine are required to print a complex matrix.

Input/Output

None

Argument List

A A real array accommodating the matrix to be printed

K An integer scalar used as a dimensioning variable. K = 1 for real and single precision arrays. K = 2 for compressed or double precision arrays. K = 4 for double precision complex arrays.

M An integer scalar defining the row dimension

An integer scalar defining the column dimension

TITLE An alphanumeric scalar for header data

Labeled Common

None

Subroutines Called

THIS PAGE IS BEST QUALITY PRACTICABLE FROM COPY FURNISHED TO DOG

Error Detection

SUBROUTINE PTMASS

This routine concludes the computations of $\overline{\mathbf{M}}$ with the contributions of the point-mass elements.

Algorithm

The computations concern the triple product $\overline{P}_{UF} \stackrel{M}{=}_{L} \overline{P}_{UF}^{T}$ involving point mass elements. M_{EL} consists of one element. The columns of these matrices are read and the computations are exercised upon matching the column designations.

Input/Output

Matrix M_{EL} is read from data set N10. Matrix \overline{P}_{UF} is read from data set N11.

Argument List

None

Labeled Common

LIMITS, NDICES, TAPES

Subroutines Called

READA, EUTL9, ABSYM, SYMABT

Error Detection

SUBROUTINE READK

This routine transcribes FØRMAT program generated matrices from interim data sets to their intended data sets.

Algorithm

The symmetric quasi-diagonal matrices \overline{k} , e_g and \overline{c} are read in their full forms. They are retained only in their symmetric halves prior to being written as single compressed records.

Matrix $se_{\overline{1}}$ is simply copied from its input to its output tape. The quasi-diagonal matrix $F_{\overline{F}}$ is output in records of sub-matrix partitions.

Inout/Outout

Matrices \overline{k} , e_{σ} , \overline{c} , $\delta \overline{e}_{T}$, and $\overline{F}_{\overline{F}}$ are respectively read from data sets N8, N19, N14, N10, and N4; matrices e_{σ} and $F_{\overline{F}}$ are written onto data sets N16 and N13. Matrices \overline{k} , \overline{c} and $\delta \overline{e}_{T}$ are written onto data set N1 in the sequence \overline{k}_{1} , \overline{c}_{1} , $\delta \overline{e}_{1}$, \overline{k}_{2} , \overline{c}_{2} , $\delta \overline{e}_{T_{2}}$, ..., etc.

Argument List

None

Labeled Common

LIMITS, NOICES, TAPES

Subroutines Called

EUTL9, MBAR, READA, WRITE

Error Detection

Hone

SUBROUTINE READM

This routine reads a matrix which was written on a scratch data set via subroutine WRITEM.

Algorithm

The matrix is read via subroutine READA. Should it be compressed, subroutine EUTL9 expands it.

Input/Output

The matrix is read from data set NT.

Argument List

M A dummy argument

N A dummy argument

A . A real array into which the matrix is read

NT An integer scalar defining the input data set

Labeled Common

None

Subroutine Called

None

Error Detection

SUBROUTINE SBTRCT

This routine computes the arithmetic difference between two vectors.

Algorithm

The algebraic difference between vectors A and B is stored in vector C.

Input/Output

None

Argument List

C A real array for the resulting vector

A A real array for the vector being subtracted

B A real array for the subtracting vector

N An integer scalar defining the order of vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SIGFBR

This routine partitions a quasi-diagonal matrix and outputs its partitions in single compressed records.

Algorithm

The columns of each partition are read and stored consecutively in their compressed format. In the process, the row designations are replaced by the location of the elements relative to the current submatrix. A single call to subroutine EUTL9 expands the partition which is then output by subroutine WRITEM.

Input/Output

The matrix is read from data set N14 and written onto data set N12.

Argument List

None

Labeled Common

TAPES, LIMITS, NDICES

Subroutines Called

EUTL9, READA, WRITEM

Error Detection

SUBROUTINE SMULT

This routine scales a matrix.

Algorithm

Each element of array A is multiplied by the scalar S, and the product is stored in array C.

Input/Output

None

Argument List

С	A real array accommodating the output matrix
S	A real scalar coefficient
A	A real array accommodating the matrix to be scaled
м .	An integer scalar defining the row dimension
N	An integer scalar defining the column dimension

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SYMABT

This routine computes the triangular half of a symmetric matrix where the post-multiplier is transposed.

Algorithm

The mode of storage of the product matrix is $c_{11}\cdots c_{1n}$, $c_{22}\cdots c_{2n}$, etc. When the logical variable SUM is false, the array accommodating the resulting matrix is initialized as zero.

Input/Output

None

Argument List

C	A real array for the triangular product matrix
A	A real array for the pre-multiplier matrix
В	A real array for the transposed post-multiplier matrix
М	An integer scalar defining the row dimension of all matrices
N	An integer scalar defining the column dimension of A and B matrices
SUM	A logical scalar when false, causes the resulting matrix to be initialized as zero

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SYMFIL

This routine stores a symmetric half matrix into the partition of an array while reversing the sign.

Algorithm

The mode of storage of the symmetric half-matrix is a_{11} , $\cdots a_{1n}$, a_{22} When K = 1, the receiving matrix is real. When K = 2, it is complex. Note that in this case, the imaginary components are left untouched.

Input/Output

None

Argument List

A	A real array for the symmetric half-matrix
В	A real or complex array for the output matrix
K	An integer scalar where $K = 1$ for real B array, $K = 2$ for complex B array
М	An integer scalar defining the row dimension of B array
N	An integer scalar defining the order of symmetric matrix

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE SYMSØL

Given matrices L and B in the expression $LL^{T}X = B$; this routine transforms B into X.

Algorithm

The mode of storage for matrix L is l_{11} , ..., l_{n1} , l_{22} ... X is computed by way of Y where LY = B. Then, L^TX = Y. The array storing matrices B and X may be real or complex. When the integer K is 1, the array is real; when K is 2, the array is complex.

Input/Output

None

Argument List

A	A real array accommodating matrix L in the mode of storage 1111, 122
В	A real or complex array accommodating matrices B, Y and X
K	An integer scalar where array B is real when $K = 1$, and complex when $K = 2$
M	An integer scalar defining the row dimension of array B
N	An integer scalar defining the order of equation
P	An integer scalar defining the number of columns in matrices B, Y and X

Labeled Common

None

Subroutines Called

Error Detection

SUBROUTINE TMULT

This routine performs a matrix cross product wherein the premultiplier matrix is transposed.

Algorithm

The matrix product transpose A^TB is added to matrix C. Matrix C is initialized to zero only when the logical variable SUM is false.

Input/Output

None

Argument List

C	A real array accommodating the product matrix
Α	A real array accommodating the pre-multiplier matrix
В .	A real array accommodating the post-multiplier matrix
М	An integer scalar defining the row dimension of matrix C and column dimension of matrix \boldsymbol{A}
	An integer row dimension of matrices A and B
N	An integer scalar defining the row dimension of matrix C and column dimension of matrix \boldsymbol{A}
	An integer row dimension of matrices A and B
Р .	An integer column dimension of matrices B and C
SUM	A logical scalar when false causes array C to be initialized as zero

Labeled Common

Subroutines Called

None

Error Detection

SUBROUTINE VDMULT

This routine performs the element by element product of two complex vectors.

Algorithm

The element by element product of complex vectors ${\bf A}$ and ${\bf B}$ is stored in vector ${\bf C}$.

Input/Output

None

Argument List

C	A complex array for the output vector C
A	A complex array for the input vector A
В	A complex array for the input vector B
N	An integer scalar defining the order of the vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE WRITEM

This routine writes a one-record matrix, compressed (as required).

Algorithm

Following an attempt to compress the matrix via subroutine SQUEEZ, it is written onto the output data set NT.

Input/Output

The matrix is written onto the output data set.

Argument List

M	An	integer	scalar	defining	the	matrix	row	dimension

N An integer scalar defining the matrix column dimension

A A real array for the input matrix

NT An integer scalar defining the output data set

Labeled Common

None

Subroutines Called

SQUEEZ, WRITE

Error Detection

SUBROUTINE XPONNT

Given complex vector D and vector T, this routine finds vector $A = e^{D*T}$.

Algorithm

All computations take place in the real mode as vectors A and D are doubly dimensioned arrays.

Input/Output

None

Argument List

A A real array accommodating the output vector

D A real array for the complex input vector treated in the real mode

T A real array for the input vector

N An integer scalar defining the order of vectors

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ZERØ

This routine zeros an array.

Algorithm

The specified extent of array A is set to zero.

Input/Output

None

Argument List

A A real array to be set to zero

N An integer scalar defining the extent of A to be set to zero

Labeled Common

None

Subroutines Called

None

Error Detection

APPENDIX E

NONLINEAR INCREMENTAL ROUTINES
AND LABELED COMMON BLOCKS

0

APPENDIX E NONLINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

This appendix contains detailed descriptions of all routines and labeled common blocks in this program. Table E gives either page number references within this document or references to other documents for documentation of each routine or labeled common block. Some page number references may be to preceding appendices where the documentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm	verbal flow chart of routine logic and data flow
Input/Output	description of all external data set input/output

Argument List name, type, and description of each argument

Labeled Common list of all labeled common blocks declared

Subroutines Called list of all routines called

Error Detection description of tests made for errors and action taken

The detailed description of each labeled common block is divided into the following subheadings:

Declaration verbatum declaration of the labeled common block

Contents name and description of each variable appearing

in the declaration

Usage list of all routines which contain declarations

for the labeled common block

TABLE E. INDEX TO NONLINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS

																							Page	
MAIN PROGRAM	RESPNS	•	•	•	•	•	•	•	٠	٠	•		•		•	1.8	•						380	
LABELED COMMON	CRRAYS																					•	382	
LABELED COMMON	FICNDX		•		•							•		•						•			383	
LABELED COMMON	GEØMS			•	•							•											385	
LABELED COMMON	LIMITS			•				•		•												•	386	
LABELED COMMON	LPEM					•	•		•		•												388	
LABELED COMMON	NDICES																					•	393	
LABELED COMMON	TAPES	•	•		•	•	•	•	•	•	•	•	•		•		•	•	•	•		•	397	
SUBROUTINE	ABSYM																				•		325	
SUBROUTINE	ADD .																				. •	•	326	
SUBROUTINE .	ASYMB					•					•												327	
SUBROUTINE	AVRAGE			•						•													399	
SUBROUTINE	BALANC							•			•												Ref.	16
SUBROUTINE	BALBAK										•	•											Ref.	16
SUBROUTINE .	CCMULT																						329	
SUBROUTINE	CHGSGN																						331	
SUBROUTINE	CHKØUT																						400	
SUBROUTINE	CHKPNT																					•	401	
SUBROUTINE	CHLSKY																						332	
SUBROUTINE	CØPY .																						333	
SUBROUTINE	CRMULT															•							334	
SUBROUTINE	EDGUNY																						402	
SUBROUTINE	EIGSØL																						404	
SUBROUTINE	ELMHES																						Ref.	16
SUBROUTINE	ELTRAN																						Ref.	16
SUBROUTINE	EUTL9																						Ref.	6
SUBROUTINE	FIFDEF																						406	
SUBROUTINE	FØRMAT									•													409	

TABLE E. INDEX TO NONLINEAR INCREMENTAL ROUTINES AND LABELED COMMON BLOCKS (Continued)

																				Page	
SUBROUTINE	G	EØI	м.																	410	
SUBROUTINE	H	AL.	Τ.																	338	
SUBROUTINE	H	QR																		Ref.	16
SUBROUTINE	H	QR	2 .	. ,																Ref.	
SUBROUTINE	I	MB	AL.																•	411	
SUBROUTINE	J	ØR	DAN	1															•	341	
SUBROUTINE	L	PB	FI	:				•.												414	
SUBROUTINE	L	PB	G																	415	
SUBROUTINE	L	PC	FFE	3																417	
SUBROUTINE	L	PC	FI																	418	
SUBROUTINE	L	PC	G .																	419	
SUBROUTINE	L	PC	SFE	3																420	
SUBROUTINE	L	PM	FFE	3																421	
SUBROUTINE .	L	PM	FI	:															•	422	
SUBROUTINE	L	PM	G .																•	423	
SUBROUTINE	L	PM	SZI)																424	
SUBROUTINE	L	PM	S1																•	425	
SUBROUTINE	L	PM	S2																•	426	
SUBROUTINE	L	PM	Z																•	242	
SUBROUTINE	M	AT	IN																•	344	
SUBROUTINE	M	AT	PR	Г													•			427	
SUBROUTINE	M	BA	R												•	•		•		346	
SUBROUTINE	M	LT	MA	Г			•					•						•		428	
SUBROUTINE	M	UL	T									•							•	348	
FUNCTION	N	DX	SE'	T				•		•				•				•		349	
SUBROUTINE	N	EW	KC		•					•							•			429	
SUBROUTINE	N	IT	IA	L		•												•	•	431	
SUBROUTINE	N	IKR	K						•					•					•	434	
SUBROUTINE	9	UT	PU	T							•					•		•	•	435	
SUBROUTINE	P	BA	RU	F								•							•	353	
SUBROUTINE	P	LØ	P										•	•			•		•	437	

TABLE E. INDEX TO NONLINEAR INCRMENTAL ROUTINES AND LABELED COMMON BLOCKS (Continued)

																	Page	
FUNCTION	PØLSØL																438	
SUBROUTINE	PREBAL				•		•			•		•		•			440	
SUBROUTINE	PREBGM																443	
SUBROUTINE	PREBGU										•		•				444	
SUBROUTINE	PREBLL						•	•		•							446	
SUBROUTINE	PREBST						•										447	
SUBROUTINE	PREEIG																448	
SUBROUTINE	PTMASS	•	•				•										358	
SUBROUTINE	READA																Ref.	5
SUBROUTINE	READK																359	
SUBROUTINE	READM		•												•		360	
SUBROUTINE	RGEIG															. •	Ref.	16
SUBROUTINE .	SBTRCT					•											361	
SUBROUTINE	SMULT							•									363	
SUBROUTINE	SQUEEZ																Ref.	5
SUBROUTINE	SYMABT					•		•									364	
SUBROUTINE .	SYMFIL									•							365	
SUBROUTINE	SYMSØL																366	
SUBROUTINE	TMULT																368	
SUBROUTINE	TRNMLT																451	
SUBROUTINE	VDMULT																370	
SUBROUTINE	VECT .																284	
SUBROUTINE	WRITE					•	•										Ref.	5
SUBROUTINE	WRITEM							•									371	
SUBROUTINE	XPØNNT																372	
SUBROUTINE	ZERØ .																373	

MAIN PRØGRAM RESPNS

This is the executive routine for the Nonlinear Incremental Solution program.

Algorithm

This routine controls the incremental solution process including the iterations necessary to determine the modal response. Routine NITIAL is called first to establish partitions of array A in blank common as required by problem size. Routine ØUTPUT is then called to transcribe certain master input data to the master output file.

A loop is then entered the index of which is the number of increments defined in the card input data. Routines PREEIG, EIGSØL, FIFDEF, PREBAL, and IMBAL are the executive routines for the modules which make up the incremental solution. These modules are called in sequence for each increment within which routines EIGSØL and FIFDEF are iterated through 5 times. The variable controlling the number of iterations is NFFMAX which is initialized as 5.

The basic functions of each routine called during the incremental solution are

- PREEIG compute M in the first increment and compute K, C, and P in every increment
- 2) EIGSØL assemble the A matrix, solve for all eigenvalues and eigenvectors, and compute the modal response, $\delta\bar{\Delta}$, \bar{v} , and \bar{v}
- 3) FIFDEF temporarily update geometry and compute the fictitious force and deformation effects, s_k and t_k
- 4) PREBAL permanently update geometry and regenerate F_ξ and σ_ξ
- 5) IMBAL compute element forces, stresses, and strains from the modal response and new geometry

Array DBLL is used to store the cumulative modal displacements, $\bar{\Delta}$, and is of length NG, the number of modes. This array is currently declared in a DIMENSION statement and is of length 75. A partition of length NG for

storing $\bar{\Delta}$ should be allocated in the blank common array A by routine NITIAL rather than using a dimensioned array.

Array A (IVBX) is used to store the modal loads, \bar{P} , which are acting at the beginning of the increment. Arrays A(ISK) and A(ITK) are used to store the equivalent modal loads due to fictitious force and deformation effects, respectively, which at computed by FIFDEF for each iteration.

Input/Output

None

Arguments

None

Labeled Common

NDICES, LIMITS, TAPES

Subroutines Called

COPY, EIGSOL, FIFDEF, IMBAL, NITIAL, OUTPUT, PREBAL, PREEIG, ZERO

Error Detection

DOUGLAS AIRCRAFT CO LONG BEACH CALIF

AIRCRAFT WINDSHIELD BIRD IMPACT MATH MODEL. PART 3. PROGRAMMING--ETC(U)

DEC 77 R C MORRIS

MDC-J-7174-PT-3

AFFDL-TR-77-99-PT-3

NL AD-A063 741 UNCLASSIFIED 5 OF 6 063741 Illi W. j.j. ********

LABELED COMMON CRRAYS

This common block is used to store intermediate data during the generation of fictitious forces and deformations.

Declaration

CØMMØN /CRRAYS/ C(225)
DIMENSIØN RNK(8,3), RRK(30,2)
EQUIVALENCE (C(136),RNK(1,1)), (C(160),RRK(1,1))

Contents

C An array used to store intermediate data including the element coefficients n_k and r_k

<u>Usage</u>

AVRAGE, CHKØUT, FIFDEF, NKRK

LABELED COMMON FICNDX

This common block is used to store the first locations of partitions in blank common array A for use during the generation of fictitious forces and deformations.

Declaration

COMMON /FICNDEX/ IRSR, IGFB1, IGFB, IDOB1, IFBF, IREC, IRK, INK, IDEBBL, ICQL, IRCQL, IFBFS, ITHK, JNTS, LAST2, LAST3, ICEDG, ICUNV

Contents

IRSR	r _r ; reordering transform for membrane and cell elements
IGFB1	$G_{\beta-1}$, element geometry at beginning of increment
IGFB	G _f , element geometry at end of interation
IDOB1	$D_{0\beta-1}^{\beta}$, warp offset at $t_{\beta-1}$
IFBF	F _f , element forces
IREC	ECT, element constant table
IRK	r _k , fictitious element deformations
INK	n _k , fictitious element forces
IDEBBL	$\delta \widetilde{\mathbf{e}}$, fictitious element displacements
ICØL	Number of columns in F₽
IRCØL	Number of columns in r
IFBFS	Not used
ITHK	Cell element differential thickness vectors
JNTS	Number of joints for the element
LAST2	Last location of IGFB1
LAST3	Last location of IDOB1
ICEDG	Not used .

ICUNV

Not used

Usage

CHKØUT, EDGUNV, FIFDEF, GEØM, NKRK

LABELED COMMON GEØMS

This common block is used to store element geometry during the generation of fictitious forces and deformations.

Declaration

CØMMØN /GEØMS / EDGV(4,8),UNV(3,6),THICK(4,3),CØØRD(8,3)

Contents

EDGV An array of edge vectors components and magnitudes

UNV An array of unit edge vectors

THICK An array of thickness vectors for cell elements

COORD An array for temporary storage of joint coordinates

Usage

EDGUNV, FIFDEF, GEØM, LPBFIC, LPCFIC, LPMFIC

LABELED COMMON LIMITS

This common block is used to store problem size information, problem constants, option flags, and other program parameters used by all principle routines.

Declaration

COMMON /LIMITS/NG, NK, NELEMS, NTRVLS, BETA, BETBAR, HEAT, NM, IORGN, JX

KOLX, NF, MOREK, MOREC, NG2, NG2SQ, NJTS, AHAT, DEBCL, TBM1

TAU, NS, NØWRK, NSUPD, NFAIL

, X4(10) LOGICAL BETBAR INTEGER BETA

Contents

NG Number of modes

NK Number of lumped forces for an element

NELEMS · Total number of physical elements

NTRVLS Number of time increments

BETA Current increment number

BETBAR Material nonlinearity iteration flag

HEAT Option flag for element dissipated damping energy con-

verted to heat

NM (NG*NG+NG)/2

IØRGN Pointer to unused trailing partition of blank common

JX Pointer to a location in labelled common NDICES

KØLX Matrix column counter

NF Number of forces for an element

MØREK Flag designating additional partitions of k

MØREC Flag designating additional partitions of c

NG2 NG+NG

NG2SQ NG2*NG2

NJTS Number of joints

AHAT Geometric nonlinearity correction factor

DEBCL Total damping energy

TBM1 Time increment of previous interval

TAU Time increment of current interval

NS Number of stresses for an element

NWØRK Extent of blank common region

NSUPD Element stiffness update flag

NFAIL Element failure flag

X4 Pad for expansion of LIMITS

Usage

RESPNS, AVRÁGE, CHKØUT, CHKPNT, EIGSØL, FIFDEF, FØRMAT, IMBAL, NDXSET, NITIAL, NKRK, ØUTPUT, PBARUF, PØLSØL, PREBAL, PREBGM, PREBGU, PREBLL, PREBST, PREEIG, PTMASS, READK

LABELED COMMON LPEM

This common block is used to store element geometry and other data for use by the \bar{k} , \bar{c} , $F_{\bar{F}}$, and $\sigma_{\bar{F}}$ matrix regeneration routines in the PREBAL module. The configuration of the trailing portion of this common block is different for each of the element types; bars, membranes, and cells.

Declaration (Routine PREBAL)

C@MM@N /LPEM/ NUMECT, IUPDAT, IFAILD, IPARLL, ITMP1, ITMP2, IH@LD, NFK, NSK, NKSYM, NSSYM, JM(30), XXX(600)
L@GICAL IUPDAT, IFAILD, IPARLL

Declaration (Bar Elements)

CØMMØN /LPEM/ NUMECT, IUPDAT, IFAILD, IPARLL, ITMP1, ITMP2, IHØLD, NFK, NSK, NKSYM, NSSYM, JBN(30), PQ(4), AB(4)
EQUIVALENCE (JBN(1), JP), (JBN(2), JQ), (JBN(3), AREA)
LØGICAL IUPDAT, IFAILD, IPARLL

Declaration (Membrane Elements)

```
CØMMØN /LPEM/ NUMECT, IUPDAT, IFAILD, IPARLL, ITMP1, ITMP2, IHØLD, NFK, NSK, NKSYM, NSSYM, JMN(30),

AØTP, AØTQ, AØTR, AØTS, AB(4),

BB(4), CB(4), DB(4),

DP(3,3), DQ(3,3), DR(3,3), DS(3,3), EB(4),

FK1, FK2, FK3, FK4, FK5,

PQ(4), RQ(4), RS(4), PS(4),

SP(3), SQ(3), SR(3), SS(3),

THETAP, THETAQ, THETAR, THETAS,

ZP(3,3), ZQ(3,3), ZR(3,3), ZS(3,3)

EQUIVALENCE (JMN(1), JP), (JMN(2), JQ), (JMN(3), JR), (JMN(4), JS),

(JMN(5), ZETAPQ), (JMN(6), T)

LØGICAL IUPDAT, IFAILD, IPARLL
```

Declaration (Cell Elements)

```
COMMON /LPEM/ NUMECT, IUPDAT, IFAILD, IPARLL, ITMP1, ITMP2, IHOLD
, NFK,NSK,NKSYM,NSSYM,JCN(30),
                                                  , CB(4,8)
                    AB(4,8)
                                 , BB(4,8)
                    DB(4,8)
                                                  , FB(4,8)
                                                                  , FK(5,8) ,
                                  , EB(4,8)
                                                  , LT(8)
, RS(4,8)
                    LA(8)
PQ(4,8)
                                  , LB(8)
                                  , RQ(4,8)
                                                                    PS(4,8)
                                                  , TQB(4)
                    THETA(8), TPB(4)
                                                                     TRB(4)
                                  , TPQ(4)
                                                                  , TRS(4)
                                                  , TRQ(4)
                    TSB(4)
                    TPS(4)
                                                                  , ZETA(8)
                                                     V(8)
                                  , UN(4,6)
EQUIVALENCE (JCN(1), JPO), (JCN(2), JQO), (JCN(3), JRO), (JCN(4), JSO), (JCN(5), JP1), (JCN(6), JQ1), (JCN(7), JR1), (JCN(8), JS1),
                 (JCN(9), ZETAPO)
(JCN(11), SIG11), (JCN(12), SIG21), (JCN(13), SIG41),
(JCN(14), SIG12), (JCN(15), SIG22), (JCN(16), SIG42),
(JCN(14), SIG12), (JCN(18), SIG23), (JCN(19), SIG43),
EQUIVALENCE
                  (JCN(17),SIG13),(JCN(18),SIG23),(JCN(19),SIG43),
                  (JCN(20),SIG54),(JCN(21),SIG64),(JCN(22),SIG55),
(JCN(23),SIG65),(JCN(24),SIG36)
LØGICAL IUPDAT, IFAILD, IPARLL
REAL LA, LB, LT
```

Contents (General)

NUMECT	Length of ECT record
IUPDAT	Stiffness update flag
IFAILD	Element failure flag
IPARLL	Parallelogram membrane flag
ITMP1	Temporary storage array of length 30
ITMP2	Temporary storage array of length 30
IHØLD	Temporary storage array of length 240
NFK	NF*NK (see Labeled Common LIMITS)
NSK	NS*NK (see Labeled Common LIMITS)
NKSYM	(NK*NK+NK)/2
NSSYM	(NS*NS+NS)/2

Contents (Bar Elements)

JBN(1)	Number of joint p
JBN(2)	Number of joint q
JBN(3)	Bar area

Contents (Membrane Elements)

```
JMN(1)
                Number of joint p
JMN(2)
                Number of joint q
JMN(3)
                Number of joint r
JMN(4)
                Number of joint s
JMN(5)
                Stress orientation angle
JMN(6)
                Membrane thickness
AØTP
                A*B*SIN(THETA)/T for corner p
                A*B*SIN(THETA)/T for corner q
AØTQ
AØTR
                A*B*SIN(THETA)/T for corner r
                A*B*SIN(THETA)/T for corner s
AØTS
AB
                Unit vector components, X/T, Y/T, Z/T, T
BB
                Unit vector components, X/T, Y/T, Z/T, T
CB
                Unit vector components, X/T, Y/T, Z/T, T
                Unit vector components, X/T, Y/T, Z/T, T
DB
                D matrix for corner p
DP
                D matrix for corner q
DQ
                D matrix for corner r
DR
                D matrix for corner s
DS
ER
                Unit vector components, X/T, Y/T, Z/T, T
FK1
                K factor 1
FK2
                K factor 2
FK3
                K factor 3
FK4
                K factor 4
FK5
                K factor 5
PQ
                Edge vector components and magnitude, X, Y, Z, T
RQ
                Edge vector components and magnitude, X, Y, Z, T
RS
                Edge vector components and magnitude, X, Y, Z, T
PS
                Edge vector components and magnitude, X, Y, Z, T
SP
                Skew matrix for corner p
                Skew matrix for corner q
SQ
SR
                Skew matrix for corner r
SS
                Skew matrix for corner s
```

THETAP	Corner	angle				
THETAQ	Corner	angle				
THETAR	Corner	angle				
THETAS	Corner	angle				
ZP	Global	translation	matrix	for	corner	p
ZQ	Global	translation	matrix	for	corner	q
ZR	Global	translation	matrix	for	corner	r
ZS	Global'	translation	matrix	for	corner	s

Contents (Cell Elements)

JCN(1))	
to	Number of joints p _o , q _o , r _o , s _o ,
JCN(8)	p ₁ , q ₁ , r ₁ , and s ₁
JCN(9)	Stress orientation angle
JCN(11)	Non zero elements of σ_{F}^{-} where the numbering of SIG corr-
to }	esponds to location in a singularly dimensional array
JCN(24)	storing the matrix columnwise
AB	Unit vector components, X/T, Y/T, Z/T, T
BB	Unit vector components, X/T, Y/T, Z/T, T
CB	Unit vector components, X/T, Y/T, Z/T, T
DB	Unit vector components, X/T, Y/T, Z/T, T
EB	Unit vector components, X/T, Y/T, Z/T, T
FB	Unit vector components, X/T, Y/T, Z/T, T
FK	K factor
LA	Length of cell sub-element
LB	Width of cell sub-element
LT	Thickness of cell sub-element
PQ	Edge vector components and magnitudes, X, Y, Z, T
RQ	Edge vector components and magnitudes, X, Y, Z, T
RS	Edge vector components and magnitudes, X, Y, Z, T
PS	Edge vector components and magnitudes, X, Y, Z, T
THETA	Corner angles (THETAPO, THETAQO, THETARO, THETASO, THETAP1, THETAQ1, THETAR1, THETAS1)

TPB	Thickness vector components and magnitude
TQB	Thickness vector components and magnitude
TRB	Thickness vector components and magnitude
TSB	Thickness vector components and magnitude
TPQ	Thickness vector components and magnitude
TRQ	Thickness vector components and magnitude
TRS	Thickness vector components and magnitude
TPS	Thickness vector components and magnitude
UN	Unit vectors approximately normal to surfaces 0 through 5
V	T*A*SIN(THETA) for cell sub-elements
ZETA	Orientation angle of cell sub-elements

Usage

CHKPNT, LPBG, LPCFFB, LPCG, LPCSFB, LPMFFB, LPMG, LPMSZD, LPMS1, LPMS2, ØUTPUT, PREBAL, PREBGM, PREBGU, PREBLL, PREBST

LABELED COMMON NDICES

This common block is used to store pointers to partitions within blank common array A. All values in this common block are initialized in routine NITIAL. Partitions for elements are sized for cells which have the largest storage requirements.

Declaration

v_g, modal accelerations IVEDB \bar{v}_{a} , modal velocity IVBB \bar{v}_{g-1} , modal velocity of previous increment IVBX $\delta \tilde{P}_{II}$, incremental modal force imbalance IDPBPU P(M)U, modal inertia force **IPBMUB IDPPUB** $\delta P_{(\phi)U}$, incremental modal applied load $\delta \bar{\Delta}_i$, incremental linear modal displacement IDBL $\bar{\mathbf{v}}_{\mathbf{i}}$, linear modal displacement IVBL P, total modal forces **IPBAR** $P_{(\phi)U}$, modal applied load **IPBPHU**

K, modal stiffness

IKB

IMBARL Cholesky decomposition of \bar{M}

IDEBCL &E_{CL}, incremental element dissipated damping energy

ICONST Problem constants

ITIME Incremental time history

ISIGSS σ_{SG} , stress transform for cell elements

IKBL Cholesky decomposition of K

IZ The modal matrix $Z = \vec{K}_{\beta-1}^{-1} \vec{P}_{\beta}$

ICA The modal matrix $C_a = H^{-1}$ yo

IQ The modal matrix $Q = C_{a_D} F(\tau)$ where C_{a_D} is C_a diagonalized

IVAL λ , eigenvalues

IFTAU $F(\tau)$, a modal column matrix of $e^{\lambda \tau}$

IVEC H, eigenvectors

IEGSYS · Eigenvalue problem work array

IU U, joint coordinate table

LU Joint coordinate update flags

IECT ECT, element constant table

IEVT EVT, element variable table

IMPT MPT, material property tables

IDEBO $\delta \bar{e}_{0}$, incremental initial element deformations

IDFBKO $\sigma \bar{F}_{K}$, incremental element forces due to initial deformations

IDSEB 6e, incremental element deformations

IFK The matrix $FK = \overline{F}_{K_{g-1}} + \delta \overline{F}_{K_{g}}$ for an element

IFBK \bar{F}_{K} , element forces

IDEL Se, incremental linear element displacement

IDEDL 5e, incremental linear element velocity

IFSFB F_F, element force transform

IFSFBB $F_{\overline{\beta}}$, average of F_{β} and F_{β}

IPBCU P(C)U, modal damping forces

IPBKU P(K)U, modal stiffness forces

ISIGFB σ_{F}^{-} , element stress transform

ISIGBH σ_g , preliminary element stresses

IEPSIG ϵ_{σ} , element strain transform

IPSLØN ε , element strains

ID The matrix $D = P_{UF} F_F$ for an element

IDK The matrix DK = \vec{P}_{UF} \vec{F}_F \vec{k} for an element

ISKB k, unassembled element stiffness

ISKBB $\bar{K}_{\bar{\beta}}$, average of $\bar{K}_{\beta-1}$ and \bar{K}_{β}

ISCB c, unassembled element damping

ISCBB $\bar{C}_{\bar{g}}$, average of \bar{C}_{g-1} and \bar{C}_{g}

IPBUF P_{IIF}, modal transform

ISK s, modal fictitious force equivalent loads

ITK t_k , modal fictitious deformation equivalent loads

ICIB The matrix $\overline{CI} = \overline{P}_{UF} F_{F} \overline{C} F_{F}^{T} \overline{P}_{UF}^{T}$ for an element

IMEL m, element mass

X1 Pad for expansion of NDICES

Usage

RESPNS, AVRAGE, CHKØUT, CHKPNT, EIGSØL, FIFDEF, FØRMAT, GEØM, IMBAL, NDXSET, NITIAL, ØUTPUT, PØLSØL, PBARUF, PREBAL, PREBGM, PREDBGU, PREBLL, PREBST, PREEIG, PTMASS, READK

LABELED COMMON TAPES

This common block is used to store the FORTRAN logical unit numbers of the external files used by the program.

Declaration

COMMON /TAPES /TAPES(20), X2(10)

Contents

The values in the common block are initialized in routine NITIAL. The FORTRAN logical unit designations and equivalences assigned are given here.

TAPES(1)=N1=	1
TAPES (2)=N2=	2
TAPES (3)=N3=	3
TAPES (4)=N4=	4
TAPES (5)=N5=	8
TAPES (6)=N6=	9
TAPES (7)=N7=	10
TAPES (8)=N8=	11
TAPES (9)=N9=	12
TAPES(10)=N10=	13
TAPES(11)=N11=	14
TAPES(12)=N12=	15
TAPES(13)=N13=	16
TAPES(14)=N14=	17
TAPES(15)=N15=	18
TAPES(16)=N16=	19
TAPES(17)=N17=	20
TAPES (18)=N18=	21
TAPES(19)=N19=	22
TAPES (20)=N20=	23

Array X2 is a pad for expansion of labeled common block TAPES.

Usage

RESPNS, CHKPNT, EIGSØL, FIFDEF, IMBAL, NITIAL, ØUTPUT, PBARUF, PREBAL, PREBGM, PREBGU, PREBLL, PREBST, PREEIG, PTMASS, READK

0

SUBROUTINE AVRAGE

This routine computes the fictitious force and deformation matrices \mathbf{n}_k and $\mathbf{r}_k.$

Algorithm

Matrices n_k and r_k are computed according to equations H.278 through H.329 given in Appendix H of Part 1.

Input/Output

None

Argument List

NUM	An integer scalar defining the length of the ECT record
FFDB	A real array for matrix F _{Fg}
FFDB1	A real array for matrix F_{Fg-1}
GFB	A real array for matrix $G_{f_{a}}$
GFB1	A real array for matrix G_{f_R-1}
RSR	A real array for matrix rg
FBF	A real array for matrix \bar{F}_K
DO	A real array for matrix Do
RNK	A real array for matrix n _k
RRK	A real array for matrix r _k

Labeled Common

LIMITS, NDICES, CRRAYS

Subroutines Called

MLTMAT, NKRK, TRNMLT

Error Detection

SUBROUTINE CHKOUT

This routine prints intermediate data during the execution of the fictitious force and deformation module.

Algorithm .

Depending on the value of the argument ICASE, control is transferred to a section of code which sets the first location of the array partition to be printed and the row/column dimensions of the partition. Appropriate title information is also set.

Control is then transferred to one of three calls to routine MATPRT to print the partition from one of three arrays.

Input/Output

Data to be printed is written to file 6.

Argument List

ICASE

An integer scalar defining which data is to be printed

B

A real array of intermediate data

Labeled Common

CRRAYS, FICNDX, NDICES, LIMITS

Subroutines Called

MATPRT

Error Detection

SUBROUTINE CHKPNT

This routine prints intermediate data at selected points during the execution of routine PREBAL.

Algorithm.

Routine PREBAL calls this routine at selected check points during its execution. At each point, selected intermediate data is printed using routine PLØP. Logic is provided to control printing at each point using array KPRNT which is initialized in a DATA statement. Printing takes place at each point only if the corresponding value in array KPRNT is non-zero. Also, all printing can be suppressed by making KPRNT (15) equal to zero.

Input/Output

All printed output is written on file 6.

Argument List

- I An integer scalar defining the element number for which data is being printed
- J An integer scalar defining the checkpoint for which data is being printed

Labeled Common

NDICES, LIMITS, TAPES, LPEM

Subroutines Called

PLØP

Error Detection

SUBROUTINE EDGUNY

This routine calculates the edge vectors of an element from the joint coordinate data.

Algorithm

Repeated constants are calculated and the number of edges for the element type that is under consideration is set. The joint pairs that determine an edge vector are set and the corresponding edge vector is calculated from the coordinates. This is done for one edge for a bar, the 4 edges of a membrane and the edges associated with joints 1, 2, 3 and 4 of a cell. If the element is a cell, then the basic edge calculations just obtained are copied into the next 12 memory locations, rather than recalculated for the other surface. Using the cell thickness data developed in subroutine GEØM, the complete edge vector calculations are performed for all edges and stored in variable array EDGV.

For all element types the edge unit vectors are calculated and stored in variable array UNV.

Input/Output

Error messages, if any, are written to file 6.

Argument List

IECREC An integer array for the ECT table record for the element under consideration

Constactation

NUM An integer scalar defining the number of words in the ECT record

Labeled Common

FICHDX, GEØMS

Subroutines Called

Error Detection

Testing is performed to detect zero edge lengths. If found, a diagnostic is written to that effect, the variable IERRØR is set to 1 and control is returned to the calling routine GEDM.

the stored in AliMil and AliMilky respectively.

SUBROUTINE EIGSØL

This routine assembles the A matrix, solves for all eigenvalues and eigenvectors, and computes the modal response.

Algorithm

Input to EIGSØL are the core resident transformed modal stiffness, damping, decomposed mass, and loads matrices \bar{K} , \bar{C} , \bar{M}^{-1} , and \bar{P} , respectively. Also input for all iterations other than the first are the equivalent loads derived from fictitious force and deformation effects computed by routine FIFDEF which are also core resident. Output from EIGSØL are the modal displacements, velocities, and accelerations, $\delta\bar{\Delta}$, \bar{v} , and $\dot{\bar{v}}$, respectively. The equations for solution of the modal response are given in Appendix H of Part 1 (H.161 through H.175).

First, the load variation constants, ω_p , c_p , and c_f are computed. The modal loads \bar{P} and the incremental equivalent loads $\delta P_{(f)}$ are scaled by c_p and c_f , respectively. Routine NEWKC is invoked to form matrix K_C and its inverse. The real and imaginary parts of $\delta \bar{\Delta}_C$ and $\delta \bar{\Delta}_f$ are then computed and stored in A(IKBL) and A(IKBLX), respectively.

The A matrix is then assembled and all eigenvalues, λ , and eigenvectors, H, are computed by routine RGEIG. The eigenvectors are written to N8 before being inverted by routine JØRDAN.

The modal response equations are then solved for $\delta\bar{\Delta}$, \bar{v} , and \bar{v} . During these computations, the eigenvectors are read from N8 where they had been temporarily stored.

Input/Output

The eigenvectors H are written to file N8 and are subsequently read back into core.

Argument List

B A real array for the A matrix

X A real array for the eigenvectors

M An integer scalar defining the order of the problem

N An integer scalar equal to M/2

Labeled Common

NDICES, LIMITS, TAPES

Subroutines Called

CCMULT, CRMULT, JØRDAN, NEWKC, PLØP, READA, RGEIG, SMULT, SYMFIL, SYMSØL, VDMULT, WRITE, XPØNNT

Error Detection

SUBROUTINE FIFDEF

This routine is the driver routine for the module that generates the elemental fictitious force and deformation matrices based on linear incremental displacements and average geometry (equations H.181 through H.331 in Appendix H of Part 1).

<u>Algorithm</u>

Pointers are identified for those matrices stored in blank common array A and initialization is performed.

For each element of the structure the following processing steps are performed. The ECT table record is read from file N12. If the element has failed, then the next element is read. Matrices \bar{P}_{UF} , F_{F} and DK are read from files N11, N13, and N6 respectively. Matrix \bar{k} is also read from N6. Processing parameters are set for the element type; bar, membrane or cell. δ_{eL} and δ_{eL} are then calculated. The element deformations flag is set to zero, meaning that deformations will not be added to the core resident joint coordinates. The element geometry is calculated by routine GEGM relative to the joint coordinates at the beginning of the increment.

The variable BETBAR, which indicates whether this is the second iterative solution to account for material nonlinearity, is then tested. This test and the processing initiated when BETBAR is true are part of the original design and are no longer applicable. This is also true regarding the test and processing associated with the variable HEAT which is the option of accounting for damping energy converted to heat during impact.

Matrix $FK_{\beta-1}$ is read from file N6 and, if not the first iteration for geometric nonlinearity, the element forces due to fictitious deformations are read from file N30. The final element forces $\bar{F}_{K_{\beta}}$ for this iteration are then computed. If this is the last iteration, processing should end here. This would avoid the regeneration of fictitious forces and deformations for the last iteration. Appropriate testing and transfer instructions should be inserted in the code.

Matrices $F_{\overline{F}}$, G_f , D_o , and D_f are then calculated based on the final element forces and the geometry at the beginning of the increment. This data is written to file N3. Code should be inserted here to avoid regeneration of this data for iterations other than the first. The data stored on file N3 should be read and re-used.

The geometry is then temporarily updated according to δ_e , the element displacements, and matrices F_F^{\pm} , G_f , and F_f generated for the new geometry. The average of these matrices for new and old geometry is computed. From the average matrices, the fictitious element deformations δ_e^{\pm} are computed as are the n_k and r_k coefficients. Finally, the equivalent applied loads for fictitious force and deformation effects s_k and t_k , respectively, are computed.

If this is not the last iteration for geometric nonlinearity, the element forces due to fictitious deformations are computed and written to file N31. If it is the last iteration, the final element forces and deformations and velocities computed earlier are written to files N5 and N7, respectively.

This ends the processing for an element. Control is transferred to the beginning of this loop to process the next element.

Input/Output

The matrices are read or written as indicated below

 \bar{P}_{UF} read from N11 \bar{F}_{B-1} read from N13 ECT read from N12 \bar{F}_{K} written on N5 DK,k,FK read from N6 $\bar{s}_{F_{K_f}}$ (old) read from N30 $\bar{s}_{F_{K_f}}$ (new) written on N31 se,se written on N7

Intermediate data is printed on file 6.

Argument List

NFFINC An integer scalar defining the iteration number

NFFMAX An integer scalar defining the maximum number of iterations

N30 An integer scalar defining the input file for $\delta \bar{F}_{K_{\mathbf{f}}}$

N31 An integer scalar defining the output file for δF_{K_f}

Labeled Common

LIMITS, NDICES, TAPES, FICNDX, GEØMS, CRRAYS

Subroutines Called

ABSYM, ASYMB, AVRAGE, CHGSGN, CØPY, GEØM, LPBFIC, LPCFIC, LPMFIC, MLTMAT, MULT, PBARUF, READA, READM, TMULT, WRITE, WRITEM

Error Detection

SUBROUTINE FORMAT

This routine outputs matrices \bar{K} , \bar{C} , and \bar{M} in a format consistent with FØRMAT master input/output tapes.

Algorithm

The core resident matrices K, C, and M, which are stored in upper triangular row-wise form, are assembled in full form using routine SYMFIL. Each is then output to file 19 as FØRMAT matrix data.

This routine was used in the early stages of program development and is no longer required nor called by the final version of the program.

Input/Output

A FØRMAT matrix tape is generated on file 19 containing matrices \bar{K} , \bar{C} , and \bar{M} .

Argument List

None

Labeled Common

NDICES, LIMITS

Subroutines Called

CHGSGN, SYMFIL, WRITE

Error Dectection

SUBROUTINE GEOM

This routine stores the joint coordinates for an element and, conditionally, adds element deformations. Thickness vectors are calculated for cell elements and edge and unit vectors are calculated for all elements.

Algorithm

The element joint coordinates are accessed in the coordinate table and stored in array COORD. The deformation flag IDEFRM is checked and, if equal to one, the element displacements are added to the joint coordinates. If the element is a cell, then the cell thicknesses are calculated, and subsequently, the cell thickness differentials.

For any element type, routine EDGUNV is called to determine the edge and unit vectors.

Input/Output

None

Argument List

NUM An integer scalar defining the number of words in the ECT record,

used to determine element type

IDEFRM An integer scalar flag for deformations

REC A real array for storage of the element ECT table

Labeled Common

GEØMS, FICNDX, NDICES

Subroutines Called

EDGUNV

Error Detection

SUBROUTINE IMBAL

This routine computes the stresses and strains of each element and writes the element forces, stresses, and strains to the master output file.

Algorithm .

First, the logical variable BETABAR is tested to determine if this is the second iterative solution due to material nonlinearity. This test and the processing it initiates, as well as other tests and processing related to BETABAR equal true, are part of the original design and are no longer required.

The cumulative transformed applied loads $\bar{P}_{(\phi)U}$ are then augmented with their incremental component. The equilibrium imbalance $\delta \bar{P}_U$ is then computed. The subsequent test of the imbalance to check the solution is part of the original design and is no longer required.

The modal response consisting of $\bar{\Delta}$, $\delta\bar{\Delta}$, \bar{v} , \bar{v} , $P_{(\phi)U}$, and $\delta\bar{P}_U$ is then assembled and is output as a column matrix with the name RESPNS and a subscript equal to the increment number.

A loop is then entered whose index is the number of element types. Control flags are then set according to element type. The elements types are processed in the order bars, membranes, and cells. If elements of a given type exist in the model, a second inner loop is entered whose index is the number of elements of that type.

A matrix is written to the master output file for each element type that exists in the model. The following operations are performed for each element in the inner loop.

Read $\sigma_{\overline{F}}$, ε_{σ} , \overline{F}_{K} , $\varepsilon_{\beta-1}$ and $\delta \overline{F}_{K}$ from scratch files $\sigma = \sigma_{\overline{F}} \overline{F}_{K}$ for bars and membranes

or

$$\sigma = \sigma_{S\sigma} \sigma_{F} F_{K}$$
 for cells

$$\varepsilon = \varepsilon_{\beta-1} + \varepsilon_{\sigma} \sigma_{\overline{F}} \delta_{K}$$

Write \vec{F}_{K} , σ , and ϵ to master output file

The element forces, stresses, and strains are arranged in that order into a single column of the output matrix for each type of element. The matrix names used for the three element types are BARS, MEMBRN, and CELLS. Each is subscripted with the increment number.

After processing all elements, external files are positioned and appropriate files are flip flopped according to the original design.

Input/Output

The following matrix data is read and written during IMBAL:

σ̄, δ̄K	read from	N6
F _K	read from	N5
ε _σ	read from	N16
[€] β-1	read from	N9
€ _B	written to	N10

The modal response and element forces, stresses, and strains are written to the master output file N20.

Argument List

DBLL A real array for the cumulative modal displacements $\bar{\Delta}$

Labeled Common

NDICES, LIMITS, TAPES

Subroutines Called

ABSYM, ADD, ASYMB, HALT, MULT, PLØP, READA, READM, SYMABT, WRITEM, ZERØ

Error Detection

Error conditions are tested for when BETABAR equal true but these tests are no longer applicable.

SUBROUTINE LPBFIC

This routine calculates the geometric and force matrices for fictitious force and deformation effects from bar elements.

Algorithm

Matrices G_f , \bar{F}_{f1} and $F_F^{=}$ are computed according to equations H.181 through H.192 given in Appendix H of Part 1. Input consists of geometric data in labeled common block GEØMS and the element forces \bar{F}_K .

Input/Output

None

Argument List

FFBB	A	real	array	for	matrix	FF
GF					matrix	
FBF					matrix	
FB					matrix	-

Labeled Common

GEØMS

Subroutines Called

None

Error Detection

SUBROUTINE LPBG

This routine regenerates matrices $F_{\overline{F}}$ and $\sigma_{\overline{F}}$ for bar elements.

Algorithm

Using the joint coordinate table stored in array U and the element definition stored in labeled common LPEM, this routine forms matrices $F_{\overline{F}}$ and $\sigma_{\overline{F}}$ as follows (array dimensions appear on the left):

$$(3 \times 1) \qquad \overline{a} = \frac{\overline{pq}}{|\overline{pq}|}$$

(7 x 2)
$$F_{\overline{F}} = \begin{bmatrix} -a_x \\ -a_y \\ -a_z \end{bmatrix}$$

$$\begin{bmatrix} a_x \\ a_y \\ a_z \\ 1.0 & -1.0 \end{bmatrix}$$

$$(1 \times 2) \qquad \sigma_{\overline{F}} = \left[\frac{1}{2A} \left| \frac{1}{2A} \right| \right]$$

Input/Output

None

Argument List

U A real array of joint coordinates

FFBAR A real array for matrix FF

SIGFB A real array for matrix of

Labeled Common

LPEM

Subroutines Called

VECT

Error Detection

SUBROUTINE LPCFFB

This routine regenerates matrix FF for a cell element.

Algorithm

This routine regenerates matrix F_F in a manner identical to routine LPCFFB in the Initial Generator (see Appendix B). The coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

FFBAR

A real array for matrix FF

HØLD

A real array for intermediate storage

Labeled Common

LPEM

Subroutines Called

None

Error Detection

SUBROUTINE LPCFIC

This routine calculates the geometric and force matrices for fictitious force and deformation effects from cell elements.

Algorithm

Matrices D_0 , G_f , \bar{F}_f , r_r' , and F_F^{\pm} are computed according to equations H.225 through H.277 given in Appendix H of Part 1. Input consists of geometric data in labeled common block GEØMS and the element forces \bar{F}_K .

Input/Output

None

Argument List

FFBB	A	real	array	for	matrix	FF
RR	Α	real	array	for	matrix	rr
GF					matrix	
FBF					matrix	•
DO	Α	real	array	for	matrix	Do
FB	Α	real	array	for	matrix	FK

Labeled Common

GEØMS

Subroutines Called

VECT

Error Detection

SUBROUTINE LPCG

This routine computes geometric data and panel K factors for a cell element.

Algorithm

This routine computes all geometric data and panel K factors in a manner identical to routine LPCG in the Initial Generator (see Appendix B). It does not, however, compute element volume and mass. Otherwise, the coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

U

A real array of joint coordinates

Labeled Common

LPEM

Subroutines Called

VECT

Error Detection

SUBROUTINE LPCSFB

This routine regenerates matrix σ_{F}^{-} for a cell element.

Algorithm .

This routine regenerates matrix σ_F^- in a manner identical to routine LPCKC in the Initial Generator (see Appendix B). It does not, however, compute the stiffness matrix. Otherwise, the coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

SFBAR

A real array for matrix $\sigma_{\vec{F}}$

JHØLD

An integer array for intermediate storage

Labeled Common

LPEM

Subroutines Called

None

Error Detection

SUBROUTINE LPMFFB

This routine regenerates matrix $F_{\overline{F}}$ for a membrane element.

Algorithm

This routine regenerates matrix F_F in a manner identical to routine LPMFFB in the Initial Generator (see Appendix B). The coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

FFBAR

A real array for matrix F_F

HØLD

A real array used for temporary storage

Labeled Common

LPEM

Subroutines Called

None

Error Detection

SUBROUTINE LPMFIC.

This routine calculates the geometric and force matrices for fictitious force and deformation effects from membrane elements.

Algorithm.

Matrices D_0 , G_f , F_f , r_r , and F_F^{\pm} are computed according to equations H.193 through H.224 given in Appendix H of Part 1. Input consists of geometric data in labeled common block GEØMS and the element forces F_K .

Input/Output

None

Argument List

FFBB	A real	array	for	matrix	FF
RR	A real	array	for	matrix	rr
GF	A real	array	for	matrix	Gf
FBF	A real	array	for	matrix	Ff
DO	A real	array	for	matrix	Do
FB	A real	array	for	matrix	FK

Labeled Common

GEØMS

Subroutines Called

VECT

Error Detection

SUBROUTINE LPMG

This routine computes geometric data and panel K factors for a membrane element.

Algorithm

This routine computes all geometric data and panel K factors in a manner identical to routine LPMG in the Initial Generator (see Appendix B). It does not, however, compute element volume or mass. Otherwise, the coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

11

A real array of joint coordinates

Labeled Common

LPEM

Subroutines Called

VECT

Error Detection

SUBROUTINE LPMSZD

This routine computes the area matrices and the global transform matrices used to compute matrix $\sigma_{\bar{F}}$ for a membrane element.

Algorithm

This routine regenerates matrix σ_F^- in a manner identical to routine LPMSZD in the Initial Generator (see Appendix B). It does not, however, compute the \widetilde{D} matrices. Otherwise the coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

SFBAR

A real array for matrix σ_F^2

Labeled Common

LPEM

Subroutines Called

LPMS1, LPMS2, LPMZ

Error Detection

SUBROUTINE LPMS1

This routine forms matrix $\sigma_{\widetilde{F}}^{\star}$ for a parallelogram membrane element.

Algorithm

This routine regenerates matrix σ_F^2 in a manner identical to routine LPMS1 in the Initial Generator (see Appendix B). The coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

SFBAR

A real array for matrix $\sigma_{\vec{F}}$

Labeled Common

LPEM

Subroutines Called

None

Error Detection

SUBROUTINE LPMS2

This routine forms matrix $\sigma_{\overline{F}}$ for an approximate parallelogram membrane element.

Algorithm

This routine regenerates matrix σ_F in a manner identical to routine LPMS2 in the Initial Generator (see Appendix B). The coding is identical except for common blocks and arguments.

Input/Output

None

Argument List

SFBAR

A real array for matrix $\sigma_{\vec{F}}$

Labeled Common

LPEM

Subroutines Called

None

Error Detection

SUBROUTINE MATPRT

This routine is a matrix print utility routine used by the fictitious force and deformation module.

Algorithm

The matrix to be printed is assumed to be full and real mode. After printing a title line, the matrix is printed row by row.

Input/Output

Matrix data is printed on file 6.

Argument List

TARG	A real array for the matrix to be printed
IRØW	An integer scalar defining the row dimension
ICØL	An integer scalar defining the column dimension
COMENT	An alphanumeric array of descriptive information

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE MLTMAT

This routine performs an incore matrix multiplication.

Algorithm

If a cumulative summation of matrix products is not requested, the product matrix is initialized to zero. The cumulative summation of matrix products is then performed according to

C = C + AB

Input/Output

None

Argument List

С	A real array for the product matrix
Α	A real array for the premultiplier matrix
В	A real array for the postmultiplier matrix
L	An integer scalar defining the usable row dimension of A and C
М	An integer scalar defining the usable column dimension of ${\bf A}$ and the usable row dimension of ${\bf B}$
N	An integer scalar defining the usable column dimension of B and C
MRØW	An integer scalar defining the row dimension of A and C
MC1	An integer scalar defining the row dimension of B and the column dimension of \boldsymbol{A}
MC2	An integer scalar defining the column dimension of B and C
SUM	A logical scalar flag for cumulative summation

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE NEWKC

This routine computes the inverse of the augmented modal stiffness matrix $\bar{\textbf{K}}_{\text{C}}$.

Algorithm

The augmented modal stiffness matrix is formed according to

$$\vec{K}_C = \vec{K} - \omega_p^2 \vec{M} + j \omega_p \vec{C}$$

and routine JØRDAN is called to invert \bar{K}_{C} .

Input/Output

None

Argument List

X	A real array for storing the real and imaginary parts of $\overline{K}_{\overline{C}}$
A	A real array for matrix K
В	A real array for matrix \bar{M}
C	A real array for matrix C
D	A real array used by routine JØRDAN to compute the inverse of \bar{K}_{C}
NG	An integer scalar defining the order of the problem
WW	A real scalar for the load variation constant $\omega_{\rm p}$

WWSQ A real scalar for the square of the load variation constant ω_{D}

Labeled Common

None

Subroutines Called

JØRDAN

Error Detection

None

0

SUBROUTINE NITIAL

This routine performs the initialization steps necessary before entering the incremental solution.

Algorithm

Routine NITIAL performs the first stage of initialization process. First, labeled common block TAPES is initialized with the FORTRAN logical unit numbers to be used for the scratch files. Routine MATIN is then called to read the first master input tape and copy each input matrix to individual scratch files. The input file contains matrices \bar{P}_{UF} , MPT, U_{o} , ECT, m, \bar{k} , \bar{c} , \bar{F}_{F} , σ_{F} , ε_{σ} , \bar{e}_{T} , EVT, and CØNST assembled in a previously executed FORMAT step. Only matrices CØNST and U_{o} remain core resident.

All card input is then read by routine NITIAL consisting of run parameters and incremental time history. The first data card is read with a format (416, 1L1, 216) and contains the following run parameters:

BETA	beginning time interval
NELEMS	total number of physical elements (excludes point mass elements)
NTRVLS .	number of time intervals
NG	number of transformation modes
HEAT	"F", dummy logical control flag
NJTS	number of joints
NWØRK	optional extent of blank common

The array NTRVLS, ascending values of elapsed time, is then read with format (6E12.0) and tested for ascending order.

Using the problem sizing information obtained from the matrix and card input, the process of allocating partitions of the blank common region for each array required in subsequent processing steps is performed. The first location of each of these partitions is stored in labeled common block NDICES.

Next, the cell stress transform, $\sigma_{S\sigma}$, is initialized since it is constant for all cell elements. Routine READK is then called to rewrite matrices \bar{k} , \bar{c} , $F_{\bar{e}}$, ϵ_{σ} , and $\delta \bar{e}_{T}$ in optimum format.

The original joint coordinate data is then read into core from the scratch file where it had been written by routine MATIN. Before exiting NITIAL, various blank common partitions are initialized to zero including those for \vec{v} , \vec{v} , $\delta \vec{P}_U$, $\vec{P}_{(M)U}$, $\delta \vec{P}_{(b)U}$, and $\delta \vec{E}_{CL}$.

Interspersed in the above initialization steps is the setting of problem parameter variables in labeled common block LIMITS.

Some code exists in this routine which was intended for restart capability which is not operational and could be deleted. This code can be identified by a test for BETA not equal to one which implies a restart run.

Input/Ouput

All card input is read from file 5 and all printed output is written to file 6. Card input consists of a single card of run parameters and the incremental time history. Printed output consists of incremental time history and error messages, if any.

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES

Subroutines Called

ASYMB, CHGSGN, MATIN, NDXSET, PLØP, READA, READK, ZERØ

Error Detection

The incremental times are tested for ascending order and, if an error is found, the run is terminated. The available workspace is also tested against that required for the problem and, if insufficient, the run is terminated. Appropriate error messages are printed on file 6 in each case.

SUBROUTINE NKRK

This routine computes the fictitious force and deformation matrices $n_{\rm B}$ and $r_{\rm B}$ for membrane and cell elements.

Algorithm

Matrices n_B and r_B are computed for membrane and cell elements according to equations H.293 through H.324 given in Appendix H of Part 1.

Input/Output

Error messages, if any, are written to file 6.

Argument List

AA	A real scalar equal to the length a
В	A real scalar equal to the length b
SKE	A real scalar equal to the skew angle ϵ
AEO	A real scalar equal to the element deformation e_0
Q	A real scalar equal to the element force f
EBBL	A real array for matrix se
RN	A real array for matrix n _B
RB	A real array for matrix r _B

Labeled Common

LIMITS, FICNDX, CRRAYS

Subroutines Called

None

Error Detection

The sine and cosine of the angle SKE are tested for zero. If true, appropriate error messages are printed, the error flag is set to one, and control returned to the calling routine.

SUBROUTINE ØUTPUT

This routine transcribes certain input data to the master output file.

Algorithm

Input matrices U_0 , $\delta P_{(\phi)}U$, and P_{UPTJ} are written to the master output file as are the input array of problem constants and the card input array of incremental times. Before outputing the array of problem constants, it is augmented with the number of time intervals and number of modes from the card input data.

The FØRMAT tape name and modifier used is TAPE, I and is imbedded in the code. The FØRMAT matrix names and modifiers of the output matrices and their sequence of appearance on the master output file is as follows:

CØNST, 1	Problem constants
TIME, 1	Incremental time history
UZERØ, 1	Original joint coordinates, U
(DPBPHI, 1)	Incremental applied loads, $\delta \bar{P}_{(\phi)}U$
(PBUPTJ, 1)	Modal to joint T degree of freedom transform,

where the names in parenthesis are user defined in a previous FØRMAT step and all others are imbedded in the code.

Input/Output

A FØRMAT matrix data tape is constructed on file N2O and consists of five matrices. File N18 is read to copy two of these matrices.

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES, LPEM

Subroutines Called

READA, WRITE

Error Detection

SUBROUTINE PLOP

This routine prints any real or integer array with specified headings.

Algorithm

First, a title line is printed using a single alphanumeric word of descriptive information and row/column dimensions of the array to be printed. The variable NT is then tested to determine if the array mode is real or integer. Real arrays are then printed row-wise at 5 values per line while integer arrays are printed row-wise at 10 values per line.

Input/Output

Printed output is written to file 6.

Argument List

NAME	An alphanumeric scalar for descriptive information
IR .	An integer scalar defining the row dimension of the array
IC	An integer scalar defining the column dimension of the array
A	A real or integer array of data to be printed
NR	An integer scalar defining the row dimension for printing
NC	An integer scalar defining the column dimension for printing
NT	An integer scalar defining whether the array is real or integer mode

Labeled Common

None

Subroutines Called

None

Error Detection

FUNCTION POLSOL

This routine solves a third order polynomial for the modal response correction factor \hat{a} .

Algorithm

In the original theoretical approach, geometric nonlinearity was to be accounted for by scaling the modal response by the correction factor \hat{a} . This is no longer applicable and, in the final version of the code, routine PØLSØL is never referenced.

The polynomial expression was formed in the following manner.

$$\begin{split} & W_{\overline{F}_{kB}} = -\frac{1}{2} \delta \overline{\Delta}_{L_{\beta}}^{T} s_{k\beta} & k = 1, 2, 3 \\ & W_{f_{kB}} = -\frac{1}{2} \delta \overline{\Delta}_{L_{\beta}}^{T} t_{k\beta} & k = 1, 2 \\ & \delta \overline{E}_{ML\beta} = \frac{1}{2} (\overline{v}_{L_{\beta}}^{T} \overline{M} \overline{v}_{L_{\beta}} - \overline{v}_{\beta-1}^{T} \overline{M} \overline{v}_{\beta-1}) \\ & \delta \overline{E}_{CL\beta} = \frac{\tau B}{2} (\overline{v}_{\beta-1}^{T} \overline{C}_{\beta-1} \overline{v}_{\beta-1} - \overline{v}_{L\beta}^{T} \overline{C}_{\beta-1} \overline{v}_{L\beta}) \\ & \delta \overline{E}_{KLB} = \frac{1}{2} \delta \overline{\Delta}_{L\beta}^{T} \overline{K}_{\beta-1} \delta \overline{\Delta}_{L\beta} \\ & \delta \overline{E}_{L\beta} = \delta \overline{E}_{ML\beta} + \delta \overline{E}_{CL\beta} + \delta \overline{E}_{KL\beta} \\ & \Omega_{0_{\beta}} = - \delta \overline{E}_{L\beta} \\ & \Omega_{1_{\beta}} = \delta \overline{E}_{L\beta} + W_{\overline{F}1\beta} + W_{f1\beta} \\ & \Omega_{2_{\beta}} = W_{\overline{F}2\beta}^{T} + W_{f2\beta} \end{split}$$

$$\Omega_{0_{\beta}} + \Omega_{1_{\beta}} \hat{a}_{\beta} + \Omega_{2_{\beta}} \hat{a}_{\beta}^{2} + \Omega_{3_{\beta}} \hat{a}_{\beta}^{3} = 0$$

This expression was then solved for the positive value closest to unity.

Input/Output

Intermediate data and \hat{a} are printed on file 6.

Argument List

EBCL A real scalar equal to $\delta \overline{E}_{CL}$

Labeled Common

NDICES, LIMITS

Subroutines Called

ASYMB, MULT, RGEIG, SMULT, ZERØ

Error Detection

SUBROUTINE PREBAL

This routine permanently updates joint coordinates and regenerates matrices $F_{\overline{F}}$ and $\sigma_{\overline{F}}.$

Algorithm

Initialization steps include file positioning, calling routine PREBLL to allocate space for intermediate data, and setting control flags. The modal response is then scaled by the correction factor \hat{a} . This step was part of the original design and is no longer required. The transformed modal inertia forces $\bar{P}_{(M)U}$ are then computed.

A loop is then entered whose index is the number of physical elements in the model. The first processing step within the loop is the reading of the ECT record for the element from file N12. The record length is tested to determine element type and appropriate control flags are set accordingly.

A test is then made to determine if the element has failed in a previous increment by examining the value of A(KDEBCL). This is part of the original design for material nonlinearity and is not required.

A test is then made on logical variable BETABAR to detect a second iterative solution due to material nonlinearity. This test as well as others appearing within this loop is no longer applicable. The same is true of the processing initiated when BETABAR is true.

The incremental element displacements and velocities, δe and $\delta \dot{e}$, are read from file N7. The scaling of the matrices by \hat{a} is part of the original design and is no longer necessary.

Routine PBARUF is then called to read matrices \bar{P}_{UF} and \bar{F}_{B-1} for the element from files N11 and N13, respectively. Routine PREBGM is called to

permanently update geometry using the ECT array and matrix δe and to regenerate matrices $F_{F_{\beta}}$ and σ_{F} . Matrix D is then computed for the new geometry.

The element stiffness, damping, and thermal deformation matrices are read from N1 and the element forces previously computed by routine FIFDEF, are read from file N5. The contribution of the element to $\bar{P}_{(C)U}$ is then computed. The incremental element forces are then computed from \bar{F}_{K} and $\bar{F}_{K_{B-1}}$ read from file N4. After this, the element contribution to matrix $\bar{P}_{(K)U}$ is computed.

Finally, matrix $F_{F_{\beta}}$ is output to file N14, matrices σ_{F} and δF_{K} are output to file N6, and matrix D is output to file N19.

This ends the element processing loop. The final processing step consists of positioning files and equating files N1 and N2 and files N16 and N17. This is done because matrices \bar{k} , \bar{c} , $\delta \bar{e}_T$, and ϵ_T are now assumed constant. In the original design, these files were rewritten and "flip flopped" at each increment since these matrices may be regenerated due to material nonlinearity.

Interspersed in the code of this routine are calls to routine CHKPNT. This routine prints preselected intermediate data at the specified points for program debugging.

Input/Output

The following data is read and written during the execution of PREBAL:

			•
P _{UF} ECT	read	from	N11
ECT	read	from	N12
k, c, set	read	from	NI
FF _{B-1}	read	from	N13
5-1			

FK ₈₋₁	read from	N4
FKB	read from	N5
	read from	N7
FFB	written to	N14
D	written to	N19
σF, δFK	written to	N6

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES, LPEM

Subroutines Called

ADD, ASYMB, CHGSGN, CHKPNT, CØPY, MULT, PBARUF, PREBGM, PREBLL, READA, READM, SMULT, TMULT, WRITE, WRITEM, ZERØ

Error Detection

SUBROUTINE PREBGM

This routine controls the updating of joint coordinates and regeneration of matrices $F_{\overline{F}}$ and $\sigma_{\overline{F}}$ for an element.

Algorithm .

Routine PREBGU is called first to permanently update joint coordinates. The length of the ECT record is then tested to determine element type and appropriate routines are called to regenerate F_F and σ_F based on the new geometry.

Input/Output

None

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES, LPEM

Subroutines Called

LPBG, LPCFFB, LPCG, LPCSFB, LPMFFB, LPMG, LPMSZD, PREBGU, ZERØ

Error Detection

SUBROUTINE PREBGU

This routine permanently updates joint coordinates and assembles element parameters from array A(IECT).

Algorithm

The length of the ECT record is tested to determine element type and a transfer made to the appropriate code. Specific data for each type element is extracted from array A(IECT) and stored in array JM in labeled common block LPEM. The data extracted for a bar is the area; for a membrane, the thickness and stress orientation angle; and for a cell, the stress orientation angle. The number of joints for the element type is also set in this section of code.

A loop is then entered whose index is the number of joints defining the element. Within this loop, the joint numbers of the joints defining the element are also stored in array JM and are used together with the element displacements to update the joint coordinates. Array A(LU) is used to flag each joint as it is updated since more than one element may be connected to a joint and each joint need be updated only once.

Input/Output .

None

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES, LPEM

Subroutines Called

Error Detection

SUBROUTINE PREBLL

This routine allocates partitions in array A in blank common for temporary use by routine PREBAL.

Algorithm |

Three indices for partitions of length 30, 30, and 240 are determined and stored in labeled common block LPEM. The partitions are contiguous and begin at A(ISK).

All additional code in this routine is no longer applicable since it is based on the original theoretical approach using \hat{a} .

Input/Output

In the obsolete code, matrices δe and $\delta \dot{e}$ were computed and written to file N7.

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES, LPEM

Subroutines Called

CHGSGN, PBARUF, TMULT, WRITEM

Error Detection

SUBROUTINE PREBST

This routine controls the updating of element stiffness and damping.

Algorithm

This routine was intended to be the executive routine for the element stiffness and damping updating module. The design would provide for calls to other routines to test the change in temperature and stress/strain state of the element since last update. If necessary, other routines would be called to regenerate material properties, matrices k and c, and update the EVT table.

This routine currently performs no operations other than setting two logical flags false which were intended to indicate element failure and element updating. In the final version of the code, this routine is never referenced.

Input/Output

None

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES, LPEM

Subroutines Called

None

Error Detection

SUBROUTINE PREEIG

This routine generates the transformed modal matrices, \bar{K} , \bar{C} , \bar{M} , and \bar{P} .

Algorithm

Incremental solution processing begins with the execution of routine PREEIG. First, the transformed incremental applied loads for the increment, if any, are read from file N18. The matrix of transformed loads \bar{P} is then partially assembled according to

$$\bar{P} = \delta \bar{P}_U - \bar{P}_{(M)U} + \delta \bar{P}_{(\phi)U}$$

where $\delta \bar{P}_U$ are the unbalanced forces from the previous increment, $\bar{P}_{(M)U}$ are the inertia forces from the previous increment, and $\delta \bar{P}_{(\phi)U}$ are the applied loads.

A loop is then entered whose index is the number of elements in the structural model. The following operations are performed for each element.

Read \bar{k} , \bar{c} , and $\delta \bar{e}_T$ from file N1 $\delta \bar{F}_{KO} = -\bar{k} \delta \bar{e}_T$ Read D from file N3 (D = $\bar{P}_{UF} F_F^{-}$) $\bar{P} = \bar{P} + D \delta \bar{F}_{KO}$ DK = D \bar{k} $\bar{K} = \bar{K} + DK D^T$ $\bar{C} = \bar{C} + D \bar{c} D^T$ Read \bar{F}_K from file N4 FK = $\bar{F}_K + \delta \bar{F}_{KO}$ Write DK, \bar{k} and FK to file N6 Write $\delta \bar{F}_{KO}$ to file N15 The last step in this sequence, writing δF_{KO} to file N15 is part of the original design code and is not presently required.

After all bars, membranes, and cell elements have been processed, the assembly of the transformed loads is completed by subtracting the modal damping forces of the previous increment $\bar{P}_{(C)U}$ from the partially assembled loads \bar{P} .

The sequence of operations above is slightly different on the initial pass for the first increment. Matrix D is computed from matrices P_{UF} and \bar{F}_F read from files N11 and N13, respectively, and then matrix D is written to file N3. Matrix \bar{F}_K , the element forces from the previous increment, is initialized to zero rather than read from file N4. Matrix M is computed according to

$$\bar{M} = \bar{M} + \bar{P}_{UF} m \bar{P}_{UF}^T$$

where M is implicitly initialized to zero as are K and C in the sequence above. After all bar, membrane, and cell elements have been processed, routine PTMASS is called by PREEIG to add contributions from point mass elements, if any, to matrix M. Finally, any null rows/columns of M are augmented on the diagonal with a value equal to 1×10^{-4} of the root mean square of all non zero diagonal elements of the matrix. Routine CHLSKY is then called to decompose M. The decomposition of this matrix then remains core resident for the remainder of the run.

Input/Output

Intermediate printed output is written to file 6. Matrix data is read and written as follows:

$$\bar{k}$$
, \bar{c} , $\delta \bar{e}_{T}$ read from N1

D read from N3

F

 K_{R-1}

DK, k, FK

written to N6

δFKO

written to N15

Argument List

None

Labeled Common

NDICES, LIMITS, TAPES

Subroutines Called

ABSYM, ADD, ASYMB, CHGSGN, CHLSKY, CØPY, EUTL9, MBAR, MULT, PBARUF, PLØP, PTMASS, READA, READM, SYMABT, WRITE, WRITEM, ZERØ

Error Detection

SUBROUTINE TRNMLT

This routine performs an incore transpose matrix multiplication.

Algorithm

If a cumulative summation of matrix products is not requested, the product matrix is initialized to zero. The cumulative summation of matrix products is then performed according to

$$C = C + A^T B$$

Input/Output

None

Argument List

С	A real array for the product matrix
A	A real array for the premultiplier matrix
В	A real array for the postmultiplier matrix
L	An integer scalar defining the usable row dimension of A and B
М	An integer scalar defining the usable column dimension of B and C
N	An integer scalar defining the usable row dimension of C and the usable column dimension of A
MRØW	An integer scalar defining the row dimension of A and B
MC1	An integer scalar defining the row dimension of C and the column dimension of A
MC2	An integer scalar defining the column dimension of B and C
SUM	A logical scalar flag for cumulative summation

Labeled Common

None

Subroutines Called

None

Error Detection

APPENDIX F

belatel bns cantiupy life to enoticitization belieful internos xivandas atel

POSTPROCESSOR ROUTINES AND LABELED COMMON BLOCKS

resture date to be refresh the very some

APPENDIX F POSTPROCESSOR ROUTINES AND LABELED COMMON BLOCKS

This appendix contains detailed descriptions of all routines and labeled common blocks in this program. Table F gives either page number references within this document or references to other documents for documentation of each routine or labeled common block. Some page number references may be to preceding appendices where the documentation for a routine in this program is identical to a previously documented routine. This does not imply verbatum source code duplication for the routine, only functional duplication is implied.

The detailed description of each routine is divided into the following subheadings:

Algorithm	verbal flow chart of routine logic and data flow
Input/Output	description of all external data set input/output
Argument List	name, type, and description of each argument
Labeled Common	list of all labeled common blocks declared
Subroutines Called	list of all routines called
Error Detection	description of tests made for errors and action taken

The detailed description of each labeled common block is divided into the following subheadings:

Declaration	verbatum declaration of the labeled common block
Contents	name and description of each variable appearing in the declaration
Usage	list of all routines which contain declarations

TABLE F. INDEX TO POSTPROCESSOR ROUTINES AND LABELED COMMON BLOCKS

																					Page
MAIN PROGRAM	PØST .	•					•	•				•	•		•	•		•	•	i	456
LABELED COMMON	INDEX								•												457
LABELED COMMON	PARM .	•	•	•	•	•		•	•		•	•		•		•	•		•	•	459
SUBROUTINE	BARS .																				462
SUBROUTINE	BLKIN																				464
SUBROUTINE	CELLS																				465
SUBROUTINE	CHKIN																				467
SUBROUTINE	CRDIN																				469
SUBROUTINE	EBAR .																				470
SUBROUTINE	ECEL .																		. •		471
SUBROUTINE .	EMEM .																				473
SUBROUTINE	EUTL9																				Ref. 6
SUBROUTINE	INITL																				475
SUBROUTINE	JNTPR																				477
SUBROUTINE	JØINTS																				479
SUBROUTINE	MEMS .																				481
SUBROUTINE	MØDES																				483
SUBROUTINE	PBUPT																				484
SUBROUTINE	PØUT .																				486
SUBROUTINE	SELCT																				487
SUBROUTINE	SKPALL																				489
SUBROUTINE	READC																				490
SUBROUTINE	ZERØ .																				491

MAIN PROGRAM PØST

This routine calls the initialization routine and the increment processing routine.

Algorithm

The FØRTRAN logical unit numbers of the three devices used and the maximum number of lines and columns per page are initialized in DATA statements.

The initialization routine INITL is called first followed by the call to the increment processing routine PØUT.

Input/Output

Error messages are output to unit 6.

Argument List

None

Labeled Common

PARM, INDEX

Subroutines Called

INITL, POUT

Error Detection

If an error occurs in either routine called, an error message is printed with the error number; i.e.,

**** ERROR nnnnn DETECTED ****

LABELED COMMON INDEX

This common block is used to store pointers into blank common array A which are the beginning locations of partitions of array A and to store other program parameters.

<u>Declaration</u>

```
CØMMØN / INDEX / ITTT ,ITIM ,ICØR ,IPRN ,IRED ,IINC ,ISEL ,IELEM ,IBLHD ,IMLHD ,ICLHD ,IBLPR ,IMLPR ,ICLPR ,IPBUPT,IEND ,ICLMAX,ILNMAX,ILINE ,IRØW ,ICØL ,ITP1 ,ITP2 ,ITP3 ,ITVLS ,IERROR,IFLGPR,IINDEX
```

Contents

ITIT	Index of array A for title information
ITIM ·	Index of array A for incremental times
ICØR	Index of array A for joint coordinates
IPRN	Index of array A for print buffer
IRED	Index of array A for input record buffer
IINC	Index of array A for increment selection table
ISEL	Index of array A for joint/element selection tables
IELEM	Index of array A for element numbers for printing
IBLHD	Index of array A for bar element line headers
IMLHD	Index of array A for membrane element line headers
ICLHD	Index of array A for cell element line headers
IBLPR	Index of array A for bar element print line flags

IMLPR	Index of array A for membrane element print line flags
ICLPR	Index of array A for cell element print line flags
IPBUPT	Index of array A for matrix PBUPT partition
IEND	Index of array A of last word used
IFLGPR	Intermediate print flag for check out
ICLMAX	Maximum number of printed columns per page
ILNMAX	Maximum number printed lines per page
ILINE	Number of last line printed on a page
IRØW	Number of lines printed for type of element currently printing
ICØL .	Number of columns on page currently being printed
ITP1	Number of unit which is used to store joint/element selection tables
ITP2	Number of unit where incremental solution output resides
ITP3	Number of unit used to store selected partitions of matrix PBUPT
ITVLS	Number of current BETA being processed
IERRØR	Main error flag
IINDEX	Number of words in common block INDEX

Usage

Labeled common block INDEX together with labeled common block PARM and blank common are used as a group by all principle routines.

LABELED COMMON PARM

This common block is used to store model definition data and program generated print control parameters.

Declaration

COMMON / PARM / NJTS ,NCNTS , NMATS ,NBARS ,NMEMS ,NCELS ,NPTMS
NFDØF ,NMØDS , NLDJTS,NØBRC ,ABTMP ,AMCHT ,NMCØF
NMWRD ,NMLNG , NMLNGM,ASTCØF,ACMCØF,NTVLS ,ADSPCF
NSELI ,NSELJ , NSELB ,NSELM ,NSELC ,NPRJC ,NPRJD
NPRJV ,NPRJA , NPRMD ,NPRMV ,NPRMA ,NPRBF ,NPRBS
NPRBSS,NPRBE , NPRMF ,NPRMS ,NPRMSS,NPRME ,NPRCF
NPRCS ,NPRCSS ,NPRCE ,NPARM

Contents

NJTS Number of joints NCNTS Number of constraints **NMATS** Number of materials **NBARS** Number of bars Number of membranes **NMEMS** NCELS Number of cells **NPTMS** . Number of point mass elements NEDØF Number of edge degrees of freedom NMØDS Number of modes NLDJTS Number of loaded joints NØBRC Number of oblique constraints **ABTMP** Base temperature **AMCHT** Mechanical equivalent of heat NMCØF Number of coefficients in the material property table Number of descriptive words in material property tables NMWRD NMLNG Number of words in material property record

NMLNGM Number of words in all material property records

ASTCOF Cell stiffness cutoff coefficient

ACMCØF Bar compliance suppression coefficient

NTVLS Number of time intervals

ADSPCF Joint displacement scalar

NSELI Selectivity flag for increments

NSELJ Selectivity flag for joints

NSELB Selectivity flag for bars

NSELM Selectivity flag for membranes

NSELC Selectivity flag for cells

NPRJC Print option flag for joint coordinates

NPRJD Print option flag for joint displacements

NPRJV Print option flag for joint velocities

NPRJA Print option flag for joint accelerations

NPRMD Print option flag for modal displacements

NPRMV Print option flag for modal velocities

NPRMA Print option flag for modal accelerations

NPRBF Print option flag for bar forces

NPRBS Print option flag for bar stresses

NPRBSS Print option flag for bar strains

NPRBE Print option flag for bar equivalent stresses

NPRMF	Print option flag for membrane forces
NPRMS	Print option flag for membrane stresses
NPRMSS	Print option flag for membrane strains
NPRME	Print option flag for membrane equivalent stresses
NPRCF	Print option flag for cell forces
NPRCS	Print option flag for cell stresses
NPRCSS	Print option flag for cell strains
NPRCE	Print option flag for cell equivalent stresses
NPARM	Number of words in common block PARM

Usage

Labeled common block PARM together with labeled common block INDEX and blank common are used as a group by all principle routines.

SUBROUTINE BARS

This routine prints selected bar element data.

Algorithm

If no bar data exists, control is returned to the calling routine. If bar data exists but none has been requested for printing, the bar data on input tape ITP2 is read over and control returned to the calling routine.

If bar data exists and is to be printed, the bar selection table is read from scratch tape ITP1 into array A at location ISEL. The bar data is then read from input tape ITP2 one element at a time and stored in array KPRN. The element selection table is checked for the bar being processed and, if not selected, data for the next bar is read from the input tape.

The element number is stored for use as a heading on the column of KPRN when it is printed. The counter for number of columns of KPRN used is incremented and tested against the maximum number of columns specified for array KPRN which is the maximum number of columns to be printed per page. When array KPRN is full or element data is exhausted on the input tape, the data in array KPRN is printed.

If equivalent stresses are to be printed, routine EBAR is called which augments array KPRN with equivalent stresses. Line counters are checked and appropriate headers are printed using title information from array A at location ITIT, the time increment stored in array A, and the element numbers stored in array A. Using the line selection array and line header array assembled by routine BLKIN, appropriate rows of array KPRN which correspond to print lines are identified and printed with appropriate headers.

Input/Output

The bar element selection table is read from scratch tape ITP1 if appropriate. The bar element data is read from input tape ITP2. Selected bar element data is output to unit 6.

Argument List

An integer array used to store bar element data where each column contains the forces, stresses, strains, and equivalent stresses for an element KPRN

JRØW An integer scalar specifying the row dimension for array

Labeled Common

PARM, INDEX

Subroutines Called

EBAR, READC'

Error Detection

SUBROUTINE BLKIN

This routine initializes the element line header and print flag arrays.

<u>Algorithm</u>

The arrays of names, numbers, and lengths associated with bar, membrane, and cell element printed data are initialized in DATA statements. Using these arrays and the four subset print option flags for each of the three elements, arrays of line headers, KHD, and arrays of line print flags, KPR, are assembled.

Input/Output

None

Argument List

KØPT . An integer array of four print flags for each of three element types

KHD An alphameric array of headers for each line of output for

each of three element types

KPR An integer array of print flags for each line of output

for each of three element types

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE CELLS -

This routine prints selected cell element data.

Algorithm

If no cell data exists, control is returned to the calling routine. If cell data exists but none has been requested for printing, the cell data on input tape ITP2 is read over and control returned to the calling routine.

If cell data exists and is to be printed, the cell selection table is read from scratch tape ITP1 into array A at location ISEL. The cell data is then read from input tape ITP2 one element at a time and stored in array KPRN. The element selection table is checked for the cell being processed and, if not selected, data for the next cell is read from the input tape.

The element number is stored for use as a heading on the column of KPRN when it is printed. The counter for number of columns of KPRN used is incremented and tested against the maximum number of columns specified for array KPRN which is the maximum number of columns to be printed per page. When array KPRN is full or element data is exhausted on the input tape, the data in array KPRN is printed.

If equivalent stresses are to be printed, routine ECEL is called which augments array KPRN with equivalent stresses. Line counters are checked and appropriate headers are printed using title information from array A at location ITIT, the time increment stored in array A, and the element numbers stored in array A. Using the line selection array and line header array assembled by routine BLKIN, appropriate rows of array KPRN which correspond to print lines are identified and printed with appropriate headers.

Input/Output

The cell element selection table is read from scratch tape ITP1 if appropriate. The cell element data is read from input tape ITP2. Selected cell element data is output to unit 6.

Argument List

KPRN

An integer array used to store cell element data where each column contains the forces, stresses, strains, and equivalent stresses for an element

JRØW

An integer scalar specifying the row dimension for array KPRN

Labeled Common

PARM, INDEX

Subroutines Called

ECEL, READC

Error Detection

SUBROUTINE CHKIN

This routine checks the logical consistency of user specified options.

Algorithm

First, a test is made to determine if items of this type exist and, if not, has a selection table been specified.

If no items of this type exist and no selection table is specified, appropriate print flags in labeled common PARM are set to zero, KSEL is set to -10 and IB(K3) is set to -1.

If items of this type exist, a test is made to determine if any subsets of this type were requested for printing. If so, IB(K3) is set to KNUM. If not, KSEL is set to -1 and IB(K3) is set to zero. Then a test is made to determine if a selection table was specified.

Input/Output

None

Argument List

KNUM	An integer scalar specifying the number of items of this type
KSEL	An integer scalar input as the user option flag indicating sets of data of this type $% \left\{ 1,2,\ldots,n\right\}$
к1	An integer scalar indicating the first location in array IB of print flags for this type
K2	An integer scalar indicating the last location in array IB of print flags for this type
К3	An integer scalar indicating the location in array IB of the flag indicating selectivity for this type

IERRØR

An integer scalar main error flag

KØDE

An integer scalar specifying the type to be processed

Labeled Common

None

Subroutines Called

None

Error Detection

Any inconsistency between the existance or non-existance of items of the type being processed, the subset print flags specified, and the selectivity flag specified results in the main error being set to KØDE.

SUBROUTINE CRDIN

This routine reads and processes all card input.

Algorithm

The first six input cards are read and the data stored in labeled common PARM. User over-rides of default parameters are implemented as required.

The next four cards of title information are read and stored in blank common at location ITIT.

Routine SELCT is then called once for each of the following possible input selection tables; increments, joints, bars, membranes, and cells.

Input/Output

All input cards are read from unit 5 and output to unit 6.

Argument List

None

Labeled Common

PARM, INDEX

Subroutines Called

SELCT, ZERØ

Error Detection

Checks are made on the sequence of all input cards and on the size of available storage verses required storage. If any error is detected, the main error flag is set and control is returned to the calling routine.

SUBROUTINE EBAR

This routine computes equivalent stresses for a bar element.

Algorithm

In the case of a bar element, the equivalent stress is equal to the absolute value of the computed stress.

Input/Output

None

Argument List

- S A real array of bar element forces, stresses, strains, and equivalent stresses
- I An integer scalar specifying the row dimension of array S
- J An integer scalar specifying the column dimension of array
 . S or number of elements

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ECEL

This routine computes equivalent stresses for a cell element.

Algorithm.

Two equivalent stresses are computed for each cell element corresponding to the upper and lower surfaces of the element. For each surface, the equivalent stress, σ_e , is computed from the average stresses, σ_x , σ_y , σ_z , τ_{xy} , τ_{yz} , and τ_{zx} , as follows:

$$S_{1} = \frac{1}{3} \left(2\sigma_{x} - \sigma_{y} - \sigma_{z} \right)$$

$$S_{2} = \frac{1}{3} \left(-\sigma_{x} + 2\sigma_{y} - \sigma_{z} \right)$$

$$S_{3} = \frac{1}{3} \left(-\sigma_{x} - \sigma_{y} + 2\sigma_{z} \right)$$

$$S_{4} = \tau_{xy}^{2} + \tau_{yz}^{2} + \tau_{zx}^{2}$$

$$\sigma_{e} = \left[\frac{3}{2} \left(S_{1}^{2} + S_{2}^{2} + S_{3}^{2} + 2S_{4} \right) \right]^{\frac{1}{2}}$$

Input/Output

None

Argument List

- S A real array of cell element forces, stresses, strains, and equivalent stresses
- I An integer scalar specifying the row dimension of array S
- J An integer scalar specifying the column dimension of array S or number of elements

Labeled Common

Subroutine Called

None

Error Detection

SUBROUTINE EMEM

This routine computes equivalent stresses for a membrane element.

Algorithm

The equivalent stress, σ_e , for a membrane element is computed from the average stresses, σ_x , σ_y , and τ_{xy} , as follows:

$$S_{1} = \frac{1}{3} \left(2\sigma_{x} - \sigma_{y} \right)$$

$$S_{2} = \frac{1}{3} \left(-\sigma_{x} + 2\sigma_{y} \right)$$

$$S_{3} = \frac{1}{3} \left(-\sigma_{x} - \sigma_{y} \right)$$

$$\sigma_{e} = \left[\frac{3}{2} \left(S_{1}^{2} + S_{2}^{2} + S_{3}^{2} + 2\tau_{xy}^{2} \right) \right]^{\frac{1}{2}}$$

Input/Output

None

Argument List

- S A real array of membrane element forces, stresses, strains, and equivalent stresses
- I An integer scalar specifying the row dimension of array S
- J An integer scalar specifying the column dimension of array S or number of elements

Labeled Common

None

Subroutines Called

Error Detection

SUBROUTINE INITL

This routine is the driver routine for the initialization module.

Algorithm

After rewinding all tapes, the CØNST array is read from input tape ITP2 and stored in the beginning of labeled common block PARM. Using the problems constants so obtained, core is allocated for each of the required arrays and the first location of each is stored in labeled common block INDEX.

Routine CRDIN is then called to read all card input containing option and selectivity data. The arrays of time increments and original joint coordinates are then read from input tape ITP2 and stored in core.

Tests are then made to determine whether or not data from matrix PBUPT is required. If not, both matrix DBPØ and PBUPT are skipped over on input tape ITP2. If so, only matrix DBPØ is skipped over and then routine PBUPT is called to assemble the required data.

Finally, routine BLKIN is called to initialize element line headers and print flags.

Input/Output

Matrices CØNST, TIME, CØØRDS, DBPØ, and, if appropriate, PBUPT are read from input tape ITP2.

Argument List

None

Labeled Common

PARM, INDEX

Subroutines Called

BLKIN, CRDIN, EUTL9, PBUPT, READC

Error Detection

If the main error flag is returned with a non-zero value from routine CRDIN, control is returned to the main program.

meta bara tera belakta 27 6920 merek etan 182 51 1,7971 mini bara har

SUBROUTINE JNTPR

This routine prints selected subsets of joint data.

Algorithm

Processing is controlled by a loop indexed from one to the number of selected joints. First, the partition of matrix PBUPT for the joint being processed is read from scratch tape ITP3 and stored in array PB. An inner loop indexed from one to the number of subsets to be processed is then entered. A maximum of two subsets can be accommodated by routine JNTPR.

Argument KTYPE(J) is tested to determine which of the four possible subsets of data is to be assembled for printing.

Coordinate data is assembled into array PRN by multiplying the transpose of matrix PBUPT times the modal displacements in array A to obtain joint displacements. These displacements are then scaled by the user input displacement coefficient ADSPCF before being added to the original coordinates to form the final joint coordinates for the increment.

Displacement data is assembled in array PRN in a similar manner as coordinate data except the addition of original coordinates is omitted.

Velocity data is assembled in array PRN by multiplying the transpose of matrix PBUPT times the modal velocities in array A to obtain joint velocities.

Acceleration data is assembled in a similar manner as velocity data using the modal accelerations in array A.

Array PRN is then printed with appropriate headings as a single line of output.

Input/Output

Matrix PBUPT is read from scratch tape ITP3. Joint coordinate, displacement, velocity, and acceleration data are output to unit 6.

Argument List

KITFE	l to 4 corresponding to joint coordinates, displacements, velocities, and accelerations, respectively
KNUM	An integer scalar specifying the number of subsets to be processed
NAME	An alphameric array of subset headings
PB	A real array used to store partitions of matrix PBUPT

KMØDE An integer scalar specifying the number of modes

COORD A real array of original joint coordinates

KJTS An integer scalar specifying the number of joints in the model


Labeled Common

PARM, INDEX

Subroutines Called

None

Error Detection

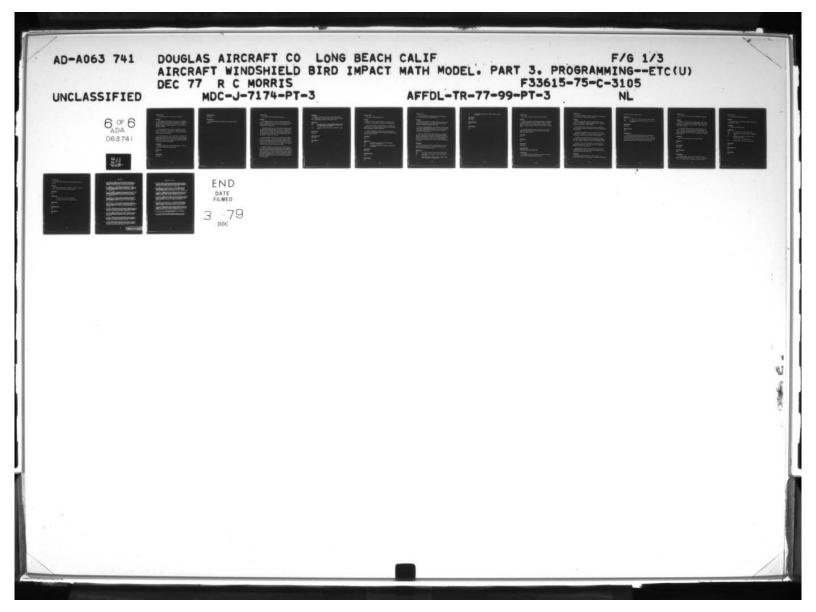

SUBROUTINE JØINTS

This routine processes all joint data for an increment.

Algorithm

Column headers of two words each for each of the four subsets of data are initialized in array KEAD in DATA statements. The header for the first matrix is read from input tape ITP2 and the increment is checked for sequence. The modal response data is then read into core beginning at A(IRED).

The main joint option flag is checked to determine if any joint data is to be printed. If not, control is returned to the calling program. If so, the joint selection table is read from scratch tape ITP1 and stored in core at A(ISEL).

Each of the subset print flags is then checked. The header array NAME and other parameters are set according to the subset print flags. Routine JNTPR is then called to print the first two subsets requested. If more than two subsets were requested, routine JNTPR is called again to print the third and/or fourth subsets.

Input/Output

The modal response data is read from input tape ITP2. The joint selection table is read from scratch tape ITP1.

Argument List

None

Labeled Common

PARM, INDEX

Subroutines Called

JNTPR, READC

Error Detection

The increment number from input tape ITP2 is checked for correct sequence.

Sack of the cabeet print flags is that checked. The header array

Will and other varameters are set according to the subset-of int than

SUBROUTINE MEMS

This routine prints selected membrane element data.

Algorithm

If no membrane data exists, control is returned to the calling routine. If membrane data exists but none has been requested for printing, the membrane data on input tape ITP2 is read over and control returned to the calling routine.

If membrane data exists and is to be printed, the membrane selection table is read from scratch tape ITP1 into array A at location ISEL. The membrane data is then read from input tape ITP2 one element at a time and stored in array KPRN. The element selection table is checked for the membrane being processed and, if not selected, data for the next membrane is read from the input tape.

The element number is stored for use as a heading on the column of KPRN when it is printed. The counter for number of columns of KPRN used is incremented and tested against the maximum number of columns specified for array KPRN which is the maximum number of columns to be printed per page. When array KPRN is full or element data is exhausted on the input tape, the data in array KPRN is printed.

If equivalent stresses are to be printed, routine EMEM is called which augments array KPRN with equivalent stresses. Line counters are checked and appropriate headers are printed using title information from array A at location ITIT, the time increment stored in array A, and the element numbers stored in array A. Using the line selection array and line header array assembled by routine BLKIN, appropriate rows of array KPRN which correspond to print lines are identified and printed with appropriate headers.

Input/Output

The membrane element selection table is read from scratch tape ITP1 if appropriate. The membrane element data is read from input tape ITP2. Selected membrane element data is output to unit 6.

Argument List

KPRN

An integer array used to store membrane element data where each column contains the forces, stresses, strains, and equivalent stresses for an element

JRØW

An integer scalar specifying the row dimension for array KPRN

Labeled Common

PARM, INDEX

Subroutines Called

EMEM, READC

Error Detection

SUBROUTINE MODES

This routine prints selected modal data.

Algorithm

Subset print flags are tested to determine if any modal data is to be printed. If not, control is returned to the calling routine.

Each subset print flag is tested individually and the header and print arrays are initialized accordingly. Headers are stored in array NAME and modal data is stored in array KPRN.

The modal displacements, velocities, and/or accelerations are then printed from arrays NAME and KPRN with appropriate headings according to the subsets specified.

Input/Output

None

Argument List

KPRN An integer array used to store modal displacements,

velocities, and accelerations

JRØW An integer scalar specifying the number of modes or rows

of array KPRN

Labeled Common

PARM, INDEX

Subroutines Called

None

Error Detection

SUBROUTINE PBUPT

This routine assembles selected partitions of matrix PBUPT and writes the resulting data to scratch tape ITP3.

Algorithm

The previously assembled joint selection table is read from scratch tape ITP1 and stored in core. Input tape ITP2 is then positioned immediately following the header for matrix PBUPT.

For each of the selected joints, input tape ITP2 is read and appropriate columns of matrix PBUPT are extracted. When all three columns for a joint have been determined, the partition of PBUPT is written to scratch tape ITP3 as one record.

Since those columns of matrix PBUPT corresponding to constrained degrees of freedom are null, the reading of the input tape includes testing of column number read verses the column numbers associated with the joint being processed. It should be noted also that assembled partitions of matrix PBUPT which are written to scratch tape may contain null columns.

Input/Output

The joint selection table is read from scratch tape ITP1. Matrix PBUPT is read from input tape ITP2. Assembled partitions of matrix PBUPT are written onto scratch tape ITP3.

Argument List

JSEL	An integer array used to store the joint selection table
TEMP	A real array used to temporarily store input columns of matrix PBUPT
РВ	A real array used to assemble the three columns of matrix PBUPT corresponding to a selected joint

KG.

An integer scalar specifying the number of modes or rows of matrix PBUPT

duadus\dubaut

Labeled Common

PARM, INDEX

Subroutines Called

EUTL9

Error Detection

SUBROUTINE POUT

This routine is the driver routine for the print module.

Algorithm

For each time increment, the following takes place. The incremental selectivity flag for the current increment is tested. If equal to zero, this increment is to be bypassed and no data printed. Routine SKPALL is called to read over all data for this increment on input tape ITP2.

If not equal to zero, each of the following routines is called to process the corresponding type data from input tape ITP2; JØINTS, MØDES, BARS, MEMS, and CELLS.

Input/Output

None

Argument List

None

Labeled Common

PARM, INDEX

Subroutines Called

BARS, MEMS, CELLS, JØINTS, MØDES, SKPALL

Error Detection

If the main error flag is returned with a non-zero value from any routine, control is returned to the main program.

SUBROUTINE SELCT

This routine reads selection table input cards, forms the selection table, and writes the table onto scratch tape ITP1.

Algorithm

The input argument KØDE is tested to determine which selection table is to be processed. Processing parameters are then initialized according to which table is to be processed.

Routine CHKIN is then called to check the logical consistency of input options and to return a flag indicating which one of three possible paths to follow.

If the user has requested all items of this type, then no input selection table is expected. The code then generates a selection table requesting all items and writes this table to scratch tape ITP1.

If the user has specified the selectivity option for this type, the program reads the selection table cards and assembles the selection table as so indicated. The table is then written to scratch tape ITP1.

If either no items of this type exist or no items of this are requested for printing, then no input selection table is expected and nothing is written on the scratch tape.

An exception to the above is that in the case of processing the incremental selection table, the resulting selection table is left in core and not written to the scratch tape.

Input/Output

The selection table cards present are read from unit 5. The assembled selection tables for those types so indicated by user specified

options are written to scratch tape ITP1.

Argument List

JSEL An integer array in which the selection table is formed

KØDE An integer scalar identifying which selection table is to

be processed

Labeled Common

PARM, INDEX

Subroutines Called

CHKIN

Error Detection

Checks are made for correct table number on the input cards and that the values specified are within range for this type. A test is also made to insure that a null selection table has not been specified. If any of these errors are detected, the main error flag is set to the appropriate value and control is returned to the calling routine.

SUBROUTINE SKPALL

This routine reads over all data for an increment on input tape ITP2.

Algorithm .

The header of the first matrix for the increment is read from input tape ITP2. The seventh word of the header record is the increment number which is tested against the anticipated increment number to insure proper sequencing.

The input tape contains matrices only for each element type that exists in the model. Therefore, appropriate problem parameters are tested to determine which element types exist. Input tape KTP2 is then read past the number of matrix trailers corresponding to the number of matrices present.

Input/Output

Input tape ITP2 is read past all data for the increment.

Argument List

None

Labeled Common

PARM, INDEX

Subroutines Called

READC

Error Detection

The increment number of the data on input tape ITP2 is tested against the anticipated increment number. If not equal, the main error flag is set to 200 and control is returned to the calling routine.

SUBROUTINE READC

This routine reads a FØRMAT tape record.

Algorithm

The specified tape is read according to FØRMAT convention and the data stored in array A.

Input/Output

One record is read from tape ITAPE.

Argument List

ICOL An integer scalar defining the column number

KØDE An integer scalar indicating expanded or compressed

format

NUM An integer scalar defining the number of words

remaining in the record

A A real array used to store the data read

ITAPE An integer scalar defining the file to be read

Labeled Common

None

Subroutines Called

None

Error Detection

SUBROUTINE ZERØ

This routine changes negative zero values to positive values for printing.

Algorithm

Each value in the input array is tested for a numerical zero and, if so, is set equal to a positive zero integer value.

Input/Output

None

Argument List

K An integer array of values to be processed

N An integer scalar equal to the length of array K

Labeled Common

None

Subroutines Called

None

Error Detection

REFERENCES

- 1. J. P. Cogan, Jr., FORMAT II Second Version of Fortran Matrix
 Abstraction Technique; Volume II, Description of Digital Computer
 Program, AFFDL-TR-66-207, Volume II, Air Force Flight Dynamics
 Laboratory, Wright-Patterson Air Force Base, Ohio, March 1967.
- 2. W. J. Lackey, R. E. Wild, <u>FORMAT II Second Version of Fortran</u>
 <u>Matrix Abstraction Technique; Volume II, Supplement I. Description of Digital Computer Program</u>, AFFDL-TR-66-207, Volume II, Supplement I, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, November 1968.
- 3. C. G. Hooks, FORMAT II Second Version of Fortran Matrix Abstraction Technique; Volume II, Supplement II. Description of Digital Computer Program System/360, AFFDL-TR-66-207, Volume II, Supplement II, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, February 1969.
- 4. W. J. Lackey, S. H. Miyawaki, <u>FORMAT Fortran Matrix Abstraction Technique</u>; Volume II, Supplement III. <u>Description of Digital Computer Program Extended</u>, AFFDL-TR-66-207, Volume II, Supplement III, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, June 1970.
- 5. L. Chahinian, S. H. Miyawaki, <u>FORMAT Fortran Matrix Abstraction</u>
 <u>Technique</u>; <u>Volume II</u>, <u>Supplement IV</u>. <u>Description of Digital Computer</u>
 <u>Program Extended</u>, AFFDL-TR-66-207, Volume II, Supplement IV,
 <u>Air Force Flight Dynamics Laboratory</u>, Wright-Patterson AFB, Ohio,
 April 1973.
- 6. L. Chahinian, FORMAT Fortran Matrix Abstraction Techniques; Volume II, Supplement V. Description of Digital Computer Program Extended, AFFDL-TR-66-207, Volume II, Supplement V, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, December 1977.
- 7. J. Pickard, FORMAT Fortran Matrix Abstraction Technique; Volume V, Engineering User and Technical Report, AFFDL-TR-66-207, Volume V, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio October 1968.
- 8. J. Pickard, FORMAT Fortran Matrix Abstraction Technique; Volume V, Supplement I. Engineering User and Technical Report Extended, AFFDL-TR-66-207, Volume V, Supplement I, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, June 1970.
- 9. J. Pickard, FORMAT Fortran Matrix Abstraction Technique; Volume V, Supplement II. Engineering User and Technical Report Extended, AFFDL-TR-66-207, Volume V, Supplement II, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, April 1973.

REFERENCES (Continued)

- 10. J. Pickard, <u>FORMAT Fortran Matrix Abstraction Technique</u>; <u>Volume V</u>, <u>Supplement III. Engineering User and Technical Report Extended</u>, <u>AFFDL-TR-66-207</u>, <u>Volume V</u>, <u>Supplement III</u>, <u>Air Force Flight Dynamics Laboratory</u>, <u>Wright-Patterson AFB</u>, <u>Ohio</u>, <u>December 1977</u>.
- 11. J. P. Cogan, Jr., R. C. Morris, and J. R. Wells, <u>FORMAT Fortran Matrix Abstraction Technique</u>; <u>Volume VI. Description of Digital Computer Program Phase I</u>, AFFDL-TR-66-207, Volume VI, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, September 1968.
- 12. R. C. Morris, FORMAT Fortran Matrix Abstraction Technique; Volume VI, Supplement I. Description of Digital Computer Program Phase I Extended, AFFDL-TR-66-207, Volume VI, Supplement I, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, June 1970.
- 13. R. C. Morris, <u>FORMAT Fortran Matrix Abstraction Technique</u>; <u>Volume VI</u>, <u>Supplement VI</u>, <u>Supplement VI</u>, <u>Supplement II</u>. <u>Description of Digital Computer Program Phase I Extended</u>, <u>AFFDL-TR-66-207</u>, <u>Volume VI</u>, <u>Supplement II</u>, <u>Air Force Flight Dynamics Laboratory</u>, <u>Wright-Patterson AFB</u>, Ohio, <u>April 1973</u>.
- 14. R. C. Morris, J. R. Wells, and P. S. Yoon, <u>FORMAT Fortran Matrix Abstraction Technique</u>; Volume VII. <u>Description of Digital Computer Program Phase III</u>, AFFDL-TR-66-207, Volume VII, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, September 1968.
- 15. J. A. Frank, <u>FORMAT Fortran Matrix Abstraction Technique</u>; <u>Volume VII</u>, <u>Supplement I. Description of Digital Computer Program Phase III Extended</u>, AFFDL-TR-66-207, Volume VII, Supplement I, Air Force Flight Dynamics Laboratory, Wright-Patterson AFB, Ohio, June 1970.
- 16. B. T. Smith, et al., Matrix Eigensystem Routines: EISPACK Guide, Springer-Verlag, New York, New York, 1974.
- 17. D. E. Knuth, The Art of Computer Programming; Volume III, Sorting and Searching, Addison and Wesley, Reading, Massachusetts, 1973.